
Instruction Manual

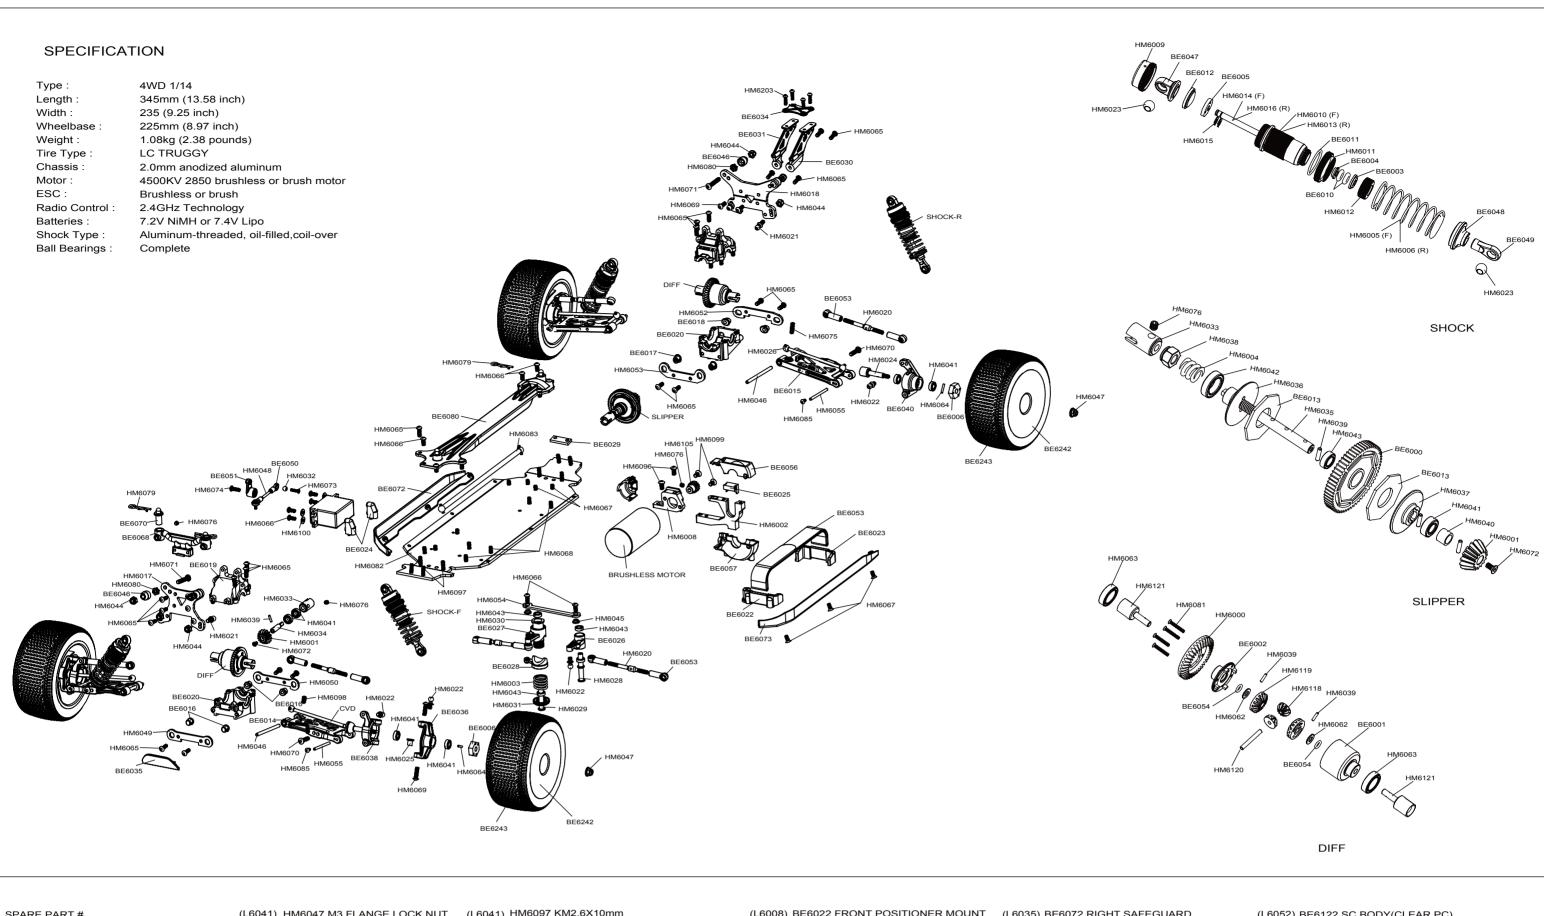

(L6041) HM6047 M3 FLANGE LOCK NUT (L6041) HM6097 KM2.6X10mm (L6008) BE6022 FRONT POSITIONER MOUNT SPARE PART # (L6035) BE6072 RIGHT SAFEGUARD (L6052) BE6122 SC BODY(CLEAR PC) (L6024) HM6048 SERVO CONNECTING LINKL6006) HM6098 SET SCREW M3x6 (L6008) BE6023 REAR POSITIONER MOUNT (L6035) BE6073 LEFT SAFEGUARD (L6052) BE6123 SC BODY(PVC) (L6011) HM6049 SUSPENSION MOUNT FF (L6041) HM6099 KM3.0X6mm (L6024) BE6024 SERVO MOUNT (L6071) BE6074 PLASTIC FRONT SHOCK TOWER(*******) BE6124 DRIFT TIRES PART NAME (L6011) HM6050 SUSPENSION MOUNT FR (L6024) HM6100 PW2.6X6X0.5 (L6012) BE6025 SLIPER BRACE (L6071) BE6075 PLASTIC REAR SHOCK TOWER (L6061) BE6125 MT TIRES SPONGE (L6014) HM6000 37T RING GEAR (L6026) HM6051 CHASSIS PLATE (******) HM6101 3*40 TURNBUCKLE (L6023) BE6026 BELLCRANK LEFT ******) BE6076 BALANCE BAR TABLET (L6021) BE6126 4 HOLE SHOCK PISTON (L6014) HM6001 15T PINION GEAR (L6075) BE6127 SPUR GEAR 60T (L6011) HM6052 SUSPENSION MOUNT RR (*******) HM6102 3*35 TURNBUCKLE (L6023) BE6027 BELLCRANK RIGHT UP *) BE6077 ANTI ROLL BAR WAVE CAP (L6027) HM6002 MOTOR MOUNT (L6011) HM6053 SUSPENSION MOUNT RF (*******) HM6103 ANTI ROLL BAR (L6023) BE6028 BELLCRANK RIGHT BELOW (L6070) BE6078 PLASTIC CHASSIS PATE (L6076) BE6128 PINION GEAR SHAFT (L6023) HM6003 STEERING SPRING ******) HM6104 SHORT RALLY DOGBONE (L6023) HM6054 STEERING PLATE (L6020) BE6029 REAR DIFF GEAR BOX SPACER (L6039) BE6079 MUD FLAP WASHER (L6076) BE6129 PINION GEAR SHAFT (L6012) HM6004 SLIPPER SPRING (L6006) HM6055 LOWER ARM SHAFT (L6032) HM6105 PINION GEAR 17T (L6064) BE6130 DT BODY(PVC) (L6020) BE6030 LEFT WING MOUNT (L6036) BE6080 SC BRACE SPACER (L6022) HM6005 FRONT SHOCK SPRING (L6032) HM6106 Pinion Gear 19T (L6062) BE6131 DT WING ****) HM6056 PIN 1.5X13.4 (L6020) BE6031 RIGHT WING MOUNT (L6070) BE6081 PLASTIC CHASSIS PATE (L6021) HM6006 REAR SHOCK SPRING ******) HM6057 DIFF GEAR 10T (******) HM6107 NUT TOOL (L6020) BE6032 FRONT BODY MOUNT (L6002) BE6082 SPONGE 75X45X25 (L6062) BE6132 DT MOUNT LEFT ******) HM6007 DIFF OUTDRIVE (L6027) HM6008 MOTOR MOUNT ADJUSTER********) HM6058 DIFF SPACER BUSH (*******) HM6108 L HEX SCREWDRIVERS 1.5 (L6062) BE6133 DT MOUNT RIGHT (L6020) BE6033 REAR BODY MOUNT (L6001) BE6083 SPONGE 75X45X30 *******) HM6059 PIN 1.2X5 *******) HM6109 L HEX SCREWDRIVERS 2.0 (L6020) BE6034 WING BUTTON (L6051) BE6084 1/12OR1/14RALLY BODY(PVC) (L6062) BE6134 DT COCKPIT LEFT (L6021) HM6009 SHOCK UPPER CAP *) HM6060 DIFF GFAF (L6012) HM6110 OIL BEARING 4X7X2.5 (L6020) BE6035 FRONT BUMPER (L6051) BE6085 RALLY WING (L6022) HM6010 FRONT SHOCK BODY (L6062) BE6136 DT WIND SCREEN (L6015) HM6061 PIN 1.2X4.7 (L6073) HM6111 SIX JAW CRAMP (L6007) BE6036 SPINDLE CARRIER L (L6040) BE6086 RALLY BUMPER (L6021) HM6011 SHOCK ADJUSTOR (L6015) HM6062 WASHER 3X6X0.5 (L6007) BE6037 SPINDLE CARRIER R (******) HM6112 OIL BEARING (L6040) BE6087 RALLY BUMPER MOUNT (L6062) BE6137 DT REAR SUPPORT (L6021) HM6012 SHOCK BOTTOM CAP *******) HM6113 REAR SHOCK TOWER(ANGLE NO) (L6007) BE6038 LEFT SPINDLE (L6040) BE6088 FRONT BODY POST (L6062) BE6138 DT HEAD LIGHT (L6042) HM6063 BEARING 8X12X3.5 (L6021) HM6013 REAR SHOCK BODY (******) HM6114 PIN 1.5X8.8 (L6040) BE6089 BUNPER WASHER (L6016) HM6064 PIN 1.5X8 (L6007) BE6039 RIGHT SPINDLE (L6062) BE6139 DT TIRE RACK (L6022) HM6014 FRONT SHOCK SHAFT (******) HM6115 PIN 2X8.5 (L6007) BE6040 LEFT REAR HUB (L6041) HM6065 TM2.6X8mm (L6004) BE6090 RALLY TIRE (L6062) BE6140 DT FRONT SUPPORT (L6021) HM6015 E-RING 2.3 (******) HM6116 SPRING CLIP (L6007) BE6041 RIGHT REAR HUB (******) BE6091 SHORT ARM FRONT (L6041) HM6066 TM2.6X6mm (L6062) BE6141 DT ROOF RACK (L6021) HM6016 REAR SHOCK SHAFT (L6080) HM6117 Pinion Gear 19T (*******) BE6092 SHORT ARM REAR (L6001) BE6042 REAR WHEEL (L6062) BE6142 DT COCKPIT MOUNT RACK (L6041) HM6067 KM2.6X6mm (L6009) HM6017 FRONT SHOCK TOWER (L6015) HM6118 10 T RING GEAR (L6041) HM6068 KM2.6X8mm (L6002) BE6043 FRONT WHEEL (L6073) BE6093 PLASTIC FRONT SHOCK BODY (L6062) BE6143 DT FRONT BUMPER CONNECT (L6009) HM6018 REAR SHOCK TOWER (L6025) BE6044 LEFT SAFEGUARD (L6041) HM6069 TM2.6X10mm (L6015) HM6119 16 T RING GEAR (L6073) BE6094 PLASTIC REAR SHOCK BODY (L6062) BE6144 DT REAR BUMPER (L6019) HM6019 TURNBUCKLE L35 (L6041) HM6070 TM3.0X12mm (L6015) HM6120 PIN 2.0X15.8 (L6025) BE6045 RIGHT SAFEGUARD (L6040) BE6095 RALLY BUMPER EVA (L6062) BE6145 DT FRONT BUMPER (L6019) HM6020 TURNBUCKLE L40 (L6009) BE6046 SHOCK POST (******) BE6096 SHORT RALLY BUMPER EVA (L6041) HM6071 TM3.0X18mm (L6015) HM6121 DIFF OUTDRIVE (L6062) BE6146 DT FRONT BUMPER SUPPORT (L6031) HM6021 4.3 BALL LONG (******) BE6097 SHORT RALLY BODY (L6041) HM6072 KM2.0X4mm (L6079) HM6122 OIL BEARING 4x8x3 (L6021) BE6047 SHOCK TOP BALL CAP (L6062) BE6147 DT REAR BUMPER CONNECT (L6031) HM6022 4.3 BALL SHORT (******) BE6098 SHORT RALLY WING (L6074) HM6123 BRUSH TURNBUCKLE L35 (L6041) HM6073 KM2.0X8mm (L6021) BE6048 SHOCK SPRING RETAINER (L6062) BE6148 DT REAR REINFOCER (L6021) HM6023 5.8 BALL (*******) BE6099 DUST COVER (L6074) HM6124 BRUSH TURNBUCKLE L40 (L6021) BE6049 SHOCK BALL END (L6040) HM6074 TM3.0X8mm (L6062) BE6149 DT LAMP COVER (L6017) HM6024 AXLE (L6005) BE6000 SPUR GEAR 60T (******) BE6100 2.6*6*0.5 (L6006) HM6075 SET SCREW M3x10 (L6024) BE6050 4.0mm CUP (L6062) BE6150 DT FRONT BUMPER CONNECT (L6007) HM6025 SWERVE BUSHING (L6012) HM6076 SET SCREW M3x3 (L6015) BE6001 DIFF HOUSING (L6024) BE6051 SERVO HOM (******) BE6101 SPONGE 69X45X25 (L6062) BE6151 DT REAR SHOCK LOW MOUNT RIGHT (L6018) HM6026 F&R DOGBONE (******) BE6102 EVA GASKET3X5.6 (******) HM6077 CM3.0X6mm (L6015) BE6002 DIFF COVER (L6008) BE6052 BATTERY STRAPS (L6062) BE6152 DT REAR SHOCK LOW MOUNT LEFT (L6038) HM6027MIDDLE DOGBONE (L6041) HM6078 TM2.0X6mm (L6021) BE6003 SHOCK SHAFT BUSHING (L6019) BE6053 BALL CAP (******) BE6103 ANTENNA TUBE (L6062) BE6153 DT SUPPORT MOUNT PLATE LEFT (L6030) HM6028 LEFT STEERING POST (*******) BE6104 3.0 BUSHINGS (L6021) BE6004 SHOCK BUSHING ******) HM6079 R BUTTON (L6015) BE6054 O-RING 3X5 (L6062) BE6154 DT SUPPORT MOUNT PLATE RIGHT (L6030) HM6029 RIGHT STEERING POST (******) BE6105 PS OIL BOX (L6041) HM6080 M3 NUT (******) BE6005 SHOCK PISTON (L6052) BE6055 1/14 SC BODY(PVC) (L6062) BE6155 DT REAR SHOCK MOUNT RACK LEFT (L6023) HM6030 STEERING POST (L6016) BE6006 WHEEL HEX (L6028) BE6056 SPUR GEAR COVER TOP (L6060) BE6106 MT BODY(PVC) (L6062) BE6156 DT REAR SHOCK MOUNT RACK RIGHT (L6041) HM6081 KB1.4X10mm (L6023) HM6031 STEERING NUT (L6002) BE6007 FRONT TIRE (L6028) BE6057 SPUR GEAR COVER BOTTOM (L6034) HM6082 LONG CHASSIS (L6061) BE6107 MT TIRE (L6062) BE6157 DT FRONT SHOCK TOWER (L6024) HM6032 4.0 BALL (L6037) HM6083 LONG MIDDLE DOGBONE (L6001) BE6008 REAR TIRE (******) BE6108 OIL BOTTLE (L6028) BE6058 GEAR COVER (L6062) BE6158 DT REAR SUPPORT MOUNT (L6012) HM6033 DRIVE CUP (L6050) BE6009 1/14 BUGGY BODY(PVC) (******) BE6059 2.5*100 CABLE TIES (L6061) BE6109 MT HUB (L6081) HM6084 MOTOR MOUNT ******) BE6242 TRUGGY HUB (L6013) HM6034 PINION GEAR SHAFT (L6021) BE6010 O-RING 2.8x6.6x1.9 (L6041) HM6085 TM2.0X4mm (L6003) BE6060 SC TIRE (L6060) BE6110 MT FRONT BUMPER MOUNT (******) BE6243 TRUGGY TYRE (L6012) HM6035 SLIPPER SHAFT ******) HM6086 PINION GEAR 16T (L6021) BE6011 O-RING 15X13X1.0 (L6003) BE6061 SC WHEEL (L6060) BE6111 MT REAR BUMPER MOUNT (L6044) BR6002 LI-PO BATTELY (L6012) HM6036 FRONT SLIPPER PAD (L6021) BE6012 DIAPHRAGM (L6004) BE6062 RALLY WHEEL (L6060) BE6112 MT FRONT BUMPER MOUNT (L6032) HM6087 PINION GEAR 18T (L6045) D115F SERVO (L6012) HM6037 REAR SLIPPER PAD (*******) HM6088 PINION GEAR 20T (L6012) BE6013 SLIPPER SHEET (L6046) TX-2 TRANSMITTE (L6039) BE6063 FRONT BUMPER (L6060) BE6113 MT REAR BUMPER MOUNT (L6012) HM6038 M4 LOCK NUT (******) HM6089 PINION GEAR 22T (L6006) BE6014 FRONT SUSPENSION ARM (L6039) BE6064 FRONT BUMPER MOUNT (L6053) BE6114 BUGGY BODY(CLEAR PC) (L6056) RX-2-A RECEIVE (L6012) HM6039 PIN 1.5X6 (******) HM6090 (L6006) BE6015 REAR SUSPENSION ARM (L6039) BE6065 REAR BUMPER (L6053) BE6115 BUGGY WING(CLEAR PC) (L6047) DT6001 ESC 35A (L6012) HM6040 SPACER BUSH (L6043) HM6091 CVD DRIBE SHAFT (L6011) BE6016 SUSPENSION ARM ADJUSTER A (L6039) BE6066 REAR BUMPER MOUNT UP (L6050) BE6116 BUGGY BODY(PVC) (L6048) MR6001 BRUSHLESS MOTOR (L6012) HM6041 BEARING 4X8X3 (L6011) BE6017 SUSPENSION ARM ADJUSTER B (L6039) BE6067 REAR BUMPER MOUNT DOWN (L6043) HM6092 CVD CYLINDER (L6050) BE6117 BUGGY WING(PVC) (******) MR6003 BRUSHLESS MOTOR (L6012) HM6042 BEARING 7X11X3 (L6011) BE6018 SUSPENSION ARM ADJUSTER C (L6043) HM6093 CVD DOFBONE (L6039) BE6068 FRONT BODY MOUNT (L6054) BE6118 RALLY BODY(CLEAR PC) (L6049) BR6001 NIMH BATTERY (L6042) HM6043 BEARING 4X7X2.5 (L6043) HM6094 CVD FIXED RING (L6010) BE6019 DIFF GEAR BOX UPPER HOUSING (L6033) BE6069 REAR BODY MOUNT (L6054) BE6119 RALLY WING(CLEAR PC) (L6077) MR6000 380 BRUSH MOTOR (L6041) HM6044 M3 LOCK NUT (L6023) HM6045 STEERING LINK BUSHING (L6043) HM6095 PIN 1.5X8.8 (L6010) BE6020 DIFF GEAR BOX BOTTOM HOSUSING (L6033) BE6070 BODY POST (L6051) BE6120 RALLY BODY(PVC) (L6078) DT6002 BRUSH ESC 25A (L6041) HM6096 TM3.0X6mm (L6029) BE6021 BRACE SPACER (L6039) BE6071 MUD FLAP (L6051) BE6121 RALLY WING(PVC) (L6006) HM6046 HINGE PIN

TACON-RC guarantees this product to be free of manufacturing faults and material defects. This product has been checked and fine tuned individually by professional staff and quality control staff. The warranty does not cover any component parts damaged by use and modification. Please visit http://www.taconrc.com for updated

This product is not a toy. It is not recommended for children under 14 years old and any minor should be accompanied by an adult when operating. This product is a precision machine that requires proper assembly and setup to avoid accidents. Failure to take caution when operating this product may result in serious injury or property damage. It is the owner's responsibility to operate this product in a safe manner. Manufacturer and its distributors are not responsible in any way for any and all bodily injury(s) and/or property damager that may occur from the use of or caused by in any way this product.

WARNINGS

- •Do not attempt to disassemble or modify any of the product components without the assistance of an experienced RC user.
- Only use the correct type of battery to operate. Using any wrong type of battery will damage the product and possibly make it dangerous to operate.
- •The motor(s) may get hot during use. Always allow 10-15 minutes between each run for the motor to cool down. This will prolong the life of your product.
- Choose an appropriate operating site consisting of flat, smooth ground, and clear open field. Do not operate near buildings, high voltage cable lines, or trees to ensure safety. RC models are prone to accidents, failures, and crashes due to a
- variety of reasons including, lack of maintenance, driver error, and radio interference. Drivers are responsible for their actions and damage or injury occurring during the operation.

- Do not operate in inclement weather, such as rain, wind, snow and darkness
- •The product is composed of precision electrical components. It is critical to keep the product away from moisture and other contaminants. Do not allow them to get wet. Electrical damage may occur that could affect safe operation.
- After each use, always allow the battery to cool down before recharging. When charging the battery pack, do not over change! If batteries get hot during charging, discontinue charging immediately and disconnect the battery from the charger. Never leave battery unattended while charging. If you are unsure of how to charge this battery, please seek the advice of experienced RC users. Never let children charge the battery without adult supervision. •Always turn on the transmitter before connecting the battery on the models. When
- turning off the model, always disconnect the battery first, and then turn off the transmitter. If the order is reversed, the model may become uncontrollable and
- If you are in doubt of your ability to operate the model, we strongly recommend that you seek assistance from experienced RC users or join your local model flying club to gain the required knowledge and skill. As the manufacturer and distributor, we assume no liability for the use of this product.
- •Before turning on your model and transmitter, please check to make sure no one else is operating under the same frequency. Frequency interference can cause your model, or other's models to crash. The guidance provided by experienced RC users will be valuable for the assembly, tuning, trimming, and actual first flight.
- Never allow batteries to run low or you might lose control of the model. •You should complete a successful pre-run check of your radio equipment and
- model prior to each run.

 Plastic is very susceptible to damage or deformation due to extreme heat and cold climate. Do not store the model near any source of heat such as over or heater. Store the model indoors,in a climate-controlled, room temperature environment.

Charge the battery pack

Disconnect he battery from the charger when the charging process completed. Do not charge the battery unattended at all time.

Lithium Polymer (LiPo) Battery Warning

- Never charge a lithium polymer battery with a charger designed for NiCd, NiMH, or any other type of battery chemistry. Use ONLY charger designed for LiPo Battery. •Do not leave LiPo battery unattended during charging.
- Do not overcharge the battery.
- Always place the battery on a heat resistant surface alone when charging. •Always put the LiPo battery inside a charging protection container while charging.
- •Do not allow LiPo cells to overheat at any time. Cells which reach greater than 140 Fahrenheit(60°C) will usually become damaged and will catch fire.
- •Do not allow LiPo cells on or near combustible materials including paper, plastic,
- carpets, vinyl, leather, and wood, inside an R/C model or full size automobile.
- •Do not over discharge LiPo; doing so will damage the battery.
- Do not expose LiPo cell to water or moisture at any time.
- Do not store battery near open flame or heater. •Do not assemble LiPo cells or pre-assembled packs together with other LiPo cells
- Always store LiPo battery in secure location away from children.
- •Always remove the LiPo battery if model is involved in any kind of crash. Carefully inspect the battery and connectors for even the smallest damage. CAUTION: cells
- Do not allow the electrolyte to get into eyes or on skin. Wash affected areas immediately if they come into contact with electrolyte. Do not alter or modify connectors or wires of a LiPo battery pack.
- Always inspect the condition of the battery before charging and operation.
- Do not short circuit the LiPo battery.
- Do not have contact with a leaky/damaged battery directly. •Do not charge battery out of recommended temperature rang (0°C-45°C)