1/24th 4WD Electric Power R/C Car

Specifications:

STYLES	LENGTH	WIDTH	HEIGTH	WEIGHT	WHEEL BASE	DRIVE SYSTEM	GROUND CLEARANCE	DIAMETER OF WHEEL	WIDTH OF WHEEL	GEAR RATIO
Monster Truck	165mm	120mm	78mm	155g		4WD Shaft Drive	17mm	42mm	25mm	
SCT	178mm	100mm	65mm	153g			9mm	33mm	12mm	1:12.6
Sport Rally	175mm	100mm	70mm	158g						
Off-Road Buggy	165mm	100mm	70mm	149g					25mm	
Off-Road Truggy	167mm	105mm	70mm	150g						

- ${\bf 1.\,Please\,open\,box\,and\,check\,to\,avoid\,missing\,parts.\,Include\,a\,car,\,transmitter\,and\,manual\,in\,the\,box.}$
- ${\bf 2.}\ {\bf Take\ out\ your\ car,\ radio\ and\ manual\ and\ take\ off\ car\ body.}$
- ${\bf 3.\ Please\ Check\ radio\ and\ receiver\ must\ be\ with\ same\ frequency,\ check\ inching\ switch\ must\ be\ in\ neutral\ ne$ position to avoid destroy servo.
- 4. Check whether shocks leaking oil or not.
- 5. Check receiver wireless is in good condition or not. Can not control steering and throttle.
- 6. Take out manual from PE bag and put the antenna into the antenna pipe. 7. Install 1.5v alkaline batteries for radio and for receiver, turn on the switch for radio and then
- receiver. Turn the steering wheel to check the steering direction, turn right, the car shall turn right, adjust ST reverse switch if the car is running opposite direction. The car shall be gone straight when the steering wheel back Neutral position, adjust ST trim if not. Pull throttle trigger and the car will go forward, and adjust TH reverse switch if not. Push throttle trigger and the car will stop and then backward, and adjust TH reverse switch if not. When the throttle trigger back neutral position, the can
- shall be at idle speed condition, adjust TH trim if not. $8.Fill\ in\ nitro\ oil\ into\ the\ tank\ and\ break\ in\ the\ engine\ before\ drive\ you\ car.$


Warning Notes:

- 1. Do not drive your model car when it is raining or thundering to keep safety.
- 2. Keep your model car in dry normal temperature condition, and keep away from water. 3. Please do not use other optional parts to install our model car if you can not make sure it can
- match your car or not. And please do not over load or use it to do breaking local law.
- 4. To make sure nobody is using same frequency as yours to avoid that loose control your car or disturb other driver. Please follow up a experienced person when you drive your car as the beginner.
- ${\bf 5.\ Please\ keep\ away\ from\ Fire\ ad\ the\ model\ car\ come\ with\ plastic\ and\ electric\ material}$ 6. Can enlarge collecting area if pull out the receiver antenna, and will enlarge radio area if pull out radio antenna.
- 7. Must turn on the switch of Radio, then turn on the switch of Receiver
- 8. Must turn off the switch of Receiver, then turn off the switch of radio and take the connector out

for the battery



- f * This product is not a simple toy. It is an authentic R/C model.
- * For better performance, some adjustment and correct assembly are necessary.
- * Use the battery properly. Incorrect battery will damage your model and/or radio system.

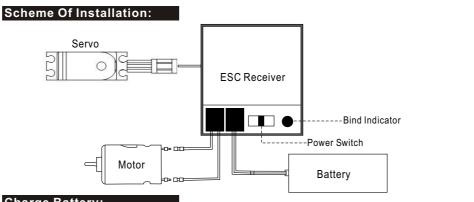

Charge Battery:

- 1. Connect charger plug with mains jack and then connect with connector of battery.
- 2. Please be care of safety while charging, please remove charger plug from the mains jack once finish charging. Will be over heat if it is too long to be charging or incorrect charging way. must stop charging if over 45 degree for the battery temperature.
- 3. Do not charge for battery at once when you take it away from your car. Please make sure battery in cool condition before recharge battery to keep battery performance running well and get a longer use life.




Maintenance after driving:


- 1. Do not forget to turn off power and remove male plug and cut off power
- 2. Cleaning your car.
- 3. Do not use Chemical cleanser to clean chassis to avoid electronic device getting damp and wire, weld and plastic part to be corrosive. Please use soft brush to cleaning you car.


Troubleshooting:


Please read the section if you have any fault trying to operate the vehicle.


Question	Reason	Solution		
Car can not running	ESC getting over heat or getting slow	Cool down and try again.		
No Performance	Power problem	Check wire loose or not		
Motor over heat	Motor drive gear too tight	Cool the motor and adjust drive gear		
No electric power	Battery without power or wire getting loose	Recharge and check wire		
No driver power	Motor wire loose, Motor damaged Do not turn on switch for your radio while the motor is running.	Check motor wire connecting Change new motor, Check TH trim in neutral position or not		
Out of control	Steering servo is not connect with ESC Steering servo is locked or no performance	Connect with ESC Check each part around the steering servo		
Steering/Reverse	Pull throttle trigger the car go backward Steering wheel right but car going left or turns left and car going right.	Check TH trim/ST Rev switch.		

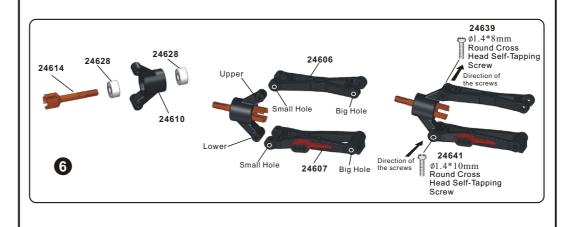


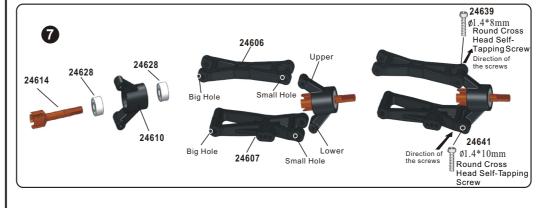

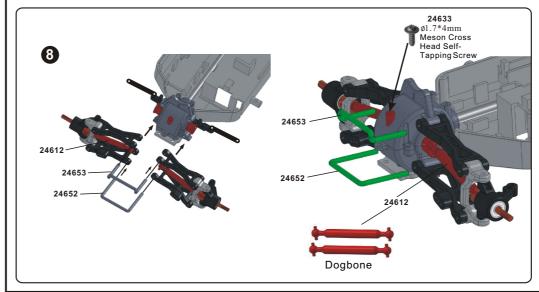

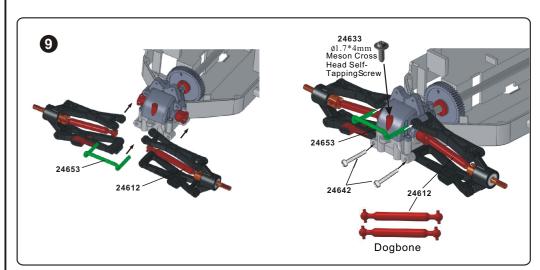

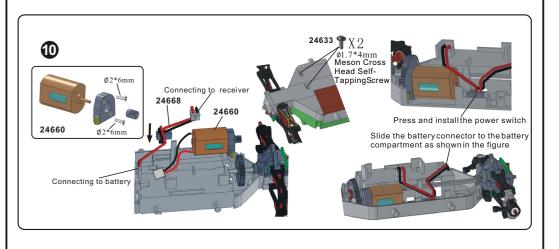

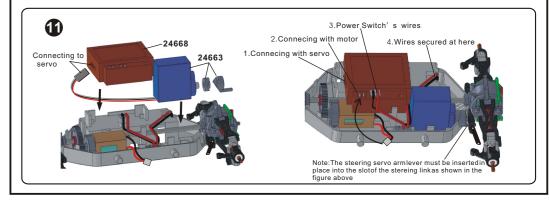



Binding Operation:

1.As shown in the picture, switch on PCB unit, using a small body clip to press and hold the bind key for 3-4 seconds, and will appear sound. 2. Switch on the remote controller. All the way down, the car can follow operations of the remote controller.

Tip:Binding operation must be performed with the remote controller which should be not defective and with all fresh batteries installde.



