
G8x 1/8 Scale Nitro Buggy

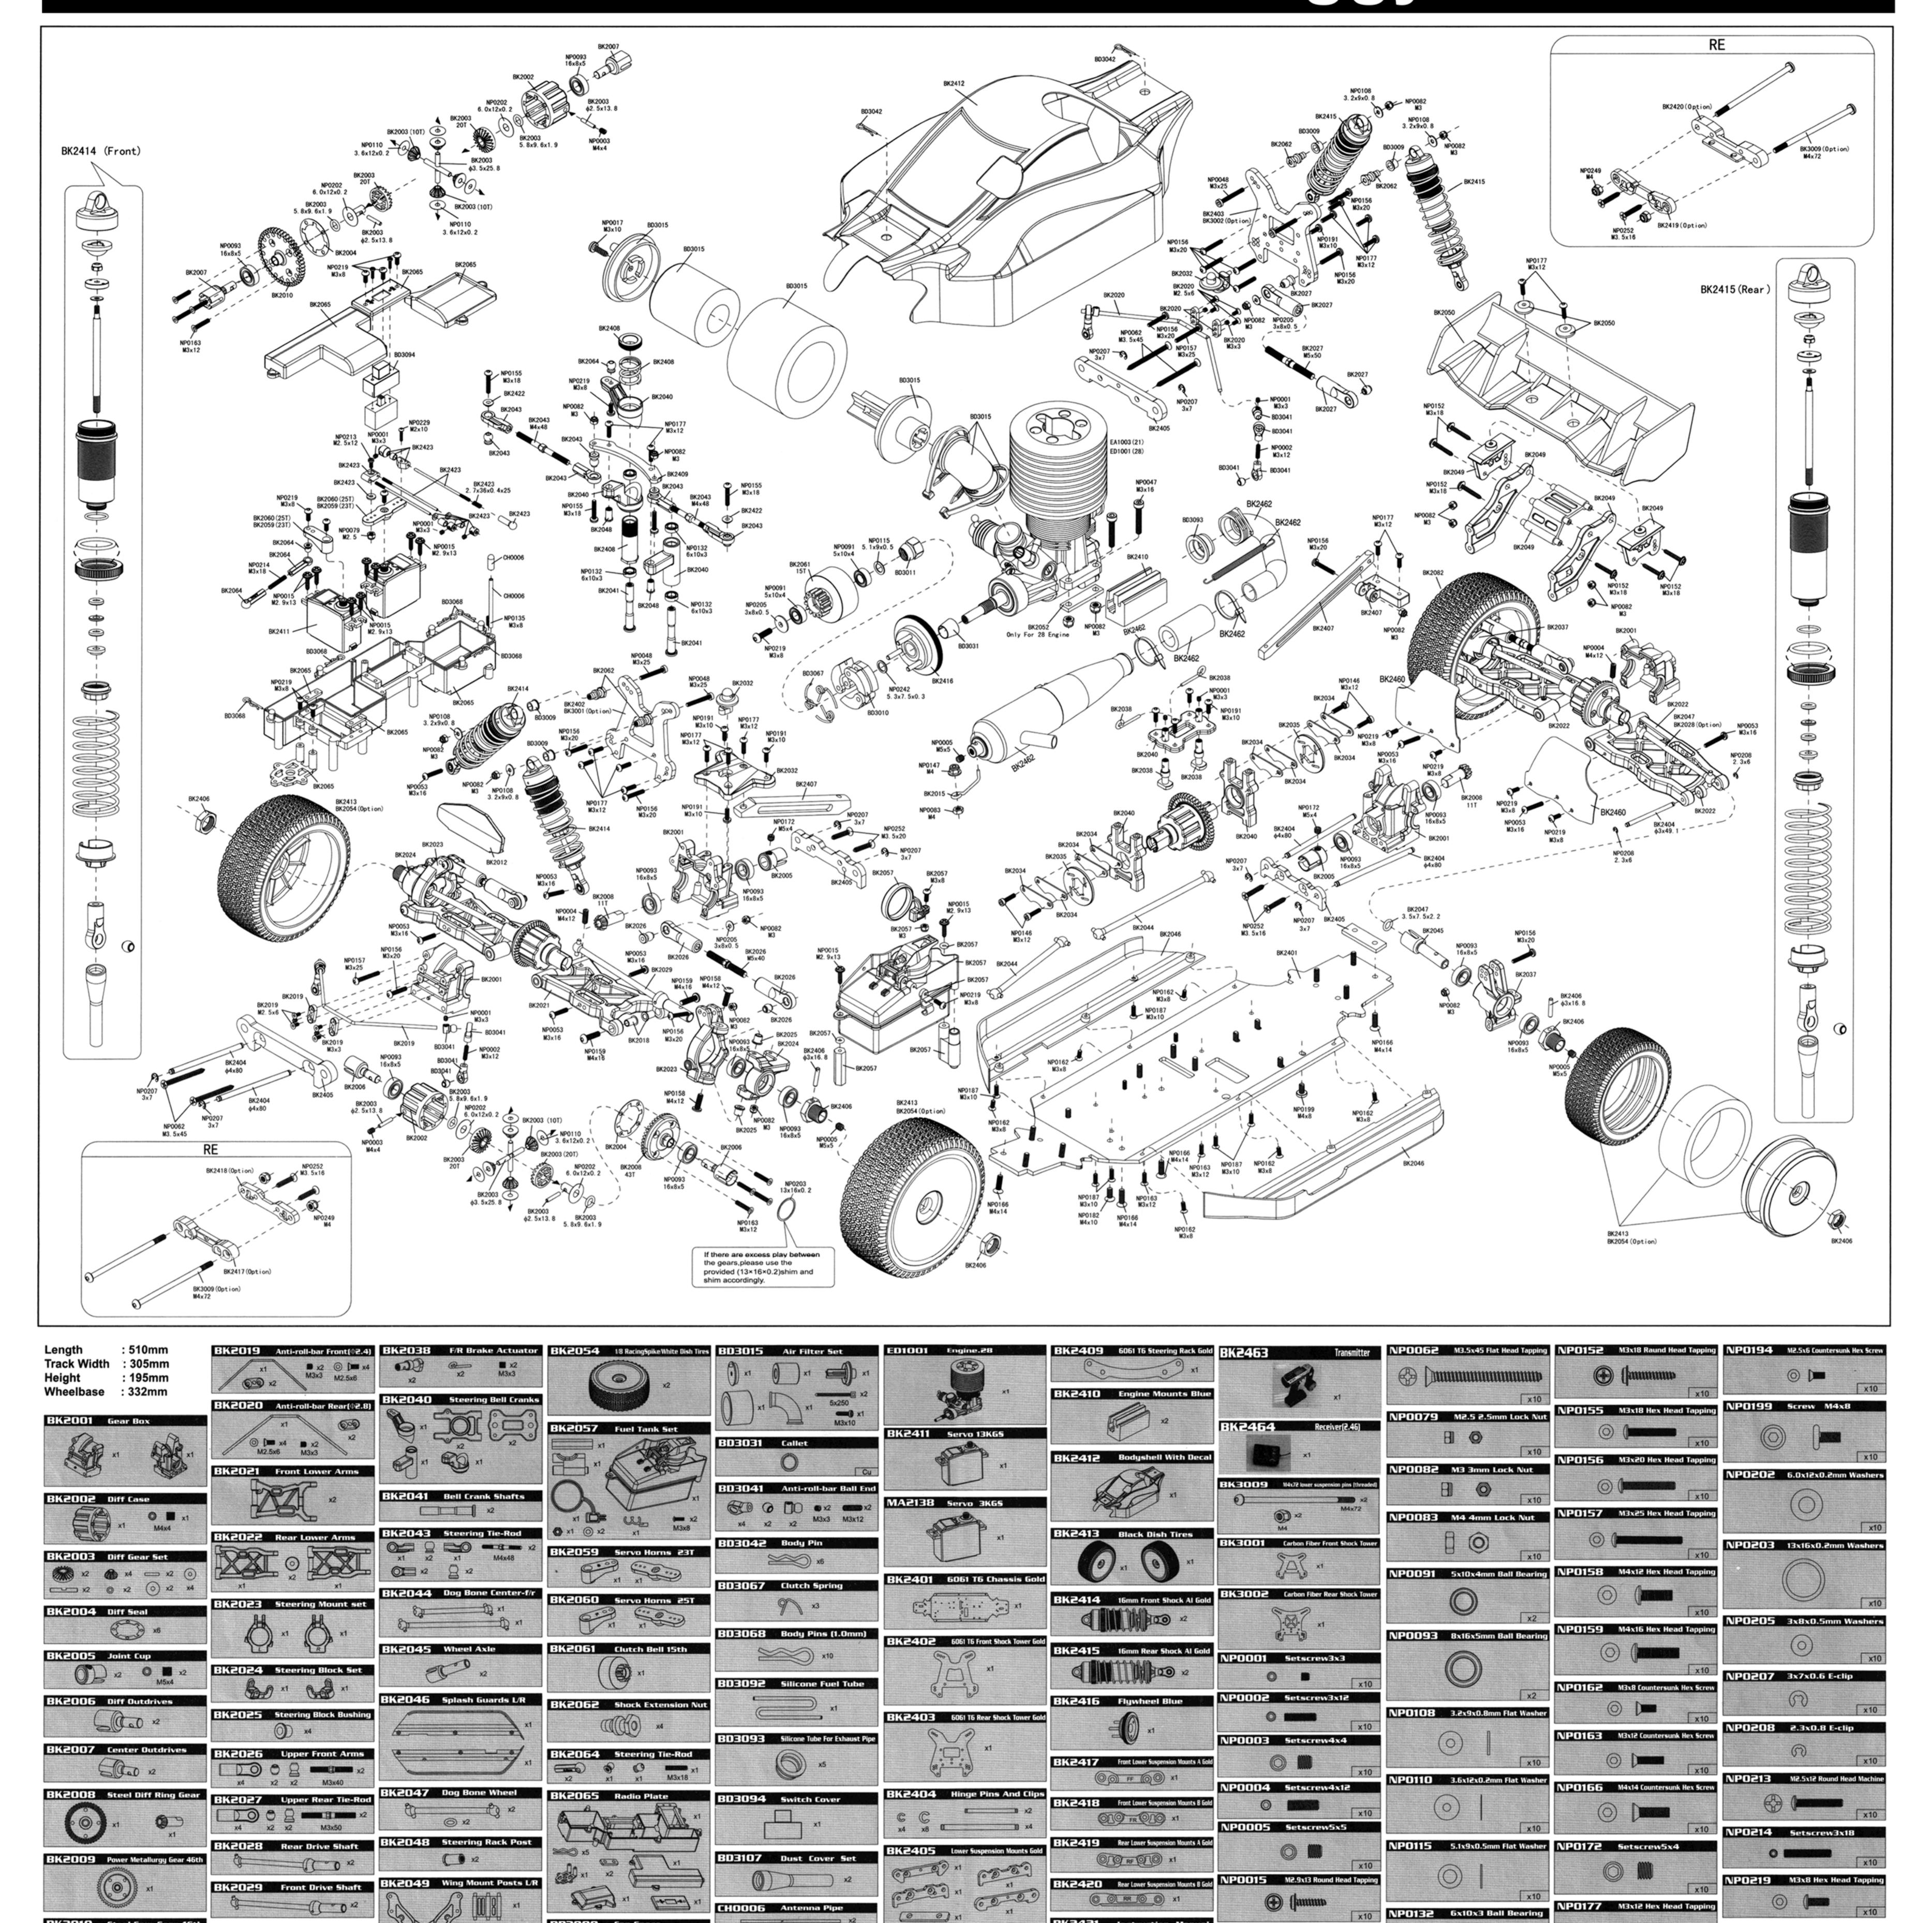

BK2421 Instruction Manual

BK2422 Senkeinsatz Blue

② x10

BK2423 Throttle And Brake Linkage

NPOO17 M3x10 Round Head Tapping

D Jum

NPOO47 M3x16 Hex Hex Hend Machine

VPOO48 M3x25 Hex Hex Hend Machine

NPO053 M3x16 Hex Head Tappin

NPO135 Setscrew3x8

0

NPO146 M3x12 Hex Hex Head Machine

NPO147 M4 4mm Lock Nut

NPO229 Setscrew 2x10

NP0242 5.3x7.5x0.3mm Washers

NPO249 M4 Lock Nut

NPO191 M3x10 Hex Head Tapping Screw NPO252 M3.5x16 Flat Head Tapping

NPO182 M4x10 Countersunk Hex Screw

NPO187 M3x10 Countersunk Hex Screw

WARNINGS

BK2032 Front Brace And Front Body Mounts

BK2034 Brake Caliper

BK2035 Break Disk

Rear Hub Carrier

The product is not intended for those under 14 years of age without proper adult supervision. The product is not a toy. It is a precision machine requiring proper assembly and setup to avoid accidents and it is the responsibility of the owner to operate this product in a safe manner as it can cause serious personal injury and damage to property due to carelessness or misuse.
Do not attempt to disassemble or modify any of the

BK2010 Steel Spur Gear 46th

BK2012 Front Bumper

BK2015 Exhaust Bolt

BK2018 Caster Block Bushing

(D) x4

product components without the assistance of an experienced RC user.

Only use the correct type of battery to operate. Using any wrong type of battery will damage the product and possibly make it dangerous to operate.

minutes between each operation for the motor to cool down. This will prolong the life of your product.

•Choose an appropriate operating site consisting of flat, smooth ground, and clear open field. Do not operate near buildings, high voltage cable lines, or trees to ensure safety operation. Operate in safe area only, away from other people. RC models are prone to accidents, failures, and crashes due to a variety of reasons including, lack of maintenance, user error, and radio interference. Users are responsible for

•The motor(s) may get hot during use. Always allow 10-15

their actions and damage or injury occurring during the operation.

•Do not operate in inclement weather, such as rain, wind, snow or darkness.

•The product is composed of precision electrical components. It is critical to keep the product away from

The product is composed of precision electrical components. It is critical to keep the product away from moisture and other contaminants. Do not allow them to get wet. Electrical damage may occur that could affect safe operation.

get wet. Electrical damage may occur that could affect safe operation.

•You should complete a successful pre-run check of your radio equipment and model prior to each run.

•After each use, always allow the battery to cool down before recharging. When charging the battery pack, do not overcharge! If batteries get hot during charging, discontinue charging immediately and disconnect the battery from the charger. Never leave battery unattended while charging. If you are unsure of how to charge this battery, please seek the advice of experienced RC users. Never let children charge

M3x18

BK2052 Engine Mounts Retainers For 28 Level Only

BK2460 Splash Guards L/R

BK2050 Wing

BD3009 Cap Space

BD3010 Clutch Shoes

Clutch Nut

HO x1

BK2462 Exhaust Set

① x2

EA1003 Engine.21

EA2001 Pull Start.21

ED2001 Pull Start.28

BK2406 17mm Hex Hub Blue

BK2407 Chassis Brace Gold

Always turn on the transmitter before connecting the battery on the model. When turning off the model, always disconnect the battery first, and then turn off the transmitter.
If the order is reversed, the model may become uncontrollable and cause serious damage.

•If you are in doubt of your ability to operate model, we strongly recommend that you seek assistance from experienced RC users or join your local modeling club to gain the required knowledge and skill. As the manufacturer and distributor, we assume no liability for the use of this product.

Before turning on your model and transmitter, please check to make sure no one else is operating under the same frequency. Frequency interference can cause your model, or other's models to crash. The guidance provided by experienced RC users will be valuable for the assembly, tuning, trimming, and actual first operating.
Never allow batteries to run low or you might lose control of

 Plastic is very susceptible to damage or deformation due to extreme heat and cold climate. Do not store the model near any source of heat such as oven or heater. Store the model indoors, in a climate-controlled, room temperature environment.