



DIRECTIONAL LIGHTS DL-03 SERIES


SPECIFICATIONS

CONSTRUCTION-DL-03-BRS: Cast brass Bullet, cast brass adjustable swivel
SOCKET: None, lamp supplies connection, 1/4" quick connect or stud terminal
LAMP LIFE: 4000 hours average rating
WIRING: Black 3 foot 18/2 zip cord
CONNECTION: FA-05 Quick Connector (not supplied) from fixture to main cable (12/2, 10/2 or 8/2 only)
MOUNTING: FA-03 9" ABS stake threaded 1/2" NPS
FINISH: Optional finishes available

CONSTRUCTION-DL-03: Cast aluminum Bullet, cast aluminum adjustable swivel
SOCKET, WIRING, CONNECTION, AND MOUNTING: See above

ORDERING INFORMATION

CATALOG NO.	DESCRIPTION	LAMP	EST. SHIP. WEIGHT
DL-03	5" aluminum Bullet	36w PAR36 (QWFL)	2.0 lbs.
DL-03-BRS	5" brass Bullet	36w PAR36 (QWFL)	3.0 lbs.
DL-03-4414	5" aluminum Bullet	18w PAR36 (MFL)	2.0 lbs.
DL-03-4414-BRS	5" brass Bullet	18w PAR36 (MFL)	3.0 lbs.
DL-03-VWFL	5" aluminum Bullet	25w PAR36 (VWFL)	2.0 lbs.
DL-03-VWFL-BRS	5" brass Bullet	25w PAR36 (VWFL)	3.0 lbs.

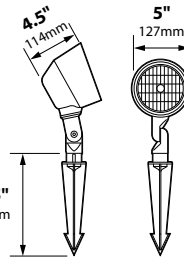

DL-03



DL-03-BRS




MOUNTING ACCESSORIES

FA-01/BRS (15" 381mm), FA-03-BRS (8.75" 222mm), FA-03-LG (8.875" 225mm), FA-05 (1.15" 29mm), FA-22-BRS (5.25" 133mm), FA-22-COP (0.875" 20mm), FA-22 (2.9" 74mm), FA-24-BRS (0.9" 23mm), FA-24 (3" 76mm), FA-24-LG-BRS (4.5" 114mm), FA-24-LG-COP (0.9" 23mm), FA-24-LG (4.5" 114mm), FA-111 (0.9" 23mm), FA-24-TREE (26" 660mm), FA-111-TREE (10"-41"), FA-22-TREE (10"-41"), FA-30 (10" 254mm), FA-31 (13" 330mm), FA-32 (15" 381mm), FA-33 (21" 533mm), FA-34 (26" 660mm).
 FA-30-4 (4" 102mm), FA-30-8 (8" 203mm), FA-YAD (2.2" 51mm).

STEM EXTENSIONS

BEAM/GLARE CONTROL ACCESSORIES

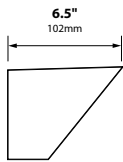


FA-113

FA-113 Extra-Long Shield, 6" (optional powder coat finishes available)

12v. fixtures: 25 foot 16/2 fixture lead wire available; add -25F to catalog number. For use with Focus CPC or hub supplied by others.

LIGHT DISTRIBUTIONS AND PHOTOMETRICS

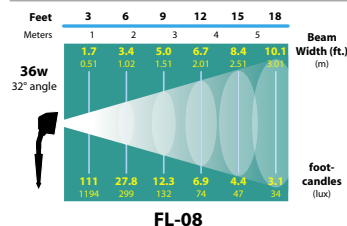

FL-08

JOB INFORMATION

Type: _____ Date: _____
 Job Name: _____
 Cat. No.: _____
 Lamp(s): _____
 Specifier: _____
 Contractor: _____
 Notes: _____

FOCUS INDUSTRIES INC.
 25301 COMMERCENTRE DRIVE
 LAKE FOREST, CA 92630
 www.focusindustries.com
 sales@focusindustries.com
 (949) 830-1350 • FAX (949) 830-3390

Powder Coat Finishes	Black Texture (Standard)	Antique Verde	Bronze Texture	Camel	White Texture	Hunter Texture	Rust	Weathered Iron	Weathered Brown	Stucco	Rubbed Verde	Chrome Powder	Terra Cotta
Ordering Code	-BLT	-ATV	-BRT	-CAM	-WTX	-HTX	-RST	-WIR	-WBR	-STU	-RBV	-CPR	-TRC




FOCUS™
INDUSTRIES

INSTALLATION INSTRUCTIONS (12V) FOR ALL 12V DIRECTIONAL FIXTURES

Inspected by

- 1) Thread Mounting device onto base of fixture. If using FA-03, press into ground & connect to main cable using FA-05 Quick Connector. (See Instructions). If using FA-02 or -04 same as above. If using FA-01, make sure the base PVC is free of dirt/debris to allow the inner tube to be adjusted as needed. A set screw is provided to set desired height. If using FA-25, you must dig a 10-12" dia. hole, 12-16" deep. Loop main cable into stake or run fixture wire out of bottom to main cable, make connection with FA-05 then back fill hole & wiring. If using FA-22, -23, -24, -24-LG canopies, secure with appropriate screws for mounting surface.
- 2) To re-lamp DL-01, 2, 2EC, 13, remove 2 Phillips head screws from lens cap. Pull MR-16 lamp out by the glass reflector, NOT center bulb. Insert/press new MR16 into socket. Carefully assemble lens cap & gasket on body aligning locator pin on cap with locator hole on body. Before tightening screws on cap, make sure gasket seats between body & cap. No gaps or holes. This will insure a weatherproof seal. DL-13, DL-20-MR16 have no gaskets. They have a slip fit & only one set screw for removal. Center lamp & align drain hole before tightening.
- 3) To re-lamp DL-03, twist retaining ring & removing, releasing the lamp. Disconnect terminal connectors from back of PAR36 bulb. Reverse procedure to install light bulb. DL-03 is supplied with light bulb installed.
- 4) To re-lamp DL-04,-H remove 2 Phillips head screws on left end plate. Rotate end plate down. Slide lens out. For S-8 lamp press and rotate counter clockwise, lamp will release. For T-3 or T-4 halogen, pull light bulb away from socket or release. To lamp you must align pins with socket for proper contact. The above fixtures are supplied with lamp installed & tested.
- 5) To re-lamp DL-05, press & rotate ALR12 lamp counter clockwise to release. It is recommended to lubricate lamp base w/petroleum jelly.
- 6) To re-lamp DL-06-NL, same as above but light bulbs will be ALR-12, ALR-18, or AR-70. Use same procedure as above. Lamp NOT installed.
- 7) To re-lamp DL-07, 8, 9, 11, 12, remove 2 Phillips head screws that retains clear lens. For S-8 lamp, press & rotate lamp counter clockwise. Lamp will release. For T-3 halogen pull light bulb away from socket to release. Above fixtures have lamp installed.
- 8) To re-lamp DL-21, loosen slotted set screw on bottom of cap. Hold body & cap with each hand. Pull & rotate to separate. Follow DL-01 re-lamping procedures above. Note ALL MR-16 fixtures are supplied in separate boxes to avoid damage in shipping. Bulbs are NOT installed.

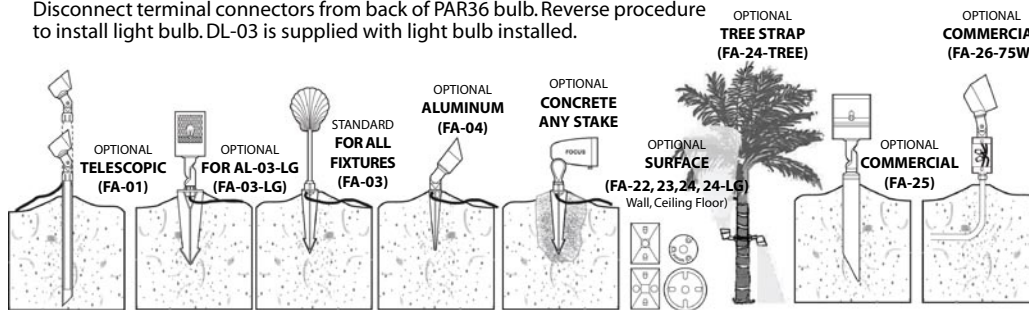

NOTE: All mounting stakes can be pressed or hammered into the ground with a standard hammer or rubber mallet. A small block of wood is recommended to give you a larger surface to pound. Always leave the top 1" section of the stake above ground to help isolate the metal from potentially corrosive soils. Fixture wire (18/2) should be buried underground to prevent detachment & have a cleaner look. For a more permanent mount, you can set the stake in concrete or use FA-25 commercial mounting pedestal.

IMPORTANT SAFETY INSTRUCTIONS TO REDUCE THE RISK OF FIRE AND INJURY TO PERSONS:

- 1) Lamp gets hot quickly; turn off/unplug/disconnect and allow to cool down before replacing the bulb.
- 2) DO NOT touch hot lens, guard or enclosure
- 3) DO NOT look into lamp when on
- 4) Keep lamp away from materials that may burn
- 5) Use only with wattage/lamp marked on fixture warning or instructions.
- 6) Use right light bulb base w/right socket
- 7) DO NOT touch the lamp at any time. Use a lint-free cloth when handling bulb as oil from skin may damage lamp and shorten lamp life.
- 8) DO NOT operate fixture with missing/damaged shield.

For Questions Call 1-888-882-1350