
RS232 CONTROL COMMANDS

Baud rate: 9600

Data bit: 8

Stop bit: 1

Check bit: None

Commands	Function
/:BellOff;	Buzzer turn off
/:BellOn;	Buzzer turn on
[x]All.	Switch input [x] to all outputs
All#.	Switch to one on one: 1->1, 2->2, 3->3...
[x1] A[x2].	Switch[x1] input to [x2] output
Save[Y]	Save the current switch status to Scene [Y], from 0 - 9
Recall[Y]	Recall the scene [Y], from 0 - 9
To turn off/ cancel the switching, can change [X1] to 0 to turn off/cancel the switch, such as 0*1!	

Note:

1. The [x1], [x2], [x3], [x4] stands for the input or output numbers, the valid range are from 1~16.
2. The characters“[”“]” are not the sending commands.
All commands can't miss the “.”“,” those characters.