


Coordinators

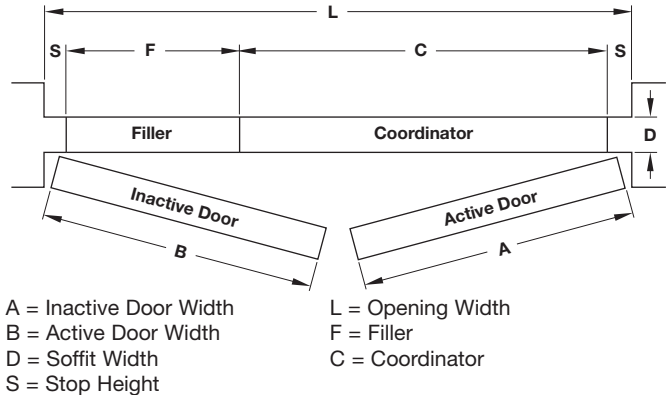

CO600 Series

- For controlling the closing sequence of a pair of doors
- Mounted to the soffit of the door frame
- Provides a smooth and tamper-proof means of controlling the closing of a pair of doors
- Equipped with an over-ride feature to prevent damage to doors and hinges
- Opening width: 36" - 120" (914 mm - 3048 mm)
- Soffit width: Minimum 1 1/4" (32 mm)
- Active door width: 18" - 62" (457 mm - 1575 mm)
- Door stop height: 5/8" (16 mm)
- UL listed
- ANSI/BHMA 156.3, Grade 1, Type 21, 21A

Material: Steel; Finish: prime coat

Coordinator Length "C"	Opening Width "L"	Active Door Width "A"	Item No.
32" (813)	up to 54" (1372)	up to 28" (711)	931.61.984
42" (1067)	up to 54" (1372)	up to 38" (965)	931.61.985
52" (1321)	up to 96" (2438)	up to 48" (1219)	931.61.986
60" (1524)	up to 112" (2845)	up to 56" (1422)	931.61.987
66" (1676)	up to 120" (3048)	up to 62" (1575)	931.31.988

Supplied With

Coordinator
2 Door strikes
Fasteners

Additional Ordering Information

Fillers have to be ordered with the coordinator to fill the gap between the coordinator and the jamb of the inactive door.
Calculation for filler width: $F = L - C - (2 \times S)$.

Mounting brackets for each soffit-mounted hardware item such as parallel arms, non-fire rated surface applied vertical strikes, door holder brackets and others have to be ordered separately.

Carry-open bars have to be ordered when the inactive door is prepared with hardware that allows the inactive door to be opened before the active door.

Note

Coordinators used in conjunction with a vertical rod exit device require special cutouts. Contact your Häfele product specialist and provide product number and exit device manufacturer's template with order.

IMPORTANT! - Door coordinators can't be adjusted to control the closing or latching cycles of the active and inactive door. It is recommended to specify door closers that conform to ANSI/BHMA Standards A156.4. Closers are field adjustable to control both the latching and closing door cycles.

Other plated finishes are available, contact your Häfele product specialist.

Mounting brackets	page 4.28
Carry-open bar	page 4.28
Filler bar	page 4.28

Dimensional data not binding. We reserve the right to alter specifications without notice.

Dimensions in mm
Inches are approximate