 


## OPERATING INSTRUCTIONS

Normal display shows inside and outside temp in 1/10 degree.



### 1. One point temp control

 
#### a. High Temp Alert “▲”

— Slide switch to temp “Alert” position, press “Alert Select” to select High Temp Alert “▲” mode.


- Press “Hi Set” to set desired High Temp Alert.
- Press “Alert On/Off” to turn on the High Temp Alert. (“Alert” flag appears on display.)
- Alarms and LCD flashes 5 sec every one min when the sensed temp is higher than the set temp.

#### b. Low Temp Alert “▼”

- Slide switch to temp “Alert” position, press “Alert Select” to select Low Temp Alert “▼” mode.
  - Press “Lo set” to set desired Low Temp Alert.
  - Press “Alert On/Off” to turn on the Low Temp Alert. (Alert flag appears on display.)
  - Alarms and LCD flashes 5 sec every one mm when the sensed temp is lower than the set temp.



## FITTING THE OUTSIDE SENSOR: LOCATE OUTSIDE SENSOR AWAY FROM DIRECT SUNLIGHT AND HEAVY SATURATION.

 


### 2. Two point temp control

#### a. Inside Temp Alert “⚡”

— Slide switch to temp “Alert” position, press “Alert Select” to select Inside Temp Alert “⚡” mode.

 - Press “Hi set” to set the desired upper temp alert value.
- Press “Lo set” to set the desired lower temp alert value.
- Press “Alert on/off” to turn, on the Inside Temp Alert. (“Alert” flag appears on display).
- Alarms and LED flashes 5 sec every one mm when the sensed temp is within the set temp.



#### b. Outside Temp Alert “◆”

— Slide switch to temp “Alert” position, press “Alert select” to select Outside Temp Alert “◆” mode.  
— Press “Hi set” to set the desired upper temp alert value.


- Press “Lo set” to set the desired lower temp alert value.
- Press “Alert on/off” to turn on the Outside Temp Alert. (“Alert” flag appears on display)
- Alarms and LED flashes 5 sec every one mm when the sensed temp is outside the set temp.

3. Slide switch to “Temp” position after setting temp alert.

### 4. Alert off

Press “Alert on/off” in temp “Alert” position, “Alert” flag disappears on display.


## BATTERY REPLACEMENT:

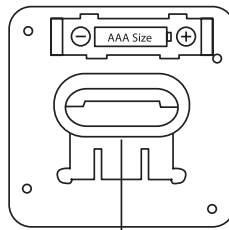

Folding stand for counter top display

- 1 Pc “AAA” or “UM4” battery
- Insert the battery as direction indicated.

Use fingernail to lift up battery cover and insert battery as to indicated direction.

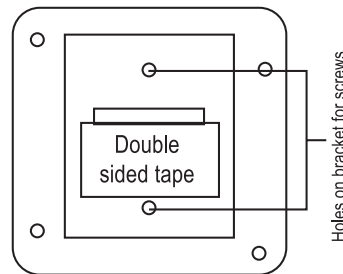

Holes on bracket for screws

## EASY MOUNTING OF BRACKET ON WALL BY:

- Double-sided tape or
- Screws

**TRACEABLE<sup>®</sup>**  
**BIG-DIGIT**  
**4-ALERT ALARM**  
**THERMOMETER**  
**°C/°F**  
**INSTRUCTIONS**