

CAUTION: Avoid any water or moisture on the sensor.

- Insert 4 "AAA" batteries. (Alkaline batteries are recommended). Install in the proper direction of polarity. (The clock will be damaged if batteries are placed incorrectly).
- Press open the battery cover. Open in the direction indicated.

BATTERY REPLACEMENT:

- The snooze is stopped when the selector is switched to "AL. OFF" position. Both the alarm signal and snooze signal "Z" will disappear.
- After 10 minutes, the snooze alarm will sound a melody again.
- When the set alarm sounds, a melody plays.
- signal "Z" will be seen on the display.
- position. Both the alarm signal "A" and snooze signal "Z" will disappear.

SNOOZE SETTING:

- Switch the selector to "AL. SET"
- Press "HOUR" to increase the hour digits and press "MIN" to increase the minutes digits
- Switch the selector to "AL. ON" position. The alarm signal "A" will appear on the display.
- When the set alarm sounds, a melody plays. It can be stopped by pressing "SEC" or by pressing the selector to "AL. OFF" position. The alarm symbol "A" will disappear.

ALARM AND SNOOZE SETTINGS:

ALARM SETTING:



Specialty Tools & Instruments

GENERAL TOOLS & INSTRUMENTS
 80 White Street
 New York, NY 10013-3567
 PHONE (212) 431-6100
 FAX (212) 431-6499
 TOLL FREE (800) 697-8665

e-mail: sales@generaltools.com
www.generaltools.com
 DJC381 User's Manual

Specifications subject to change without notice

©2010 GENERAL TOOLS & INSTRUMENTS
 NOTICE - WE ARE NOT RESPONSIBLE FOR TYPOGRAPHICAL ERRORS.
 MAN#DJC381 01/10



DJC381
 USER'S MANUAL



JUMBO DISPLAY
DIGITAL WALL CLOCK
 WITH TIME/DAY/DATE AND TEMPERATURE

- Slide the selector to "AL. SET"
 - Press "SEC", the "A" sign will appear
 - Slide the selector to "AL. ON" or "AL. ON"
 - The chime will sound every hour
 - Switch to "AL. SET" and press "SEC" again to cancel the hourly chime
 - The chime is from 7:00 a.m. to 9:00 p.m.
- CHIME SETTING:**
- Press "C/OFF" to choose the desired temperature measurement
 - Switch to either "AL. OFF", "SNZ" or "AL. ON"
 - Press "C/OFF" to choose the desired temperature measurement
- TEMPERATURE °F/°C SELECTION:**
- Choose "12/24" selector for either 12 hour or 24 hour format
 - Press "HOUR" to increase the hour digits and "MIN" to increase the minutes digits. Press "SEC" to return to 00.
 - Slide the selector to "TIME SET"
- TIME SETTING:**
- The correct day will automatically be displayed.
 - Press "YEAR" to the requested year. Press "MONTH" and "DATE" to the requested month and date respectively.
- DAY SETTING:**
- Day and Calendar (MM/DD) and Temperature °F/°C