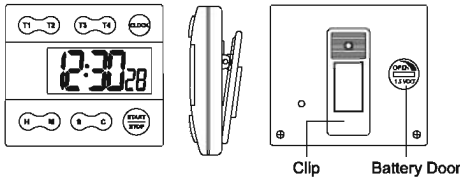


**GENERAL®****TI388**  
**USER'S MANUAL****Digital Four Channel  
Timer/Clock****PRODUCT FEATURES**

1. Jumbo display 4-channel LCD countdown / count-up timer with clock and alarm features.
2. 6-digit display shows hour, minute and second setting for 4 timers and clock.
3. Automatic count-up after timer counts down to zero.
4. Countdown timer: Maximum setting is 99 hours, 59 minutes and 59 seconds. Counts down at 1-second resolution.  
Count-up timer: Maximum count-up range is 99 hours, 59 minutes and 59 seconds. Counts up at 1-second resolution.
5. Memory recall function for countdown timer.
6. Timer alarm sounds for 1 minute when timer counts down to zero.

**CLOCK MODE**

1. Press **CLOCK** button to enter clock mode. Preset time (hours, minutes and seconds) and flashing colon (:) are displayed.
2. Press and hold **START / STOP** button for 3 seconds to toggle between 12/24-hour format.

**SETTING THE CLOCK**

1. Press and hold **CLOCK** button for 3 seconds (until a beep is heard) to enter time setting mode. **00:00** flashes on the display. The "P" indicator appears if the clock is to be set in 12-hour format.
2. Press **H** (HOUR button) to advance the "hour" setting. Press and hold for 2 seconds to advance the "hour" setting in faster increments.
3. Press **M** (MINUTE button) to advance the "minute" setting. Press and hold for 2 seconds to advance the "minute" setting in faster increments.
4. Press **S** (SECOND button) to reset the "second" digits to zero when they are within the 00-29 second range. Press **S** to reset the "second" digits to zero and advance the "minute" digits by 1 increment when the "second" digits are within the 30-59 second range.

5. When the time setting for the clock is ready, press **CLOCK** button once to return to normal clock display mode.

**NOTE** When the timer is running, the corresponding indicator (T1, T2, T3, T4) flashes on the display. All four timers can run at the same time. When the timer reaches **00:00**, the buzzer will sound and the corresponding indicator (T1, T2, T3, T4) will flash relatively slower. More than one indicator can flash at the same time.

**COUNTDOWN TIMER SETTING**

1. Press **T1, T2, T3** or **T4** to enter the desired timer channel. In timer mode, the ":" does not flash and the corresponding timer indicator "T1", "T2", "T3" or "T4" shows on the display.
2. Press **H** to advance the "hour" digits.
3. Press **M** to advance the "minute" digits.
4. Press **S** to advance the "second" digits.
5. Press **H, M** or **S** each for 2 seconds to adjust the respective clock setting of the corresponding digits in faster increments.
6. Press **C** (CLEAR button) to clear the Countdown Timer and the corresponding timer memory to **00:00**.
7. Press **H** and **C** simultaneously to clear the "hour" digits setting only.
8. Press the **M** and **C** simultaneously to clear the "minute" digits setting only.
9. Press **S** and **C** simultaneously to clear the "second" digits setting only.

**COUNTDOWN TIMER START / STOP**

1. After the timer setting is ready, press **START / STOP** button once. The timer will start to countdown at 1-second resolution.
2. Press **START / STOP** button once to stop the countdown timer.
3. Press **START / STOP** button again to resume counting.

**COUNTDOWN TIMER ALARM**

1. When the timer counts down to **00:00** in timer mode, a buzzer will sound.
2. When the timer counts down to **00:00** but is not in timer mode, a buzzer will sound and the frequency of the corresponding indicator flashes relatively slower.
3. When two timers countdown to **00:00** at the same time, the timer which shows on display will sound and the indicator for the other timer will flash relatively slower.
4. Press any button to stop the timer alarm and the count-up timer.

**COUNTDOWN MEMORY RECALL**

1. Press **START / STOP** button to recall the previous timer setting.
2. Press **START / STOP** button again to start the timer.

**STOPWATCH MODE**

1. In timer mode, clear the timer by pressing **C**.
2. Press **START / STOP** button to start the stopwatch counting up at 1-second resolution.
3. Press **START / STOP** button to stop counting up.
4. When the timer counts up to **99:59** it starts to count up again from **00:00**.



## **BATTERY REPLACEMENT**

Use a coin to open the battery cover on the backside of timer, following the direction of the arrow. Remove the exhausted battery and insert a new 1.5V G-13 size button cell battery (make sure the "+" is facing upwards) and close the battery cover.

## **CLIP ATTACHMENT**

The timer can clip onto a thin board or a shirt pocket by using the plastic clip on the backside of the timer.

## **MAGNETIC ATTACHMENT**

The timer can attach onto an iron or steel surface by using the magnet on the backside of the unit.

## **TABLE STAND**

The timer can stand on any flat surface by flipping out the metal stand bar on the backside of the unit.



## **Specialty Tools & Instruments™**

**GENERAL TOOLS & INSTRUMENTS™**  
80 White Street New York, NY 10013-3567  
PHONE (212) 431-6100 • FAX (212) 431-6499 • TOLL FREE (800) 697-8665  
e-mail: [sales@generaltools.com](mailto:sales@generaltools.com) • [www.generaltools.com](http://www.generaltools.com)

TI388 User's Manual

Specifications subject to change without notice

©2009 GENERAL TOOLS & INSTRUMENTS™

NOTICE - WE ARE NOT RESPONSIBLE FOR TYPOGRAPHICAL ERRORS.

MAN#TI388 5/09