

36" and 47" Square Table Assembly Instructions

Model: WF6405CVD, WF6405CCVD, WF6403CVD, WF6403CCVD

This Item can be found on
www.OutdoorFurniturePlus.com

Call 877-595-8543 to order.

Place the table top upside down on a clean flat surface.

Take a leg and turn it to the notches in the larger end fits over the skirting, making the outside of the leg even with the outside of the skirting.

Put a washer onto a bolt, push the bolt through one of the holes in the skirting, through the leg.

Put another washer and a nut on the other end of the bolt.

Finger tighten.

Do the other one, then tighten them up with a 7/16" wrench.

Do not over tighten!

Repeat with the other 3 legs.

Set the table upright and use.

Tools needed for assembly:

7/16" Wrench

Pliers

Hammer



Part List for Square Tables

1 – Table Top

4 – Legs 8 – 3 1/2" Bolts

8 – Nuts

16 – Washers