

Assembly Instructions for 4', 5', 6', 8', & 10' Red Cedar Cross Legged Picnic Tables

Model: WF27WCLTCB4CVD, WF27WCLTCB5CVD, WF27WCLTCB6CVD, WF27WCLTCB8CVD, WF27WCLTCB10CVD


This Item can be found on
www.OutdoorFurniturePlus.com

Call 877-595-8543 to order.

Step 1 Lay out and identify all parts.

Step 2 Take the table top and lay it upside down on a flat clean surface (we recommend using the box that the top was shipped in for a flat and clean surface).

Take the table legs and attach them to the top of the table. Be sure the braces face the inside of the table top

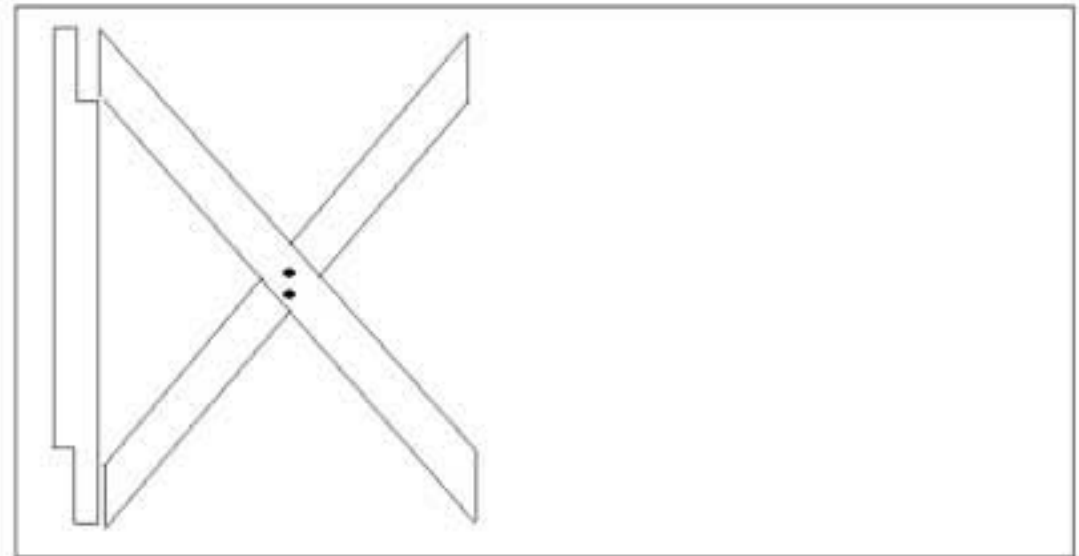

Step 3 Line up the predrilled holes and tap a hex bolt through them. If the holes aren't lining up, loosen the two nuts on the leg to allow for play. Once aligned, put on a washer and nut and tighten.

Step 4 Next, take a lag bolt and twist it into the brace and into the underside of the table top and into the leg and then do the same with the other leg.

Step 5 Set your table upright and lay the benches on top of the table upside down. Follow the same procedure as in Steps 1-4 with the smaller legs for assembling the benches.

NOTE: Braces for the 4 foot table will have different angles in order to accommodate an umbrella pole.

NOTE: Due to product variations, the parts list may be different than what you actually receive with your product.

Parts List

Table Top (1)
Bench Top (2)
Table Leg Assembly (2)
Bench Leg Assembly (4)
Braces (6)

Hardware

12 - 1/4" X 2-1/2" Lag Bolts
12 - 1/4" x 3" Hex Bolts
12 - 1/4" Hex Nuts
12 - Small Washers
24 - 1/4" X 1" Fender Washers

Required Tools

1/4" Socket Wrench
Hammer

Fully Assembled Table and Benches



5 Foot Table Shown Above