
Instruction Manual

HI 8614 • HI 8614L HI 8615 • HI 8615L

pH and ORP Transmitters

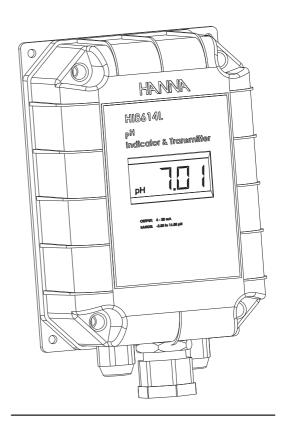



Dear Customer,

Thank you for choosing a Hanna Instruments product.

Please read this instruction manual carefully before using these instruments. This manual will provide you with the necessary information for correct use of these instruments, as well as a precise idea of their versatility. If you need additional technical information, do not hesitate to e-mail us at tech@hannainst.com or view our worldwide contact list at www.hannainst.com.

WARRANTY

HI 8614, HI 8614L, HI 8615 and HI 8615L are guaranteed for two years against defects in workmanship and materials when used for their intended purpose and maintained according to instructions. Electrodes and probes are guaranteed for six months. This warranty is limited to repair or replacement free of charge.

Damage due to accidents, misuse, tampering or lack of prescribed maintenance is not covered.

If service is required, contact the dealer from whom you purchased the instrument. If under warranty, report the model number, date of purchase, serial number and the nature of the problem. If the repair is not covered by the warranty, you will be notified of the charges incurred. If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization number from the Technical Service department and then send it with shipping costs prepaid. When shipping any instrument, make sure it is properly packed for complete protection.

TABLE OF CONTENTS

PRELIMINARY EXAMINATION	3
GENERAL DESCRIPTION	3
SPECIFICATIONS OF HI 8614 & HI 8614L	5
SPECIFICATIONS OF HI 8615 & HI 8615L	6
TERMINAL BOARD CONNECTIONS	7
pH CALIBRATION WITH AUTOMATIC TEMPERATURE COMPENSATION	
(HI 8614 FAMILY)	9
ph Calibration with fixed temperature compensation	
(HI 8614 FAMILY)	12
ORP CALIBRATION (HI 8615 FAMILY)	13
ELECTRODE CONDITIONING & MAINTENANCE	17
TEMPERATURE CORRELATION FOR pH SENSITIVE GLASS	20
INSTALLATION PROCEDURE AND EXAMPLES	22
ACCESCORIES	25

PRELIMINARY EXAMINATION

Remove the instrument from the packing material and examine it carefully to make sure that no damage has occurred during shipping. If there is any noticeable damage, notify your Dealer.

Note: Save all packing material until you are sure that the instrument functions correctly. All defective items must be returned in the original packing material together with the supplied accessories.

GENERAL DESCRIPTION

HI 8614/HI 8614L (pH) and HI 8615/HI 8615L (ORP) are 2-wire water-resistant transmitters specially designed for long distance measurement of pH or ORP in industrial applications.

HI 8614 and HI 8615 are models without LCD, and the HI 8614L and HI 8615L are models with LCD.

The LCD allows easy verification and monitoring of measured values, and provides easier calibration and maintainance.

The pH or ORP signal is transmitted in a 2-wire current loop in the range of 4 to $20\ \text{mA}$.

HI 8614 and HI 8614L, can be connected to the Hanna process instruments HI 8510, HI 8710, HI 8711 or to any recorder, computer or data monitor that accepts 4 to 20 mA input.

HI 8615 and HI 8615L, can be connected to the Hanna process instruments HI 8512, HI 8720 or to any recorder, computer or data monitor that accepts 4 to 20 mA input.

The transmitters use a universal BNC socket for quick and secure connection to any electrode with a BNC connector.

For **HI 8614** family models the temperature compensation is performed by the transmitter's ATC circuitry if the temperature probe (**HI 76608**, optional) is attached. If ATC is not required, it is possible to substitute the temperature probe with a fixed resistor.

The input is isolated from the current loop to eliminate problems related to ground loop, low insulation cables, multiple electrode connections, and a common mode voltage of up to 100 V ensures true differential readings.

The terminal board of the transmitter provides for connection of power supply, pH or ORP electrodes and temperature probe (for **HI 8614** family models only).


The unit is enclosed in a protective casing conforming to IP 65 standards.

Ordering codes:

<u>Code</u>	<u>Range</u>	<u>LCD</u>
HI 8614	0.00 to 14.00 pH	NO
HI 8614L	0.00 to 14.00 pH	YES
HI 8615	\pm 1000 mV	NO
HI 8615L	\pm 1000 mV	YES

SPECIFICATIONS OF HI 8614 & HI 8614L

Range	4 to 20 mA / 0.00 to 14.00 pH
Resolution	0.01 mA / 0.01 pH
Accuracy	
(@20°C/68°F)	$\pm 0.02~\text{mA}/\pm 0.02~\text{pH}$
Typical EMC Deviation	\pm 0.25 mA / \pm 0.2 pH
Calibration	Offset: ± 2.2 mA $/ \pm 2$ pH
	Slope: ± 0.5 mA $/$ 86 to 116%
Temperature Compen	sation
	Fixed or automatic from 0 to 100°C
	(32 to 212°F) with HI 76608 probe
Input Impedance	10 ¹² Ohm
Output	4-20 mA (isolated)
Installation Category	11
Protection	IP 65
Environment	0 to 50°C (32 to 122°F);
	RH max 95% non-condensing
Power Supply	HI 8614: 18 to 30 Vdc
	HI 8614L: 20 to 36 Vdc
Load	Max 500 Ohm
Dimensions	165 x 110 x 71 mm
	(6.5 x 4.3 x 2.8")

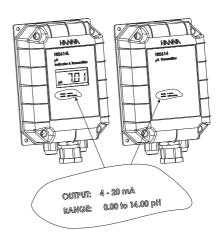


1 kg (2.2 lb.)

Weight

SPECIFICATIONS OF HI 8615 & HI 8615L

Range	4 to 20 mA / ± 1000 mV		
Resolution	0.01 mA / 1 mV		
Accuracy		_	
(@20°C/68°F)	$\pm 0.02~\text{mA}/\pm 5~\text{mV}$		
Typical EMC Deviation	\pm 0.25 mA / \pm 15 mV	_	
Calibration	Offset: ± 0.8 mA / ± 100 mV		
	Slope: \pm 0.8 mA / 90 to 110%		
Input Impedance	10 ¹² Ohm		
Output	4-20 mA (isolated)	_	
Installation Category	II	_	
Protection	IP 65	_	
Environment	0 to 50°C (32 to 122°F);	_	
	RH max 95% non-condensing		
Power Supply	HI 8615: 18 to 30 Vdc	_	
	HI 8615L: 20 to 36 Vdc		
Load	Max 500 Ohm		
Dimensions	165 x 110 x 71 mm		
	(6.5 x 4.3 x 2.8")		
Weight	1 kg (2.2 lb.)	_	

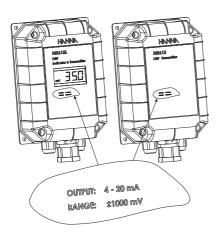


6


TERMINAL BOARD CONNECTIONS

Unscrew the 4 screws and remove the top cover.

There are three cable glands on the transmitter cover. The large cable gland with the split in the rubber is for the electrode.

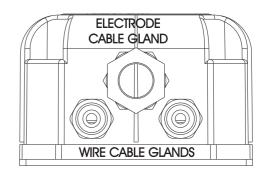

Connect the positive supply to the strip terminal "+ VE LOOP" and the negative supply to the terminal "-VE LOOP" of the transmitter terminal block.

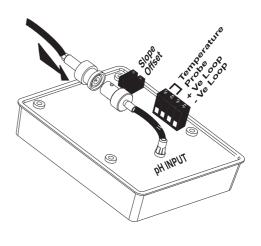


7

The wire between the transmitter and the recorder/indicator/controller should be a PVC insulated two wire with a wire diameter of at least 0.7 mm. This wire is fed through one of the smaller cable glands. The maximum distance between the power supply and the amplifier is 300 m (1000'). It is not necessary to use shielded cable. The transmitter is protected against inversion of supply voltage.

Electrode connection: connect the BNC of the cable to the BNC socket on the transmitter.

For HI 8614 family only: for automatic temperature compensation, connect the 2 terminals of the temperature probe (HI 76608, optional) to "TEMP. PROBE" terminals.

If automatic temperature compensation is not required, short the "TEMP. PROBE" terminals with a resistance according to the external temperature:

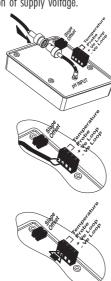

Temperature (°C)	Resistance (Ohms)
0	1634
10	1774
20	1922
30	2078
40	2242
50	2412
60	2590

A 2 kohm resistor is factory mounted for 25°C temperature compensation.

ph Calibration with automatic Temperature compensation (HI 8614 family)

INITIAL PREPARATION

- Connect the pH electrode to the BNC socket.
- Connect the temperature probe to the transmitter.



Pour small quantities of pH 7.01 and pH 4.01 solution into two clean beakers.



For accurate calibration use two beakers for each buffer solution, the first one for rinsing the electrode, the second one for calibration. In this way contamination of the buffers is minimized.

To get accurate readings, use pH 7.01 and pH 4.01 if you are going to measure acid samples or pH 7.01 and pH 10.01 for alkaline measurements.

RINSE

CALIBRATION






Note: With HI 8614L the instruments display can be used during calibration without the need to connect the ammeter and the reading is directly expressed in pH units.



PROCEDURE

 Disconnect the +ve supply cable from "+VE LOOP" terminal and connect a 20mA f.s. ammeter between the +ve cable and "+VE LOOP" terminal.

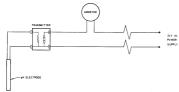

 Remove the protective cap from the electrode, rinse it with some pH 7.01 solution or immerse it in the pH 7 rinse solution, then immerse the pH electrode and temperature probe into pH7.01 calibration buffer solution; shake briefly and wait for the reading to stabilize.



Note: The tip of the electrode should be submerged approximately 4 cm (1½") into the solution. The temperature probe should be located as close to the pH electrode as possible.



 Adjust the offset trimmer until the ammeter reads 12 mA or the display shows "7.01" if the temperature of the buffer is at 25°C.

For other buffer temperatures, refer to page 12 for the appropriate mA $\!\!/$ pH reading.






Rinse the electrode with tap water or distilled water and a small amount of pH 4.01 or 10.01 buffer solution or immerse it in the pH 4 rinse solution (2nd calibration point). Dip the electrode and the temperature probe into pH 4.01 (or 10.01) calibration buffer solution, shake briefly and wait for a few minutes for reading to stabilize.



 Adjust the slope trimmer until the ammeter reads 8.58 mA for HI 8614 and HI 8614L or the display shows "4.01" at 25°C. For other buffer temperatures, refer to page 12 for the appropriate mA / pH reading.

If you are using pH 10.01 buffer solution adjust the slope trimmer until the ammeter read 15.43 mA at 25° C (77° F) or the value indicated at page 12.

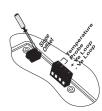

FOR HI 8614L ONLY

The Display Module is factory calibrated, so that the LCD display results are referred to the 4-20 mA loop current (e.g. LCD displays 0.00 pH when the loop current is 4.00 mA and displays 14.00 pH when the current is 20.00 mA).

Under normal application, adjustment on this module may not be necessary.

If routine check is required, the following procedures shall be performed.

- Follow the procedure at page 10 to perform calibration on the transmitter module (using a ammeter).
- Simulate a 4.00 mA loop current for the transmitter (i.e. 0.00 pH as Electrode input) and check for display reading.
- Simulate a 20.00 mA loop current for the transmitter (i.e. 14.00 pH as Electrode input) and check for display reading.

Note: When HI 8614 or HI 8614L instruments are used in conjunction with the new Hanna indicator HI 8510 or controllers HI 8710 and HI 8711, the calibration can also be performed on the indicator/controller. In this case slight calibration adjustment can be made on the indicator/controller even if the whole system calibration is advised, always starting from the transmitter.

pH CALIBRATION WITH FIXED TEMPERATURE COMPENSATION (HI 8614 family)

- Take the temperature of the buffer solutions using a Checktemp or a thermometer with a resolution of at least 1°.
- Connect the appropriate resistor to the "TEMP. PROBE" terminals (see page 8) depending on the temperature of the calibration solution.
- e resistor terminals g on the in solution.
- Follow the procedure as outlined in the calibration with automatic temperature compensation and use the thermometer reading to adjust the trimmer until the ammeter reads the value according to the following table.

HI 8614, HI 8614L

Temp	erature	pH 4.0	Buffer	pH 7.0	1 Buffer	pH 10.0	1 Buffer
°C	°F	рН	mA	рН	mA	рН	mA
0	32	4.01	9.34	7.13	12.12	10.32	14.95
5	41	4.00	9.33	7.10	12.09	10.24	14.88
10	50	4.00	9.33	7.07	12.06	10.18	14.83
15	59	4.00	9.33	7.04	12.04	10.12	14.77
20	68	4.00	9.33	7.03	12.03	10.06	14.72
25	77	4.01	9.34	7.01	12.01	10.01	14.68
30	86	4.02	9.35	7.00	12.00	9.96	14.63
35	95	4.03	9.36	6.99	11.99	9.92	14.60
40	104	4.04	9.37	6.98	11.98	9.88	14.56
45	113	4.05	9.38	6.98	11.98	9.85	14.53
50	122	4.06	9.39	6.98	11.98	9.82	14.51
55	131	4.07	9.40	6.98	11.98	9.79	14.48
60	140	4.09	9.41	6.98	11.98	9.77	14.46

ORP CALIBRATION (HI 8615 family)

INITIAL PREPARATION


Disconnect the +ve supply cable from the "+VE LOOP" terminal and connect a 20 mA f.s. ammeter between the +ve cable and the "+VE LOOP" terminal. With HI 8615L the instrument display can be used during calibration without the need to connect the ammeter. In this case the values are directly expressed in mV units.

Pour a small quantity of ${\bf HI}$ **7020** ORP solution into a beaker.

PROCEDURE


- Connect the shorting BNC connector to the ORP transmitter.
- Adjust the OFFSET ADJUSTMENT trimmer on the module for a display of 12 mA on the ammeter or 0 mV on the instrument display (HI 8615L

only). This sets the zero point for the transmitter.

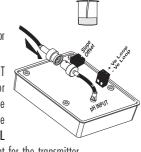



 Connect the ORP electrode to the transmitter and immerse the tip of the electrode into a beaker of HI 7020 ORP calibration solution, and check that the ammeter reading lies between 13.6 and 14.2 mA for HI 8615 or the instrument reading is between 200 and 275 mV at 25°C (HI 8615L).

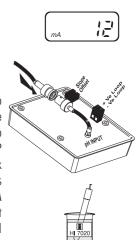

12

 If the reading lies outside this range, adjust the slope adjustment trimmer on the transmitter for a reading just within this range.




The unit is now calibrated.

A complete calibration of the transmitter module is advised periodically.


This calibration procedure requires the **HI 8427** or the **HI 931001** pH and ORP simulator to simulate the ORP electrode.

HI 8427 or **HI 931001** produce a known signal into the system so that the faults of the system can be isolated.


Connect the ORP transmitter to the simulator.

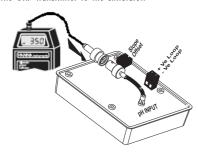


 Set the simulator to 0 mV and adjust the offset trimmer to read 12 mA on the ammeter or 0 mV on the HI 8615L display.

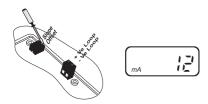

 Set the simulator to 350 mV and adjust the slope trimmer to read 14.8 mA for HI 8615 on the ammeter or 350 mV on the HI 8615L display.

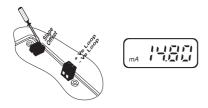

 Connect the ORP electrode to the module and immerse the tip of the electrode into the beaker of HI 7020 ORP solution and check that the ammeter reading lies between 13.6 and 14.2 mA for HI 8615, or the instrument reading is between 200 and 275mV at 25°C (HI 8615L only).

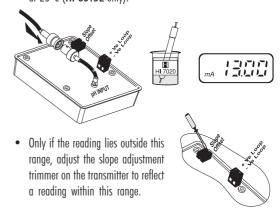

FOR HI 8615L ONLY

The **HI 8615L** are factory calibrated, and the displayed values are referenced to the 4-20 mA loop current. Under normal application, adjustment on this module may not be necessary. If routine check is required, the following procedures shall be performed.

- Follow the above procedure for HI 8615 (see page 13).
- Simulate a 12.00 mA loop current for the transmitter (i.e. 0 mV at Electrode input) and check display reading.
- Simulate a 20.00 mA loop current for the transmitter (e.g. +1000 mV for HI 8615L at Electrode input) and check display reading.


Please note:

HI 8615 or HI 8615L

-1000 mV	=	4 mA
0 mV	=	12 mA
1000 mV	=	20 mA
350 mV	=	14.8 mA
200 mV	=	13.6 mA
275 mV	=	14.2 mA
1 mV	=	12.008 mA

Note: When the HI 8615 and HI 8615L are used in conjunction with the Hanna new HI 8512 indicator or HI 8720 controller, the calibration can also be performed on the indicator/controller. In this case slight adjustment can be made on the indicator/controller even if the whole system calibration is advised, always starting from the transmitter.

ELECTRODE CONDITIONING & MAINTENANCE

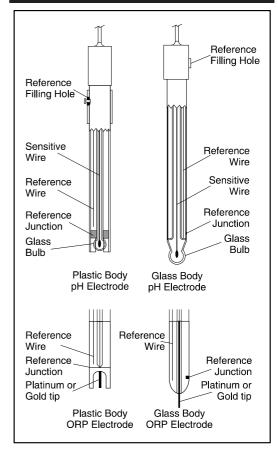

PREPARATION PROCEDURE

Remove the protective cap.

DO NOT BE ALARMED IF ANY SALT DEPOSITS ARE PRESENT.

This is normal with electrodes and they will disappear when rinsed with water.

During transport tiny bubbles of air may have formed inside the glass bulb. The electrode cannot function properly under these conditions. These bubbles can be removed by "shaking down" the electrode as you would do with a glass thermometer.

If the bulb and/or junction are dry, soak the electrode in ${\bf HI}$ 70300 storage solution for at least one hour.

For refillable electrodes

If the fill solution (electrolyte) is more than 1 cm ($\frac{1}{2}$ ") below the fill hole, add HI 7082 3.5M KCl electrolyte solution for double junction or HI 7071 3.5M KCl+AgCl electrolyte solution for single junction electrodes. For a faster response unscrew the fill hole screw during measurements.

For AmpHel® electrodes

If the electrode does not respond to pH changes, the battery is run down and the electrode should be replaced.

MEASUREMENT

Rinse the electrode tip with distilled water.

Immerse the tip (4 cm / $1\frac{1}{2}$ ") in the sample and stir gently for approx. 30 seconds.

For a faster response and to avoid cross contamination of the samples, rinse the electrode tip with a few drops of the solution to be tested, before taking measurements.

STORAGE

To minimize clogging and assuring a quick response time, the glass bulb and the junction should be kept moist and not allowed to dry out. Replace the solution in the protective cap with a few drops of HI 70300 storage solution or, in its absence, filling solution (HI 7071 for single junction or HI 7082 for double junction electrodes). Follow the Preparation Procedure above before taking measurements.

Note: NEVER STORE THE ELECTRODE IN DISTILLED WATER OR DRY.

PERIODIC MAINTENANCE

Inspect the electrode and the cable. The cable used for connection to the meter must be intact and there must be no points of broken insulation on the cable or cracks on the electrode stem or bulb. Connectors must be perfectly clean and dry. If any scratches or cracks are present on the electrode body, replace the electrode. Rinse off any salt deposits with water.

For refillable electrodes

Refill it with fresh electrolyte (HI 7071 for single junction or HI 7082 for double junction electrodes). Allow the electrode to stand upright for 1 hour.

Follow the Storage Procedure above.

CLEANING PROCEDURE

 General Soak in Hanna HI 7061 general cleaning solution for approximately 1 hour.

Removal of films, dirt or deposits on the membrane/junction:

 Protein Soak in Hanna HI 7073 protein cleaning solution for 15 minutes.

• Inorganic Soak in Hanna **HI 7074** inorganic cleaning solution for 15 minutes.

• Oil/grease Rinse with Hanna HI 7077 Oil & Fat cleaning solution.

IMPORTANT: After performing any of the cleaning procedures rinse the electrode thoroughly with distilled water, drain and refill the reference chamber with fresh electrolyte, (not necessary for GEL filled electrodes) and soak the electrode in **HI70300** storage solution for at least 1 hour before taking measurements.


TROUBLESHOOTING

Evaluate your electrode performance based on the following.

- Noise (Readings fluctuate up and down) could be due to:
 - Clogged/Dirty Junction: refer to the Cleaning Procedure above
 - Loss of shielding due to low electrolyte level (in refillable electrodes only): HI 7071 for single junction or HI 7082 for double junction electrodes.
- Dry Membrane/Junction: soak in HI 70300 storage solution for at least one hour.
- Drifting: soak the electrode tip in warm Hanna solution HI 7082 for one hour and rinse the tip with distilled water. Refill with fresh HI 7071 for single junction electrodes and HI 7082 for double junction electrodes.
- Low Slope: refer to the Cleaning Procedure above.
- No Slope: check the electrode for cracks in glass stem or bulb and replace the electrode.
- Slow Response/Excessive Drift: soak the tip in Hanna HI 7061 cleaning solution for 30 minutes, rinse thoroughly in distilled water and then follow the Cleaning Procedure above.

TEMPERATURE CORRELATION FOR pH SENSITIVE GLASS

The resistance of glass electrodes partially depends on the temperature. The lower the temperature, the higher the resistance. It takes more time for the reading to stabilize if the resistance is higher. In addition, the response time will suffer to a greater degree at temperatures below 25 °C (77 °F).

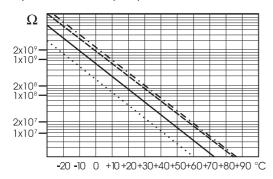

Since the resistance of the pH electrode is in the range of 50-200 Mohm, the current across the membrane is in the pico Ampere range. Large currents can disturb the calibration of the electrode for many hours.

For these reasons high humidity environments, short circuits and static discharges are detrimental for a stable pH reading.

The pH electrode's life also depends on the temperature. If constantly used at high temperatures, the electrode life is drastically reduced.

Typical Electrode Life

Ambient Temperature	I — 3 years
90 °C	Less than 4 months
120 °C	Less than 1 month

Alkaline Error


High concentrations of sodium ions interfere with readings in alkaline solutions. The pH at which the interference starts to be significant depends upon the composition of the glass. This interference is called alkaline error and causes the pH to be underestimated. Hanna's glass formulations have the indicated characteristics.

Sodium Ion Correction for the	Glass at 20-25	°C (68-77°F)
Concentration	pН	Error
0.1 Mol L ⁻¹ Na+	13.00	0.10
	13.50	0.14
	14.00	0.20
	12.50	0.10
	13.00	0.18
1.0 Mol L ⁻¹ Na ⁺	13.50	0.29
	14.00	0.40

INSTALLATION PROCEDURE AND EXAMPLES

The HI 8614 family and HI 8615 family transmitters may be wall mounted in any convenient location near the measurement point. To minimize thermal drift due to extreme temperature fluctuations during the measurement process, particularly if the measurement is conducted outdoors, it is best to protect the transmitter in an enclosed casing.

General Installation Procedure

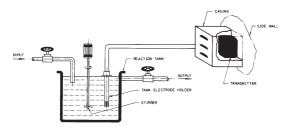


For most industrial application involving long term monitoring and control, it is also recommended to use tank electrode holders (HI 6050 or HI 6051) to protect the pH electrode and the temperature probe from contamination by the test solution.


Note: HI 8614, HI 8614L will be used with the new instruments HI 8510, HI 8710 and HI 8711

 $HI\ 8615,\ HI\ 8615L$ will be used with the new instruments $HI\ 8512$ and $HI\ 8720$


Controlling the pH / ORP with a recorder

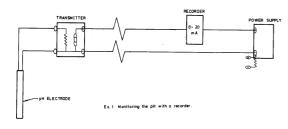


Monitoring the pH/ORP with Panel Mounting pH (HI 8510)/ORP (HI 8512) Indicator

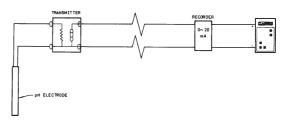

Controlling the pH/ORP with an Industrial Regulator

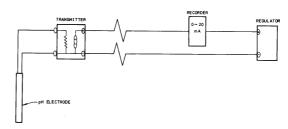


Monitoring and Controlling the pH/ORP with Panel Mounting Indicator/Regulator and Dosage Control of either Acid or Base

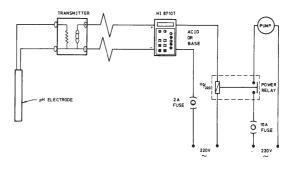

22

Monitoring and Controlling the pH with (HI 8711) Panel Mounting Indicator/Regulator with Independent Dosage Control for Acid and Base

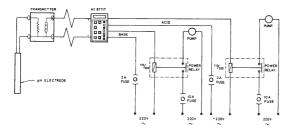

ACCESSORIES

pH CALIBRATION SOLUTIONS

HI 7004M	pH 4.01 buffer solution, 230 mL
HI 7004L	pH 4.01 buffer solution, 500 mL
HI 7006M	pH 6.86 buffer solution, 230 mL
HI 7006L	pH 6.86 buffer solution, 500 mL
HI 7007M	pH 7.01 buffer solution, 230 mL
HI 7007L	pH 7.01 buffer solution, 500 mL
HI 7009M	pH 9.18 buffer solution, 230 mL
HI 7009L	pH 9.18 buffer solution, 500 mL
HI 7010M	pH 10.01 buffer solution, 230mL
HI 7010L	pH 10.01 buffer solution, 500 mL

ORP SOLUTIONS

HI 7020M	200-275	mV test solut	ion, 230	mL	
HI 7020L	200-275	mV test solut	ion, 500	mL	
HI 7091M	Reducing	pretreatment	solution,	230	mL
HI 7091L	Reducing	pretreatment	solution,	500	mL
HI 7092M	Oxidizing	pretreatment	solution,	230	mL
HI 7092L	Oxidizing	pretreatment	solution,	500	mL

ELECTRODE MAINTENANCE SOLUTIONS

HI 70300M	Storage solution, 230 mL
HI 70300L	Storage solution, 500 mL
HI 7061M	General cleaning solution, 230 mL
HI 7061L	General cleaning solution, 500 mL
HI 7073M	Protein cleaning solution, 230mL
HI 7073L	Protein cleaning solution, 500mL
HI 7074M	Inorganic cleaning solution, 230mL
HI 7074L	Inorganic cleaning solution,500mL
HI 7077M	Oil & Fat cleaning solution, 230 mL
HI 7077L	Oil & Fat cleaning solution,500 mL

HI 7071 3.5M KCl + AgCl electrolyte solution, 4 x 50mL bottle,

for single junction electrodes


HI 7072 1M KNO $_3$ electrolyte solution, 4 x 50 mL bottle HI 7082 3.5M KCl electrolyte solution, 4 x 50 mL bottle, for

double junction electrodes


pH ELECTRODES

HI 1090T

Screwcap PG13.5 connector, double junction, glass body

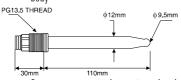


HI 1110S HI 1130B/3 Screw connector, single junction, glass body BNC connector, 3 m (9.9') cable, single junction, glass

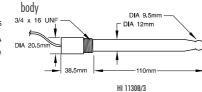

HI 1110S HI 1110T

7 25 mm mm

 $\label{eq:connector} \mbox{Screwcap PG13.5 connector, double junction, glass} \\ \mbox{body}$

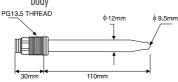

HI 1114S HI 1134B/3 Screw connector, double junction plastic body BNC connector, 3 m (9.9') cable, double junction plastic body




DIA 20.5mm DIA 12mm DIA 12mm HI 11348/3


HI 1115S HI 1135B/3

Screw connector, single junction, glass body BNC connector, 3 m (9.9') cable, single junction, glass body




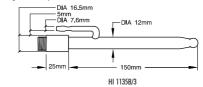


HI 1210T Screwcap PG13.5 connector, double junction, plastic body

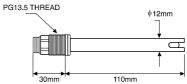

HI 1910B BNC connector, 1 m (3.3') cable, double junction, plastic body, built-in amplifier

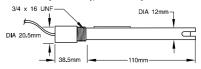


HI 1911B BNC connector, 1 m (3.3') cable, double junction, plastic body, built-in amplifier

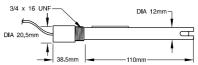


HI 1912B

BNC connector, 1 m (3.3') cable, double junction, plastic body, built-in amplifier


HI 1912B/5 BNC connector, 5 m (16.5') cable, double junction, plastic body, built-in amplifier

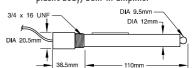

HI 2114B/5 BNC connector, 5 m (16.5') cable, double junction, plastic body

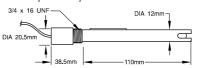


HI 2910B/5 BNC connector, 5 m (16.5') cable, double junction, plastic body, built-in amplifier

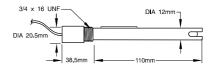

ORP ELECTRODES


HI 2930B/5

BNC connector, 5 m (16.5') cable, Pt, plastic body, built-in amplifier

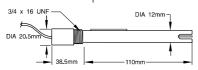


HI 3110S HI 3130B/3 Screw-type connector, Pt, glass body

BNC connector, 3 m (9.9') cable, Pt, glass body

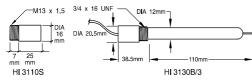

HI 3110T


Screwcap PG13.5 connector, Pt, glass body

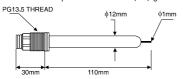

HI 3115S HI 3135B/3


Screw-type connector, side-arm, Pt, glass body BNC connector, $3 \, \text{m} \, (9.9')$ cable, side-arm, Pt, glass body



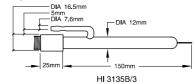

HI 3210T


Screwcap PG13.5 connector, Pt, plastic body

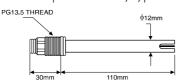

HI 3410S HI 3430B/3


Screw connector, Pt, plastic body

BNC connector, 3 m (9.9') cable, Pt, plastic body

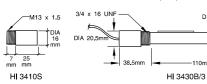


HI 3932B/5

BNC connector, 5 m (16.5') cable, Pt, plastic body, built-in amplifier

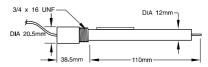


HI 4110S HI 4130B/3 Screw-type connector, Au, glass body BNC connector, 3 m (9.9') cable, Au, glass body

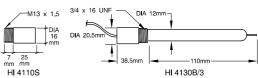


HI 4932B/5

BNC connector, 5 m (16.5') cable, Au, plastic body, built-in amplifier

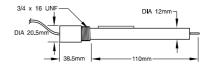

EXTENSION CABLES FOR SCREW-TYPE ELECTRODES ONLY (SCREW TO BNC CONNECTOR)

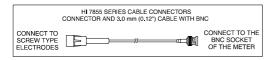

HI 7855/1 Extension cable 1 m (3.3') long
HI 7855/3 Extension cable 3 m (9.9') long
HI 7855/5 Extension cable 5 m (16.5') long
HI 7855/10 Extension cable 10 m (33') long
HI 7855/15 Extension cable 15 m (49.5') long

OTHER ACCESSORIES

BL PUMPS Dosing pumps with flow rate from 1.5 to 20 lph
HI 98501 Pocket-size, thermometer with penetration probe

and 0.1°C resolution (range -50.0 to 150.0°C)

HI 6050 & HI 6051 Submersible electrode holders

HI 6054 & HI 6057 Electrode holders for in-line applications

HI 7871 & HI 7873 Level controllers

HI 8427 pH / ORP electrode simulator

HI 931001 pH / ORP electrode simulator with LCD

RECOMMENDATIONS FOR USERS

Before using these products, make sure that they are entirely suitable for the environment in which they are used.

Operation of these instruments in residential areas could cause unacceptable interferences to radio and TV equipment, requiring the operator to follow all necessary steps to correct interferences.

Any variation introduced by the user to the supplied equipment may degrade the instruments' EMC performance.

To avoid damage or burns, do not perform any measurement in microwave ovens.

All rights are reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

Hanna Instruments reserves the right to modify the design, construction and appearance of its products without advance notice.



Hanna Instruments Inc.

Highland Industrial Park 584 Park East Drive Woonsocket, RI 02895 USA

Technical Support for Customers

Tel. (800) 426 6287 Fax (401) 765 7575 E-mail tech@hannainst.com www.hannainst.com

L	Local Sales and Customer Service Office									