



Apply TAC GEL then wipe tip of tube flat against the surface of the electrode.



Spread TAC GEL evenly with index finger or other appropriate applicator, such as a tongue depressor.

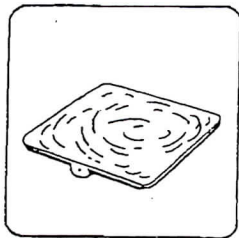

Allow one or two minutes for electrodes to thoroughly dry before applying electrode to skin.

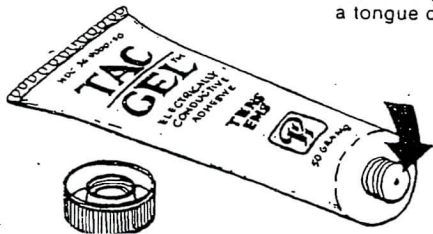

**PHARMACEUTICAL
INNOVATIONS, INC.**

NEWARK, NEW JERSEY 07114

WORLDWIDE PATENTS PENDING