Assembly Directions for Counter and Bar Chairs

#PECC2131, #PEBC2135, #PZCC2131, #PZBC2135

Cozi-Back Counter Chair

Comfo-Back Bar Chair

PACKAGE CONTENTS	
1	Back
1	Seat
2	Arms with Legs
1	Footrest
1	Hardware Package

HARDWARE PACKAGE	
4	¼" x 3" Allen Head Bolts
2	¼" x 3¼" Allen Head Bolts
4	¼" x 3½" Allen Head Bolts
2	¼" x 2½" Allen Head Bolts
12	¼" Flange Nuts
4	Acorn Nuts
1	Allen Wrench

TOOLS NEEDED:
Hammer
7/16" Wrench
Allen Wrench
(Included)



Use to measure bolts

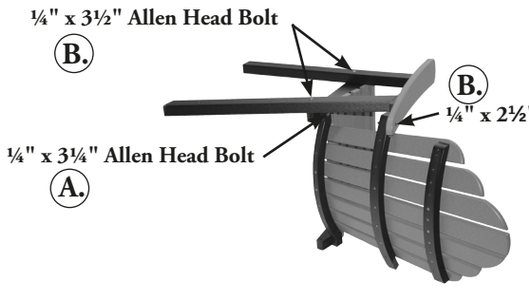

STEP #1 -

A. Attach the seat to the back using 1- ¼" x 3¼" Allen Head Bolt and Flange Nuts.

B. Attach the arm assembly to the Seat and Back using 2- ¼" x 3½" and 1- ¼" x 2½" Allen Head Bolts and Flange Nuts.

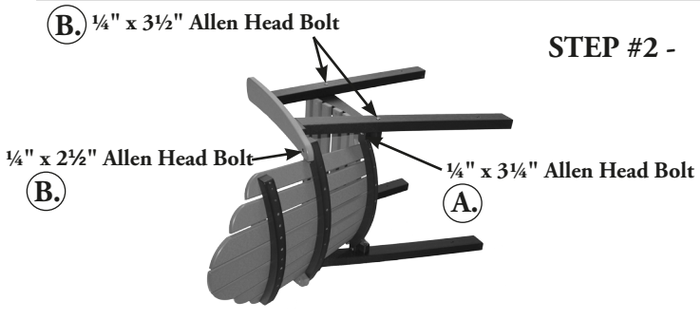

STEP #2 - Turn the chair on other side and repeat Step #1.

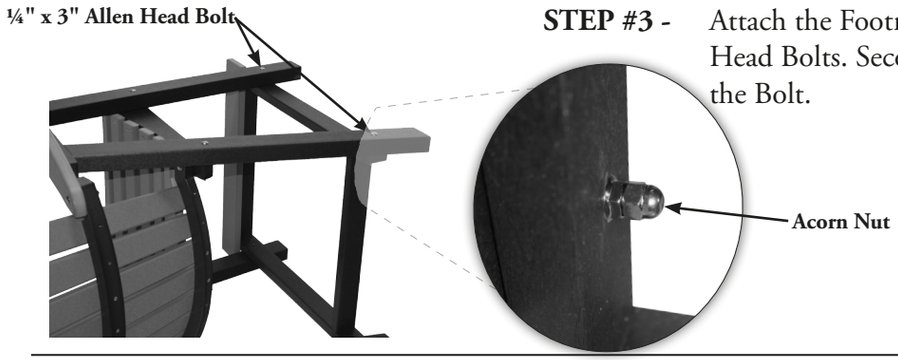

STEP #3 - Attach the Footrest to the Legs using 1/4" x 3" Allen Head Bolts. Second, place Acorn Nut on the end of the Bolt.

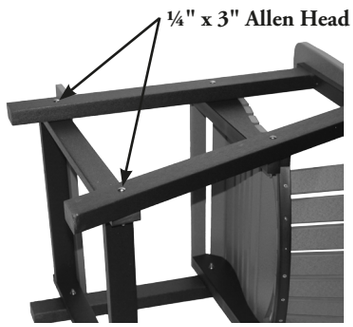

STEP #4 - Turn the chair on other side and repeat Step #3.

STEP #5 - Set the chair upright. Your chair is now complete!