



Intelligent Design™

Model: NCB46

This Item can be found on
www.OutdoorFurniturePlus.com

Call 877-595-8543 to order.

Step 1


Attach the back leg, seat and back together by using
(2) 2½" chair bolts.

Step 2

Attach the footrest assembly using (4) 1¾" chair bolts.

- ___(1) Chair
- ___(1) Footrest
- ___(1) Hardware pack

TOOLS NEEDED

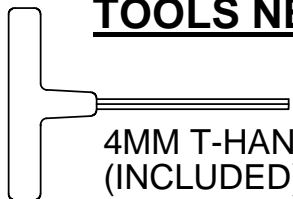


4MM T-HANDLE HEX KEY
(INCLUDED)


Qty.	Description
4	A - 1/4-20 X 1-3/4 WAFER SHCS



2	B - 1/4-20 X 2-1/2 WAFER SHCS
---	-------------------------------



Footrest Assembly

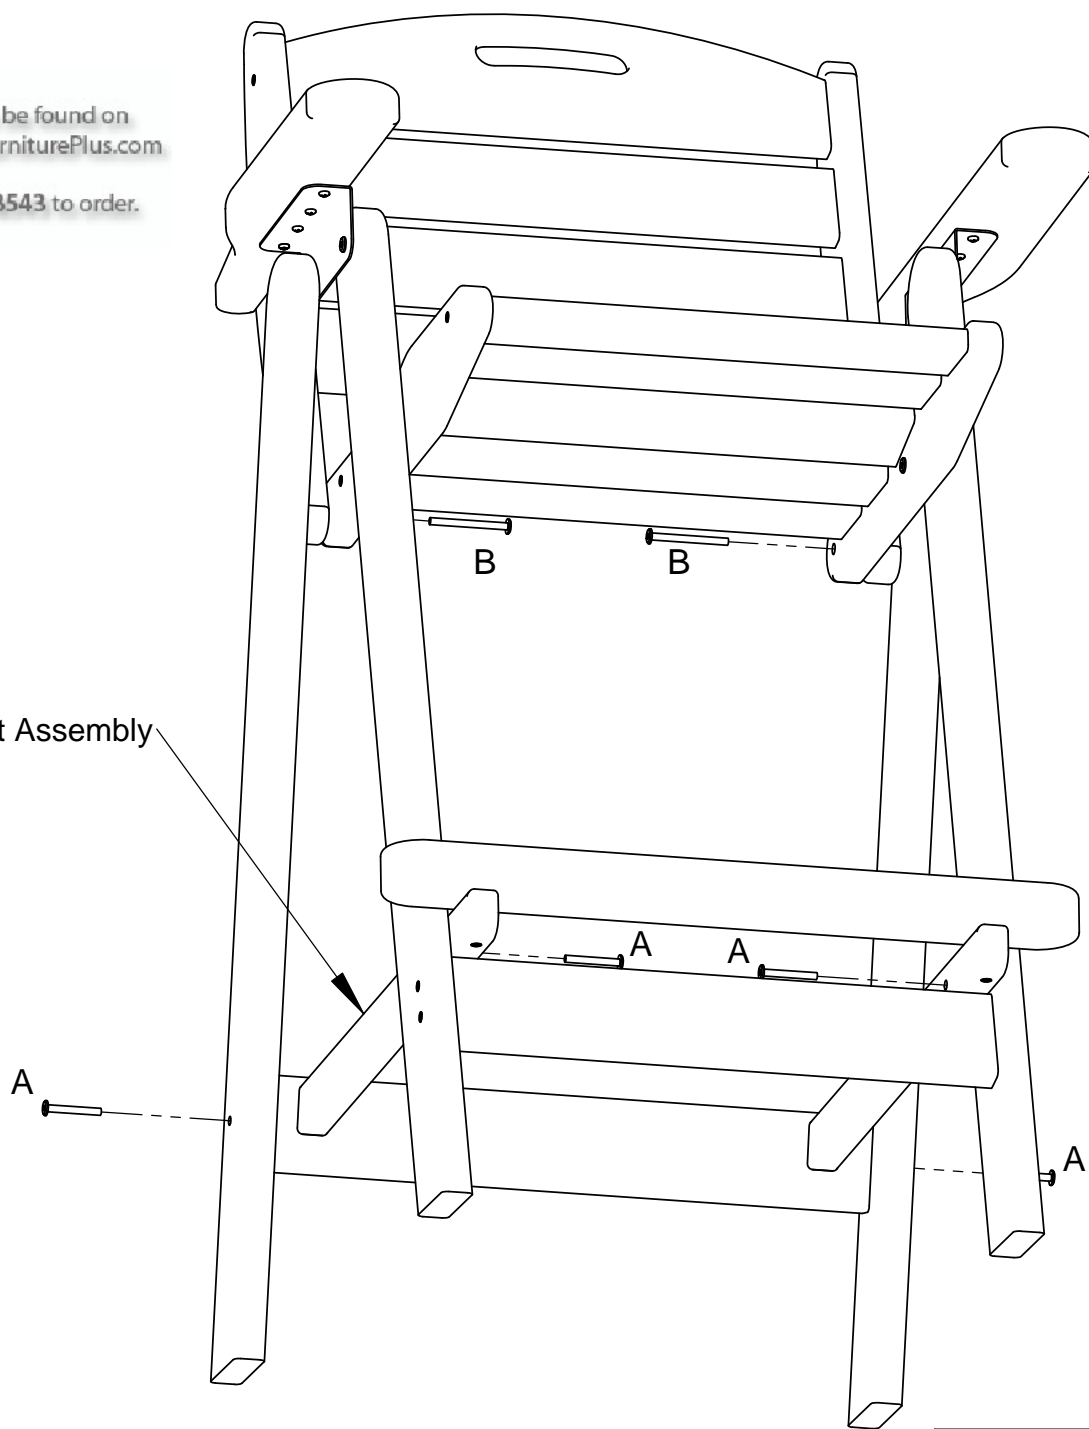



Intelligent Design™


Model:

NCT44, NCCT44,
NCRT44, NCBT44

- (1) Table top
- (4) Leg
- (2) Foot
- (2) Brace
- (1) Hardware pack


Step 1

Attach feet to legs using (4) 3¼" Chair bolts.

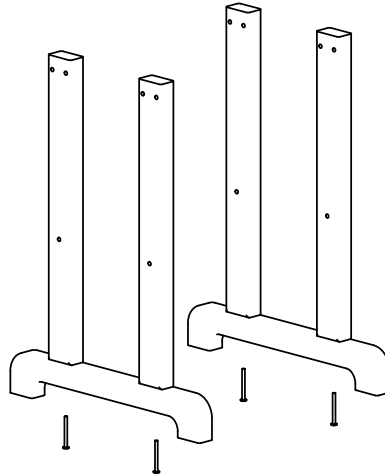


Step 2

Lay table top on flat surface.
Attach the leg assemblies to the table frame using
(8) .27x2½" screw *Do not tighten until last step

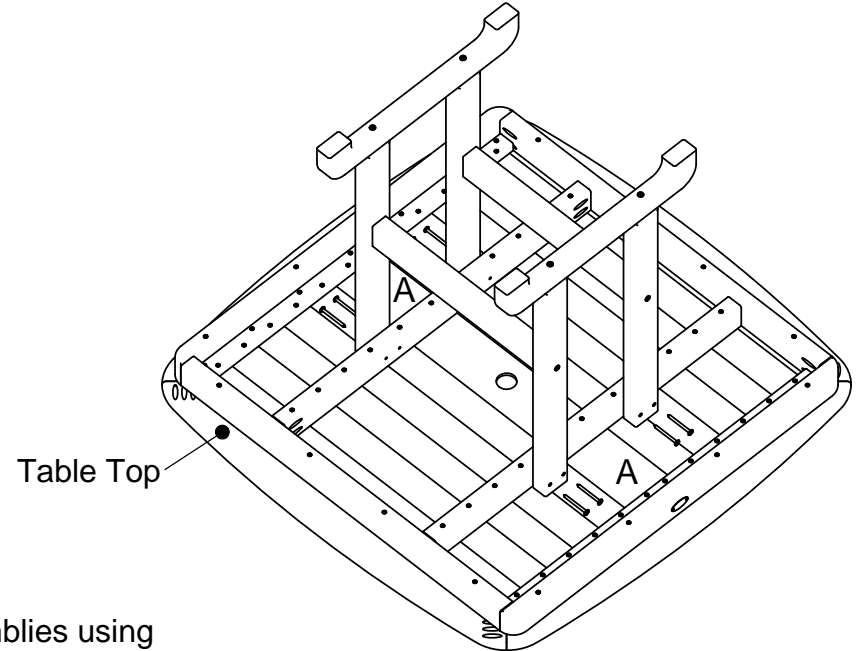

Step 3


Attach the leg braces to the leg assemblies using
(4) .27x3" screw

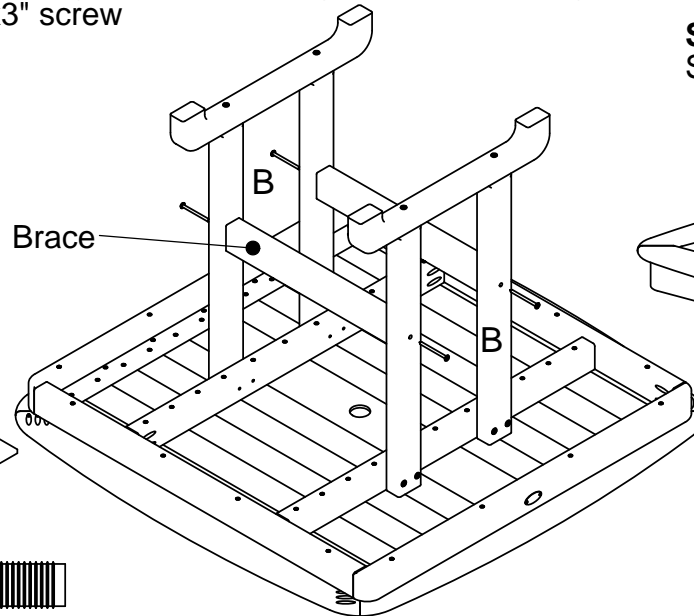

Step 4

Set table upright and tighten all bolts.

Removable table plug
included in table.

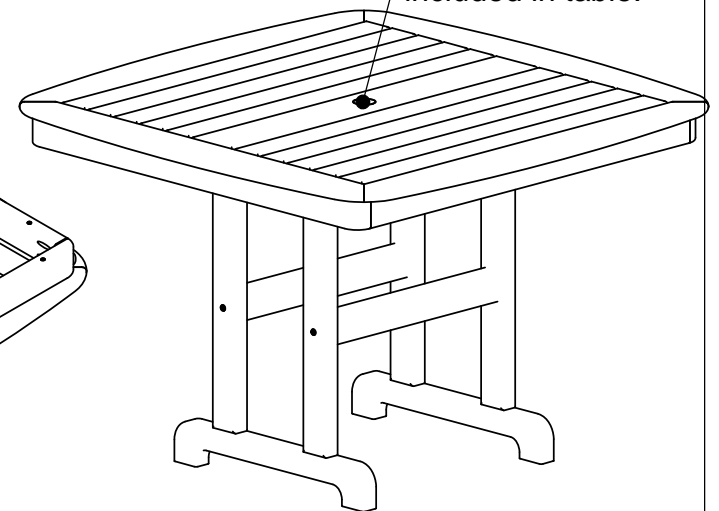

TOOLS NEEDED



4mm HEX KEY: INCLUDED

Qty.	Description
8	A - .27 X 2-1/2 SOCKET WAFER A
4	B - .27 X 3 SOCKET WAFER A
4	C - 1/4-20 X 3-1/4 WAFER SHCS

