


Models:
CDD100, CDD101, CDD102

Features


1. No assembly required
2. Extra screw plugs included

This Item can be found on
www.OutdoorFurniturePlus.com


Call 877-595-8543 to order.

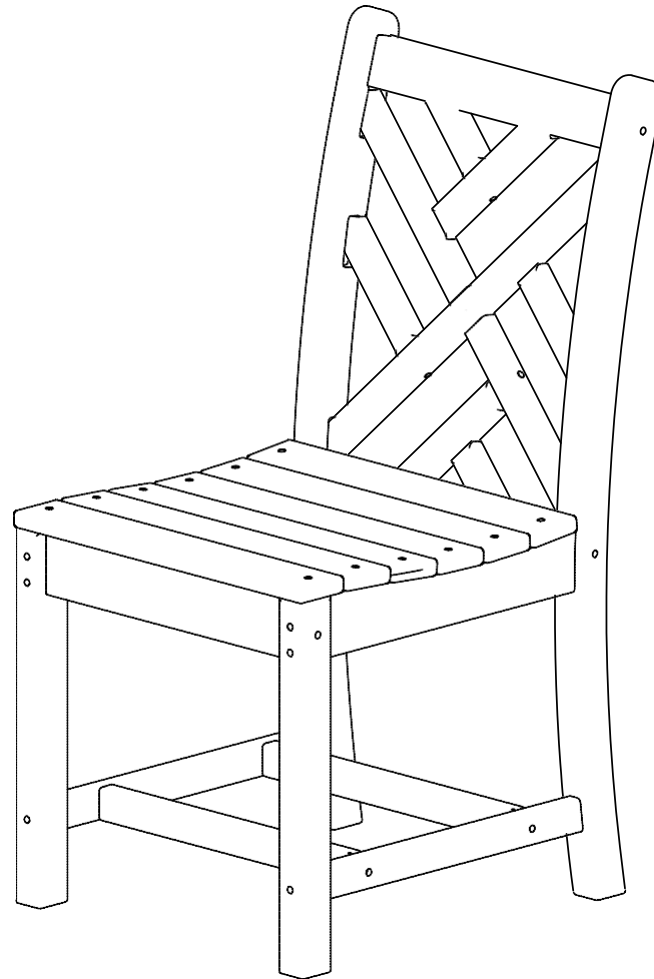

CDD100

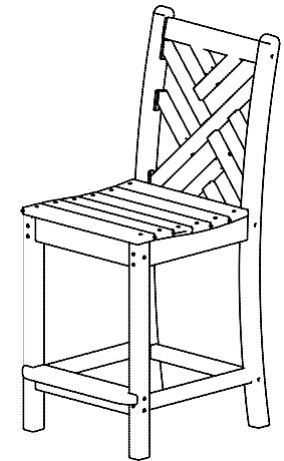

CDD101

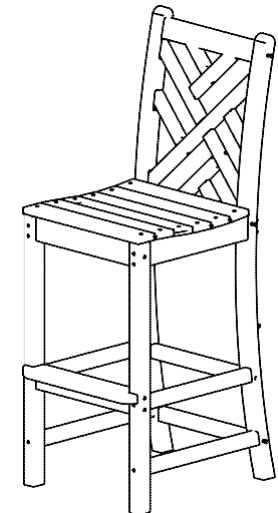

CDD102

QTY	DESCRIPTION
-----	-------------

1



HDWPK-#8 SCREW PLUGS, 4X (EXTRAS)

Model:
CDD200, CDD201, CDD202

Step 1

Attach back of arm by threading the attached dowel screw into the pilot hole until the arm is snug against the back leg.

ROTATE
CLOCKWISE

PILOT HOLE

ROTATE
CLOCKWISE


Step 2

Attach (4) 1-3/4 bolts thru the seat frame into the insert nuts on the arm supports


INSERT
NUTS

A

CDD200

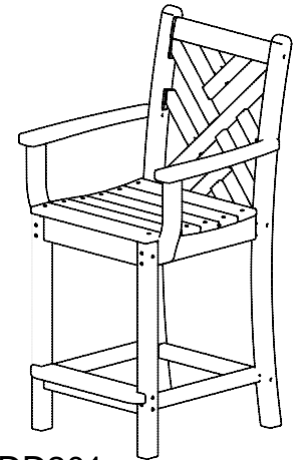

CDD201

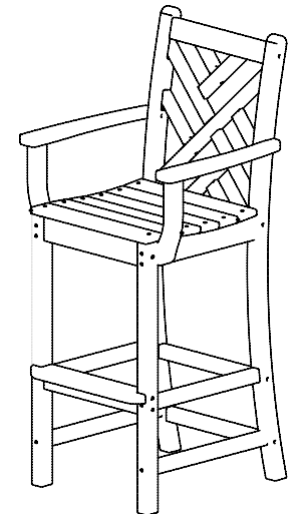


CDD202

- (1) CHAIR
- (2) ARM ASMB (RH/LH)
- (1) HARDWARE PACK

TOOLS NEEDED



Qty.	Description
4	A -1/4-20 X 1-3/4 WAFER SHCS
1	HDWPK-#8 SCREW PLUGS, 4X (EXTRAS)





Intelligent Design™

Model: NCCT3772, NCT3772, NCRT3772, NCBT3772

- (1) Table top
- (8) Leg
- (4) Foot
- (4) Brace
- (1) Hardware pack


Step 2

Lay the table frame on a flat surface. Attach the leg assemblies to the frame using (16) .27x2½" screws - Do not tighten yet.


Step 3

Attach braces to the leg assemblies using (8) .27x3" screws

TOOLS NEEDED

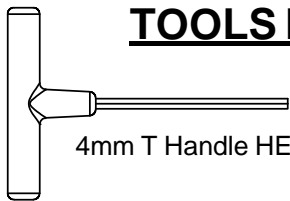

4mm T Handle HEX KEY: INCLUDED

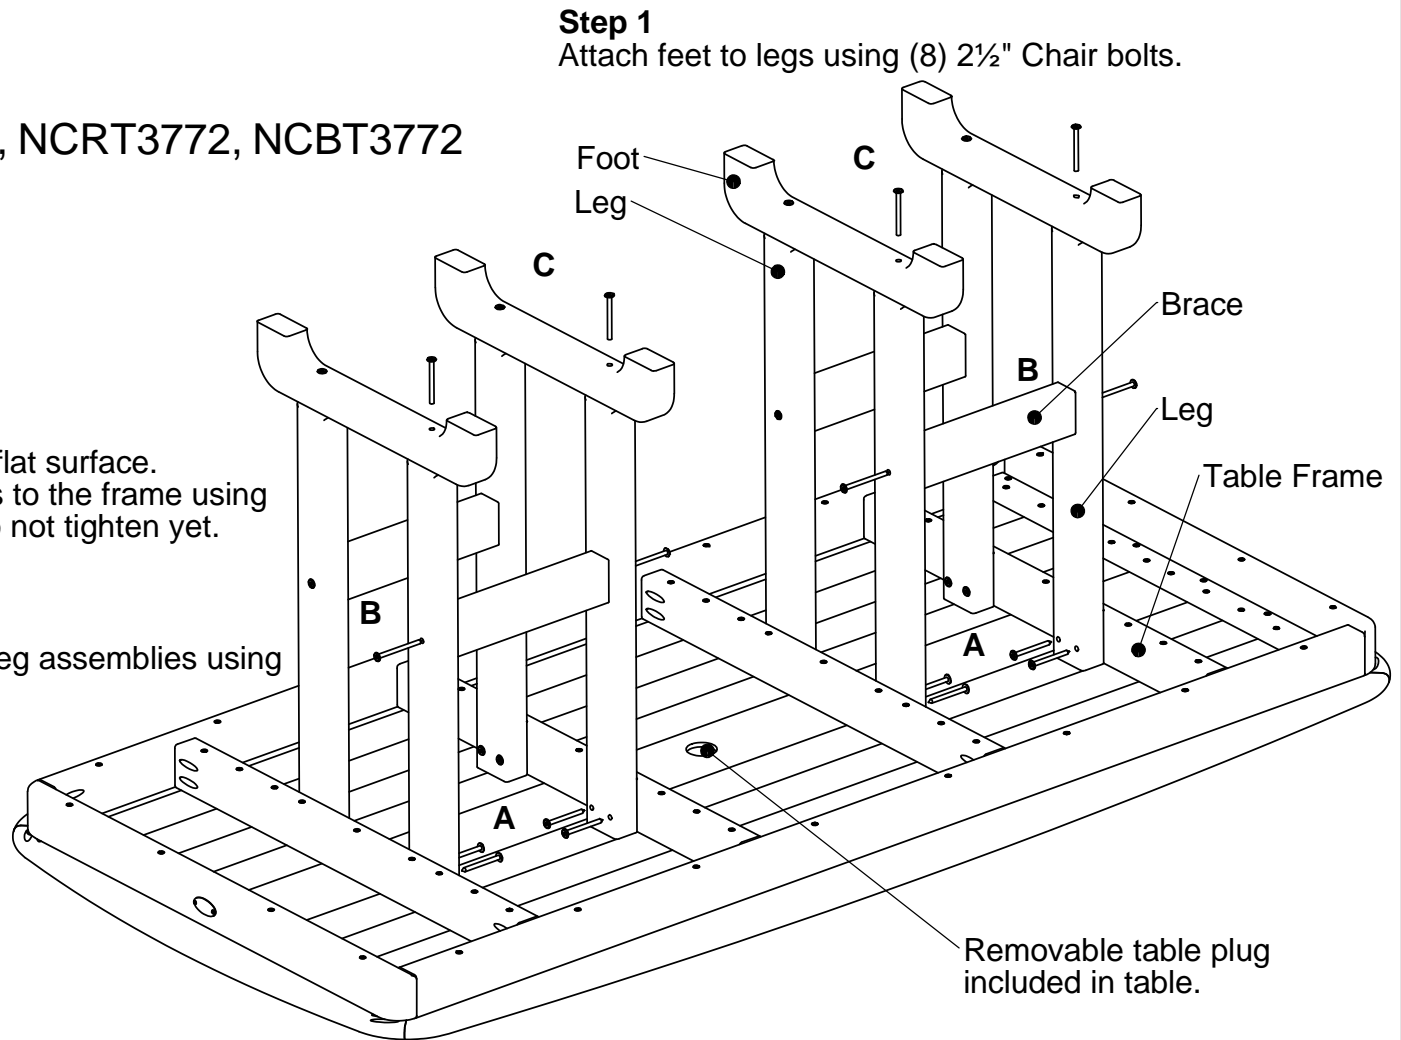

Qty.	Description
16	A - .27 X 2-1/2 SOCKET WAFER A
8	B - .27 X 3 SOCKET WAFER A
8	C - 1/4-20 X 2-1/2 WAFER SHCS