



Intelligent Design™

Model:  
CDD200, CDD201, CDD202

This Item can be found on  
[www.OutdoorFurniturePlus.com](http://www.OutdoorFurniturePlus.com)

Call 877-595-8543 to order.

**Step 1**

Attach back of arm by threading the attached dowel screw into the pilot hole until the arm is snug against the back leg.

ROTATE  
CLOCKWISE

PILOT HOLE

ROTATE  
CLOCKWISE


**Step 2**

Attach (4) 1-3/4 bolts thru the seat frame into the insert nuts on the arm supports


INSERT  
NUTS

A

CDD200

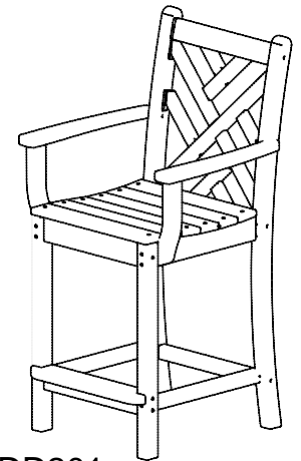

CDD201

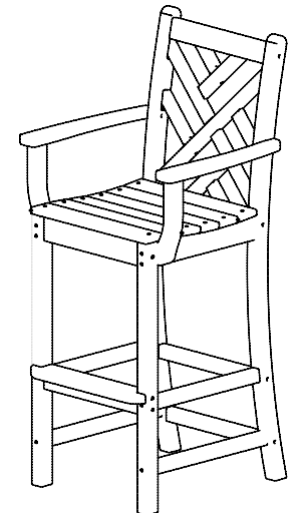

CDD202

- (1) CHAIR
- (2) ARM ASMB (RH/LH)
- (1) HARDWARE PACK

**TOOLS NEEDED**



Qty.	Description
------	-------------

4	A -1/4-20 X 1-3/4 WAFER SHCS
---	------------------------------

1	HDWPK-#8 SCREW PLUGS, 4X (EXTRAS)
---	-----------------------------------

