POLYWOOD™
Intelligent Design™

Model: ADD200

__(1) Chair frame
__(1) Back assembly
__(1) Hardware pack

This Item can be found on
www.OutdoorFurniturePlus.com

Call 877-595-8543 to order.

TOOLS NEEDED

4MM HEX KEY, ALLEN, T-HANDLE
(INCLUDED)

Step 1
Place back assembly in chair frame
Then move the back assembly as shown

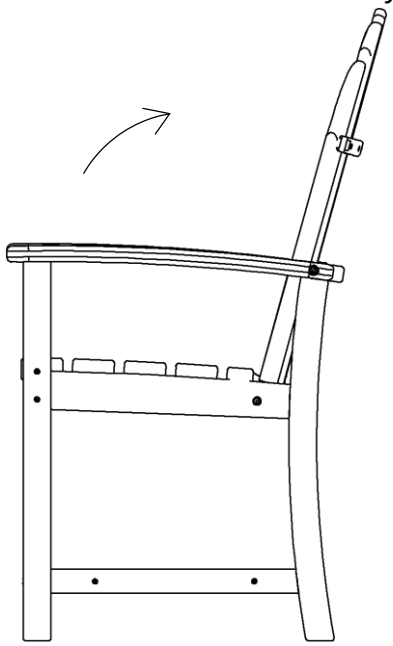

Step 2
Attach back assembly to seat using
(2) .27x2-1/2" Screws

Atach back assembly to the
top of the back leg using
(2) .27x2-1/2" Screws

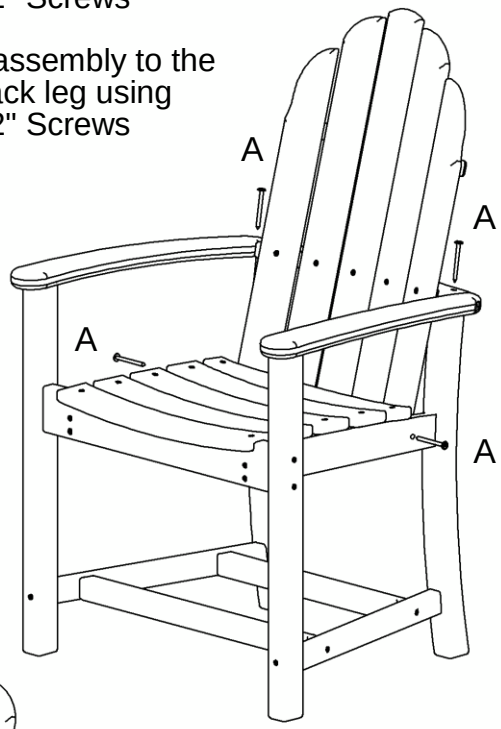

Step 3
Attach arms to back assembly
using (2) .27x3" Screws

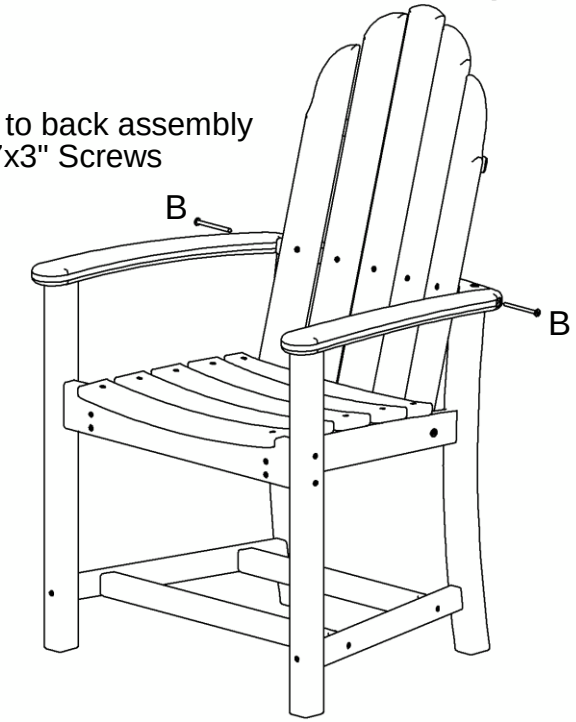

Qty.	Description
4	A - .27 X 2-1/2 SOCKET WAFER A
2	B - .27 X 3 SOCKET WAFER A