



Intelligent Design™

Model: AD5030, AD5031
AD6030

Step 1

Unfold chair assembly

Step 2

Insert (2) 2¼" bolts, washers and locknuts
into pre-drill holes
Then insert pins




TOOLS NEEDED

4MM HEX KEY, ALLEN, T-HANDLE
(INCLUDED)


This Item can be found on
www.OutdoorFurniturePlus.com

Call 877-595-8543 to order.




Step 1

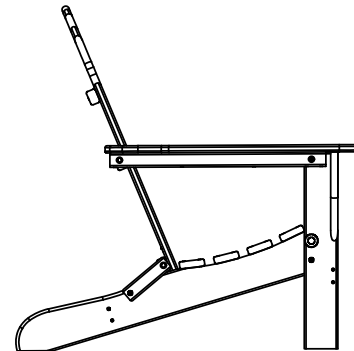


Correct

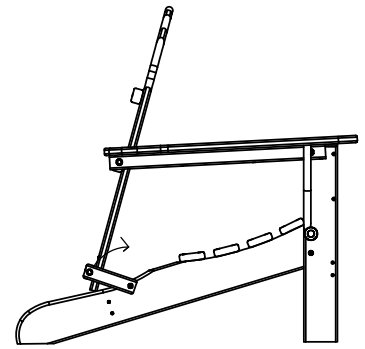


Incorrect

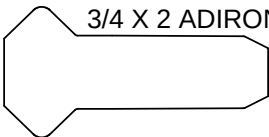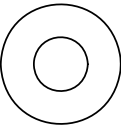Qty.	Description
2	 3/4 X 2 ADIRONDACK PIN HDPE
2	 A - 1/4-20 X 2-1/4 WAFER SHCS
2	 B - 1/4 FLAT WASHER
2	 B - 1/4-20 NYLOCK NUT

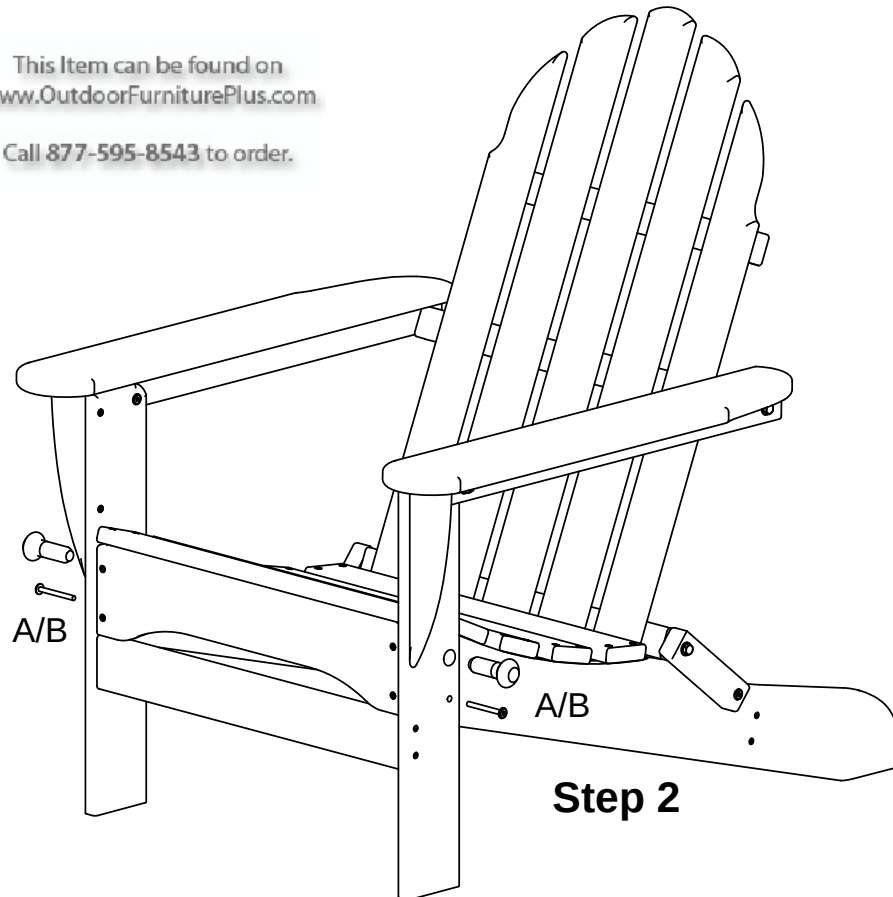

Step 2

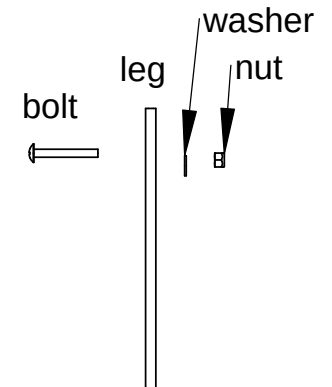



Intelligent Design™

Model: RST18

- (1) Bottom leg assembly
- (1) Top leg assembly
- (1) Table top

TOOLS NEEDED




4mm Hex Key (Included)
Phillips head screwdriver
A screw gun is recommended

This Item can be found on
www.OutdoorFurniturePlus.com

Call 877-595-8543 to order.


Step 1

Place the leg assemblies together on the table top.

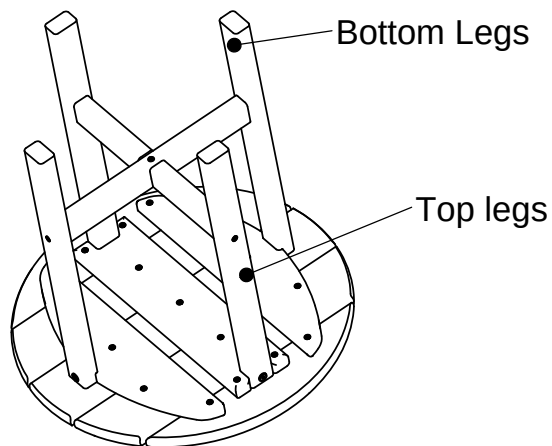


Step 2

Attach the legs using (4) 14x2 Screws in pre-drilled holes.

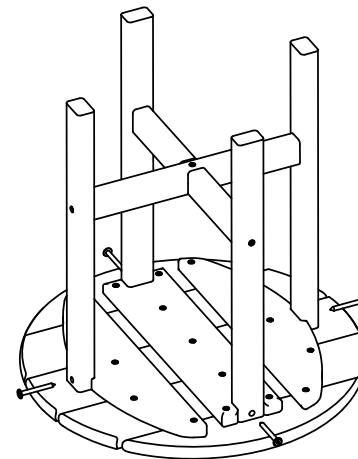

Step 3

Connect the braces using (1) 8x1¼ Screw.

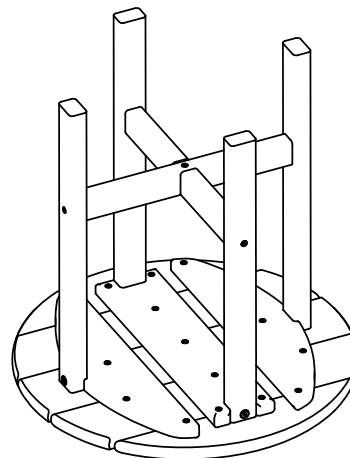

Qty.	Description
4	A - .27 X 2 SOCKET WAFER A
1	B - 8 X 1-1/4 PHIL FLAT SCREW

