



Intelligent Design™

Model: SBR16

- (1) Seat
- (1) Back
- (2) Front legs
- (2) Back legs
- (2) Arms
- (2) Braces
- (2) Rockers
- (1) Hardware pack

TOOLS NEEDED




7/16 Wrench
4mm HEX KEY, ALLEN, T-HANDLE
(INCLUDED)

Qty.	Description
4	A-.27 X 2 SOCKET WAFER A
4	B-.27 X 3 SOCKET WAFER A
10	C-1/4-20 X 1-7/8 WAFER SHCS
2	D-1/4-20 X 2-1/4 WAFER SHCS
12	E-1/4 FLAT WASHER
12	F-1/4-20 NYLOCK NUT

Step 1

Lay seat on its side. Attach front leg and back leg to seat. Now flip seat around and do the other side. Uses (6) 1-7/8" bolt, nut and washer


wings face forward

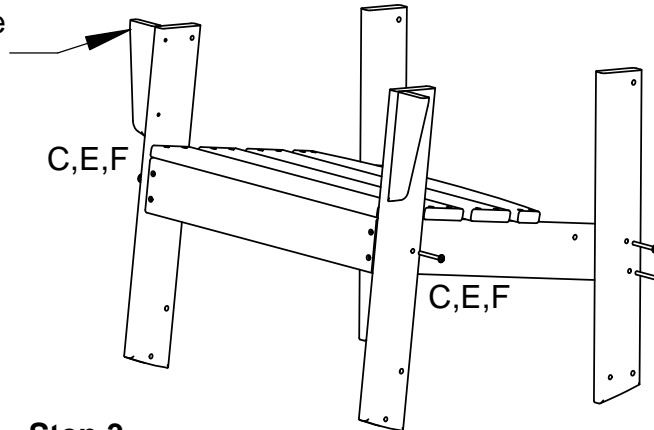

Step 3

Attach back to seat using (2) .27x2" screws


Attach back to rear leg using (2) .27x3" screws

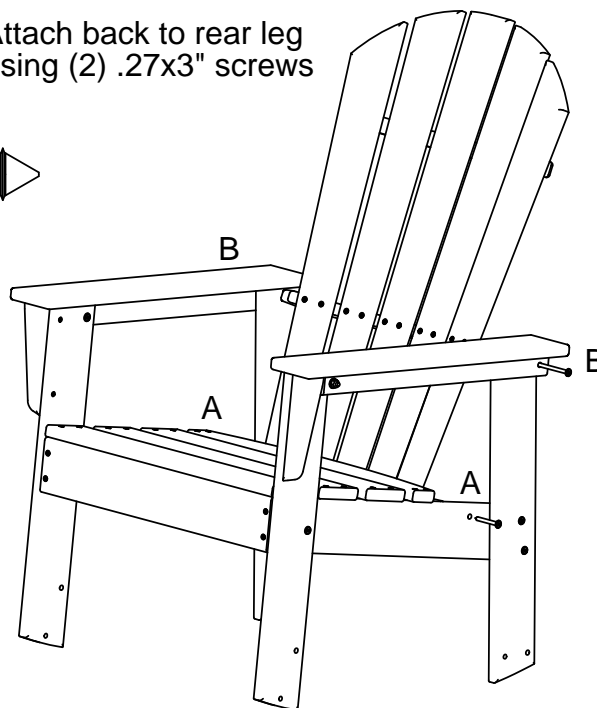

Step 2

Attach arms to front leg using (2) 2-1/4" bolt, nut and washer

arms hang over wing

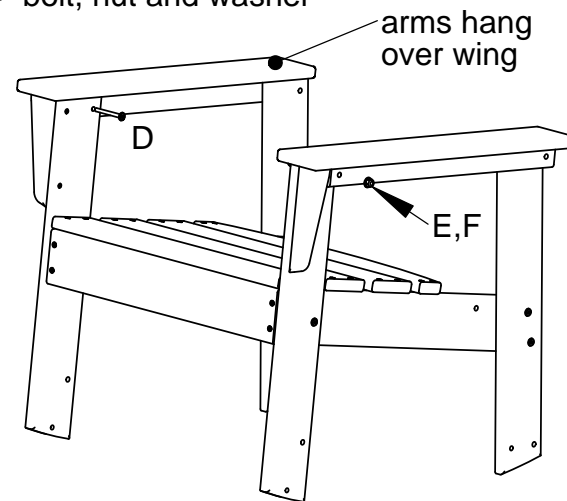


Step 4

Attach rockers to legs using (4) 1-7/8" bolt, nut and washer

Attach brace to front leg using (2) .27x2" screws

Attach brace to rear leg using (2) .27x3" screws

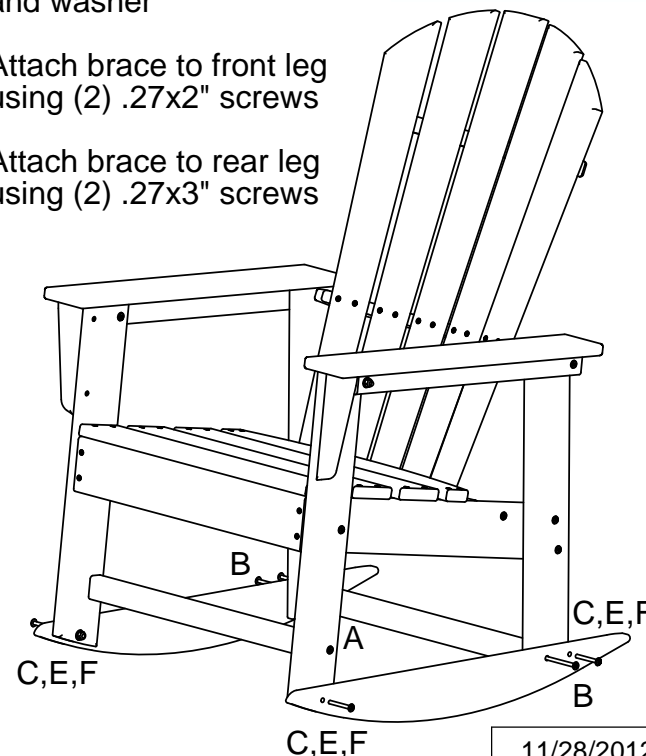

This Item can be found on
www.OutdoorFurniturePlus.com

Call 877-595-8543 to order.