

Trex® Outdoor Furniture™

Assembly Instructions
Model: TXNCT3772



Step 1
Attach feet to legs using (8) 2½" Chair bolts.

Step 2
Lay the table frame on a flat surface.
Attach the leg assemblies to the frame using (16) 14x2½" screws - Do not tighten yet.

Step 3
Attach braces to the leg assemblies using (8) 14x3" screws

Step 4
Set table upright and tighten all bolts.

- ___ (1) Table top
- ___ (8) Leg
- ___ (4) Foot
- ___ (4) Brace
- ___ (1) Hardware pack

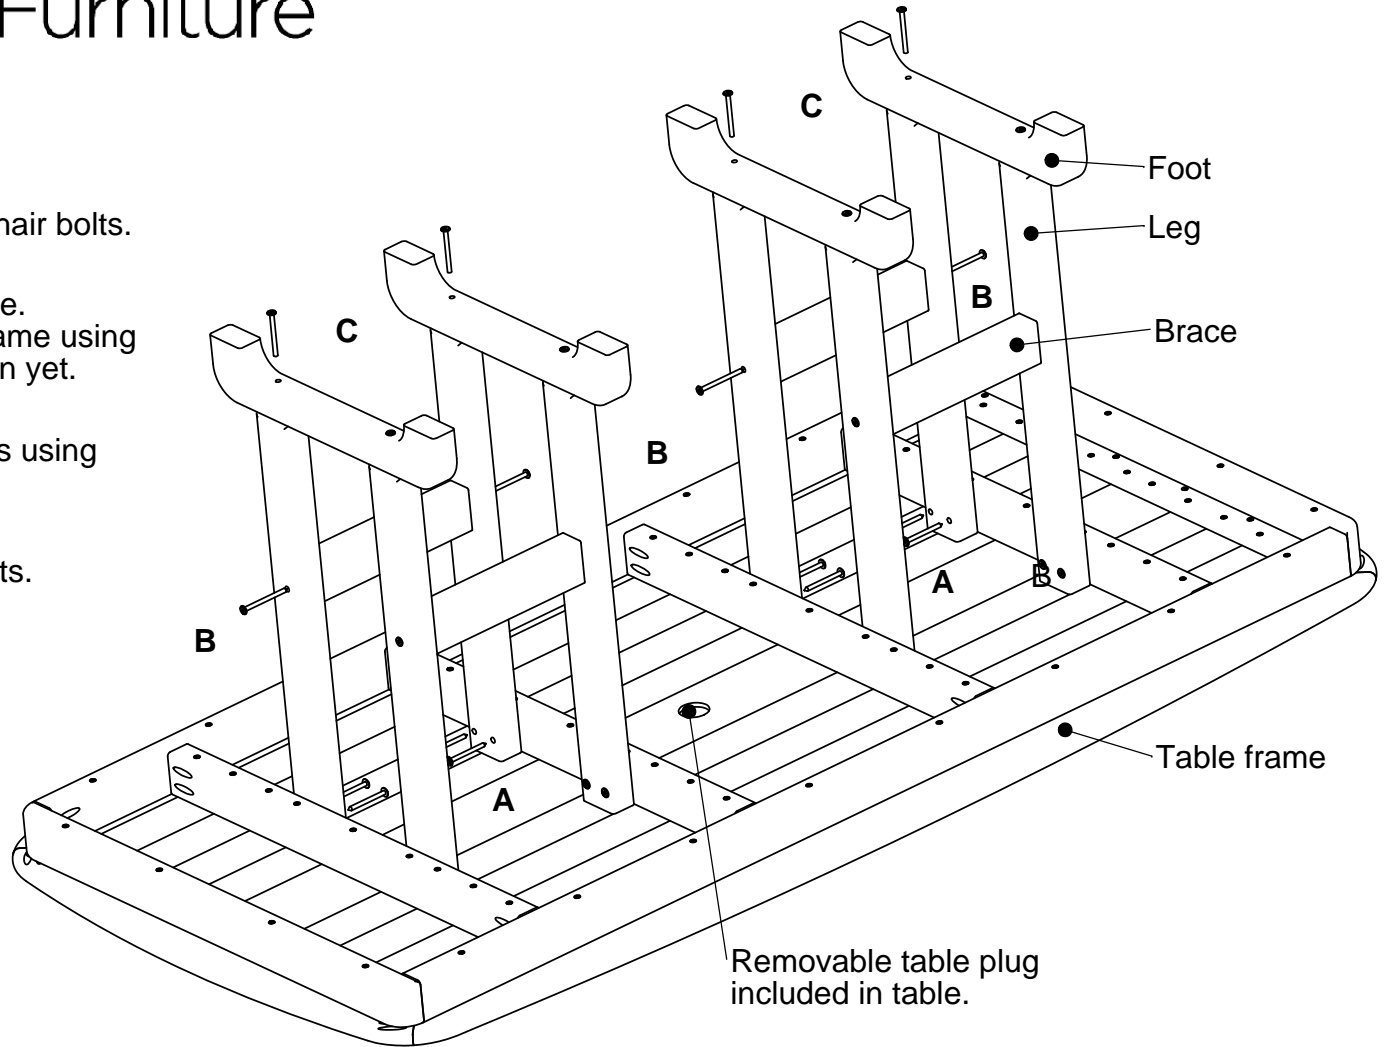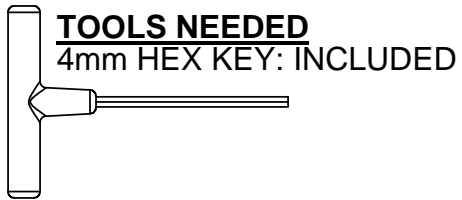

Qty.	Description
16	A - .27 X 2-1/2 SOCKET WAFER A
8	B - .27 X 3 SOCKET WAFER A
8	C - 1/4-20 X 2-1/2 WAFER SHCS <i>fine thread</i>

ALL HARDWARE IS COATED STAINLESS STEEL

10/16/2012