



Duct Cover	Hood Compatibility
AK0736BS	AK7836BS
AK0742BS	AK7842BS
AK0748BS	AK7848BS
AK0754BS	AK7854BS

1. Line up screw holes and attach the left and right side panels to the center panel with screws provided.

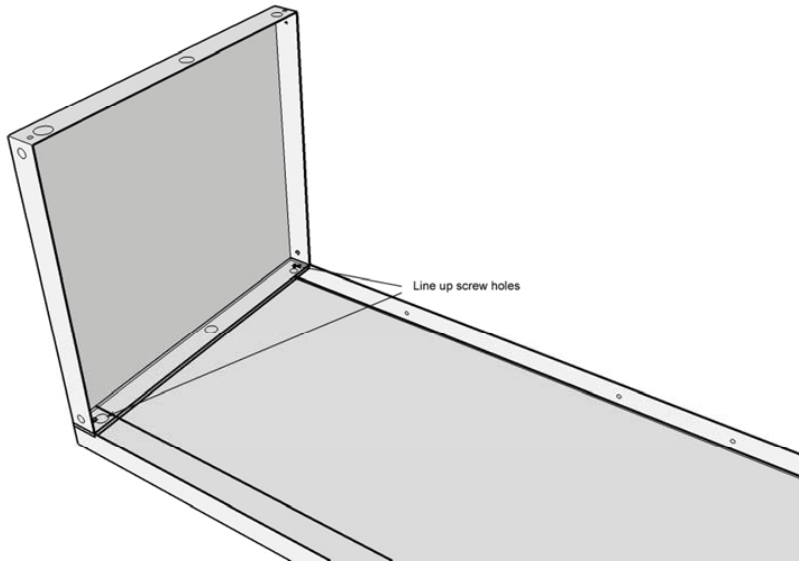

2. Place assembled duct cover on top of hood. Make sure the screw holes of the center panel are facing down and line up with the holes on top of hood.
3. Attach the duct cover to the top of hood by securing the rest of the screws to it from within the inside of the hood.

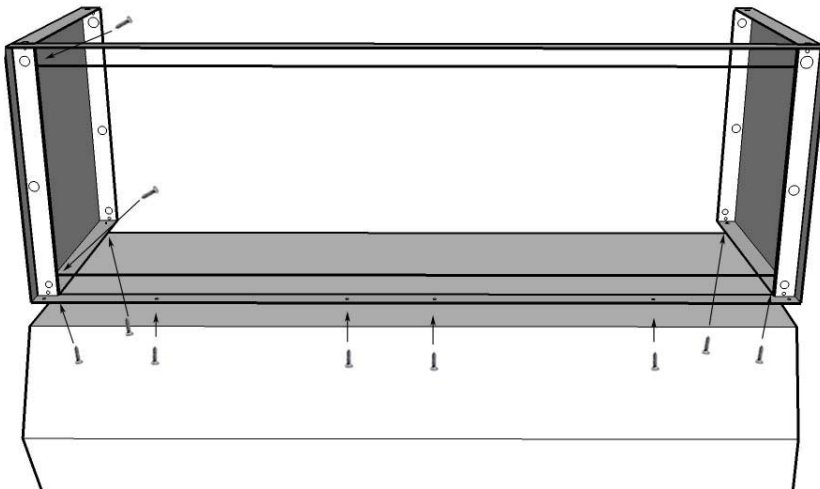

### Zephyr Corporation

2277 Harbor Bay Pkwy, Alameda, CA 94502  
Tel: 1.888.880.8368 Fax: 1.888.990.8368  
e-mail: [productsupport@zephyronline.com](mailto:productsupport@zephyronline.com)