

LG VIBE™

INSTRUCTION MANUAL



**This manual is valid for the
LG VIBE TENS Stimulator**

This user manual is published by Current Solutions™, LLC

Current Solutions™, LLC does not guarantee its contents and reserves the right to improve and amend it at any time without prior notice. Amendments may however be published in new editions of this manual.

All Rights Reserved.Rev.V1.0 © 2012



: United States Federal Law restricts this device to sale by or on the order of a physician or licensed practitioner

Conformity to safety standards

Current Solutions™, LLC declares that the device complies with following normative documents:

**IEC60601-1, IEC60601-1-2, IEC60601-2-10, IEC60601-1-4,
ISO10993-5, ISO10993-10, ISO10993-1**

TABLE OF CONTENTS

1. SAFETY INFORMATION.....	4
1.1 General	
1.2 Medical background	
1.3 Indication for use	
1.4 Contraindications	
1.5 Warnings, Cautions, Adverse Reactions	
2. PRESENTATION.....	10
2.1 Front and Rear panel	
2.2 LCD display	
3. SPECIFICATION.....	13
3.1 Accessories	
3.2 Technical information	
3.3 The waveforms of the stimulation programs	
4. INSTRUCTION FOR USE	15
4.1 Battery	
4.2 Connect electrodes to lead wires	
4.3 Connect lead wires to device	
4.4 Electrode	
4.5 Turn ON	
4.6 Select the Therapeutic Program	
4.7 Adjust Channel Intensity	
4.8 Safety Lock Feature	
4.9 Turn OFF	
4.10 Low battery indicator	
5. PROGRAM.....	21
6. CLEANING AND CARE.....	22
6.1 Tips for skin care	
6.2 Cleaning the device	
6.3 Electrodes	
6.4 Cleaning the Electrodes cords	
6.5 Maintenance	
7. TROUBLESHOOTING.....	26
8. STORAGE.....	28
9. DISPOSAL.....	28
10. ELECTROMAGNETIC COMPATIBILITY (EMC) TABLES.....	28
11. GLOSSARY OF SYMBOLS.....	34
12. WARRANTY.....	35

1. SAFETY INFORMATION

1.1 General

LV VIBE TENS stimulator is a portable electrotherapy device featuring Transcutaneous Electrical Nerve Stimulation (TENS) therapeutic device, which is used for pain relief. The stimulator sends a gentle electrical current to underlying nerves and muscle group via electrodes applied on the skin. The parameters of device are controlled by the buttons. Its intensity level is adjustable according to the needs of patients.

1.2 Medical background

EXPLANATION OF PAIN

Pain is a warning system and the body's method of telling us that something is wrong. Pain is important; without it abnormal conditions may go undetected, causing damage or injury to vital parts of our bodies. Even though pain is a necessary warning signal of trauma or malfunction in the body, nature may have gone too far in its design.

Aside from its value in diagnosis, long-lasting persistent pain serves no useful purpose. Pain does not begin until coded message travels to the brain where it is decoded, analyzed, and then reacted to. The pain message travels from the injured area along the small nerves leading to the spinal cord. Here the message is switched to different nerves that travel up the spinal cord to the brain. The pain message is then interpreted, referred back and the pain is felt.

EXPLANATION OF TENS

Transcutaneous Electrical Nerve Stimulation (TENS) is a non-invasive, drug free method of controlling pain. TENS uses tiny electrical impulses sent through the skin to nerves to modify your pain perception. TENS does not cure any physiological problem; it only helps control the pain. TENS does not work for everyone;

however, in most patients it is effective in reducing or eliminating the pain, allowing for a return to normal activity.

HOW TENS WORKS

There is nothing "magic" about Transcutaneous Electrical Nerve Stimulations (TENS). TENS is intended to be used to relieve pain. The TENS unit sends comfortable impulses through the skin that stimulate the nerve (or nerves) in the treatment area. In many cases, this stimulation will greatly reduce or eliminate the pain sensation the patient feels. Pain relief varies by individual patients, mode selected for therapy, and the type of pain. In many patients, the reduction or elimination of pain lasts longer than the actual period of stimulation (sometimes as much as three to four times longer). In others, pain is only modified while stimulation actually occurs. You may discuss this with your physician or therapist.

1.3 Indication for use

LV VIBE TENS Stimulator should be used for the Symptomatic relief of chronic intractable pain, acute post traumatic pain, acute post surgical pain and arthritis pain.

IMPORTANT SAFETY INFORMATION!

Read instruction manual before operation. Be sure to comply with all "Contraindications", "Warnings", "Cautions" and "Adverse reactions" in the manual. Failure to follow instructions can cause harm to user or device.

1.4 Contraindications

- 1) This device should not be used for symptomatic local pain relief unless etiology is established or unless a pain syndrome has been diagnosed.
- 2) This device should not be used when cancerous lesions are

present in the treatment area.

- 3) Stimulation should not be applied over swollen, infected, inflamed areas or skin eruptions (e.g. phlebitis, thrombophlebitis, varicose veins, etc.).
- 4) Electrodes must not be applied to sites that might cause current/stimulation to flow through the carotid sinus region (anterior neck) or transcerebrally (through the head).
- 5) Do not use this device if the patient has a demand-type cardiac pacemaker or any implanted defibrillator.
- 6) This device should not be used over poorly enervated areas.
- 7) Epilepsy
- 8) Serious arterial circulatory problems in the lower limbs
- 9) Abdominal or inguinal hernia
- 10) Do not use this device if you have heart disease without consulting your physician.

1.5 Warnings, Cautions and Adverse Reactions

WARNINGS:

- 1) This device should be used only under the continued supervision of a licensed physician.
- 2) The long-term effects of chronic electrical stimulation are unknown. Electrical stimulation devices do not have any curative value.
- 3) TENS is a symptomatic treatment and, as such, suppresses the sensation of pain, which would otherwise serve as a protective mechanism.
- 4) Safety has not been established for the use of therapeutic electrical stimulation during pregnancy. Do not use during pregnancy unless directed by your physician.
- 5) Electrical stimulation is not effective for pain of central origin.
- 6) Electronic monitoring equipment (such as ECG monitors and ECG alarms) may not operate properly when electrical stimulation is in use.
- 7) Stimulation should not be applied over the carotid sinus nerves, particularly in patients with a known sensitivity to the

carotid sinus reflex.

- 8) Stimulation should not be applied over the anterior neck or mouth. Severe spasm of the laryngeal and pharyngeal muscles may occur and the contractions may be strong enough to close the airway or cause difficulty in breathing.
- 9) Stimulation should not be applied transthoracically in that the introduction of electrical current into the heart may cause cardiac arrhythmias.
- 10) Stimulation should not take place while the user is connected to high-frequency surgical equipment, it may cause burn injuries on the skin under the electrodes, as well as problems with the stimulator.
- 11) Do not use the stimulator in the vicinity of shortwave or microwave therapy equipment, since this may affect the output power of the stimulator.
- 12) Never use in environments with high humidity such as in the bathroom or when having a bath or shower.
- 13) Caution should be used in applying electrical stimulation to patients suspected of having heart disease. Further clinical data is needed to show there are no adverse results.
- 14) Never use near the heart. Stimulation electrodes should never be placed anywhere on the front of the thorax (marked by ribs and breastbone), but above all not on the two large pectoral muscles. Here it can increase the risk of ventricular fibrillation and lead to cardiac arrest.
- 15) Electrodes should not be placed over the eyes, in the mouth, near the genitals or internally.
- 16) Never use on the areas of the skin which lack normal sensation.
- 17) Apply the electrodes to clean, dry, and unbroken skin only.
- 18) Keep electrodes separate during treatment, electrodes in contact with other could result in improper stimulation or skin burns.
- 19) Keep the stimulator out of reach of children.
- 20) Consult your doctor if you are in any doubt whatsoever.

CAUTIONS:

- 1) Federal law (USA) restricts this device to sale by or on the order of a physician.
- 2) For single patient use only.
- 3) Keep yourself informed of the contraindications.
- 4) This stimulator not intended for unattended, personal use by patients who have noncompliant, emotionally disturbed, dementia, or low IQ.
- 5) Read, understand, and practice the warnings, cautions and operating instructions. Know the limitations and hazards associated with using any device. Observe the precautionary and operational decals placed on the unit. Always follow the operating instructions prescribed by your healthcare practitioner.
- 6) The instruction of use was listed; any improper use may be dangerous.
- 7) Do not use this device for undiagnosed pain syndromes until consulting a physician.
- 8) Patients with an implanted electronic device, such as a cardiac pacemaker, implanted defibrillator, or any other metallic or electronic device should not use this device without first consulting a doctor.
- 9) Stimulation delivered by this device may be sufficient to cause electrocution. Electrical current of this magnitude must not flow through the thorax or across the chest because it may cause a cardiac arrhythmia.
- 10) Do not place electrodes on the front of the throat as spasm of the Laryngeal and Pharyngeal muscle may occur. Stimulation over the carotid sinus (neck region) may close the airways, make breathing difficult, and may have adverse effects on the heart rhythm or blood pressure.
- 11) Do not place electrodes on your head or at any sites that may cause the electrical current to flow transcerebrally (through the head).
- 12) Patients with heart disease, epilepsy, cancer or any other health condition should not use this device without first consulting a physician.
- 13) Some patients may experience skin irritation or

hypersensitivity due to the electrical stimulation or silicone rubber. If rash develops or pain persists, discontinue use and consult a doctor.

- 14) Electrode placement and stimulation settings should be based on the guidance of prescribing practitioner.
- 15) Effectiveness is highly dependent upon patient selection by a person qualified in the management of pain afflicted patients.
- 16) Isolated cases of skin irritation may occur at the site of the electrode placement following long-term application. If this occurs, discontinue use and consult your physician.
- 17) The electrodes are only to be placed on healthy skin. Avoid skin irritation by ensuring that good contact is achieved between electrodes and skin.
- 18) If the stimulation levels are uncomfortable or become uncomfortable, reduce the stimulation Intensity to a comfortable level and contact your physician if problems persist.
- 19) This device should not be used while driving, operating machinery, close to water, or during any activity in which involuntary muscle contractions may put the user at undue risk of injury.
- 20) Never use the device in rooms where aerosols (sprays) are used or pure oxygen is being administered.
- 21) Do not use it near any highly flammable substances, gases or explosives.
- 22) Do not use this device at the same time as other equipment which sends electrical pulses to your body.
- 23) Do not confuse the electrode cables and contacts with your headphones or other devices, and do not connect the electrodes to other devices.
- 24) Do not use sharp objects such as pencil point or ballpoint pen to operate the buttons on the control panel.
- 25) Inspect Applicator cables and associated connectors before each use.
- 26) Turn the device off before applying or removing electrodes.
- 27) Electrical stimulators should be used only with the leads and electrodes recommended for use by the manufacturer.
- 28) This device has no AP/APG protection. Do not use it in the

presence of explosive atmosphere and flammable mixture.


ADVERSE REACTIONS:

Skin irritation from the electrode gel and electrode burns are potential adverse reactions. If skin irritation occurs, discontinue use and consult your physician.

Note: Always use electrodes that are legally marketed and sold in the United States under 510K guidelines.


2. PRESENTATION

2.1 Front and Rear Panel

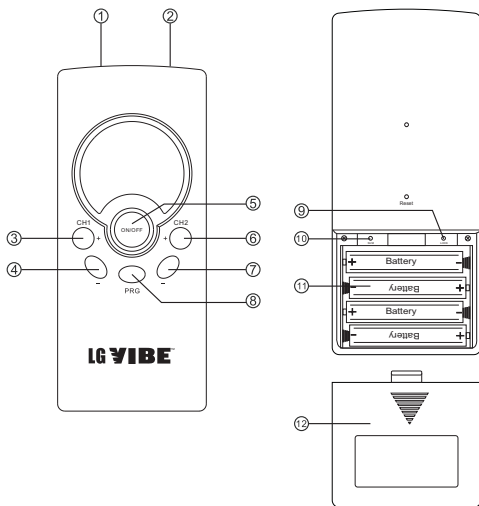

- 1) Output socket of channel 1
- 2) Output socket of channel 2
- 3) Increasing the output intensity of channel 1
- 4) Decreasing the output intensity of channel 1
- 5) Power on/off button or pause treatment button
- 6) Increasing the output intensity of channel 2
- 7) Decreasing the output intensity of channel 2
- 8) Therapeutic program select button
- 9) Lock or unlock the unit
- 10) Show the total treatment time
- 11) Battery compartment
- 12) Battery cover

2.2 LCD Display

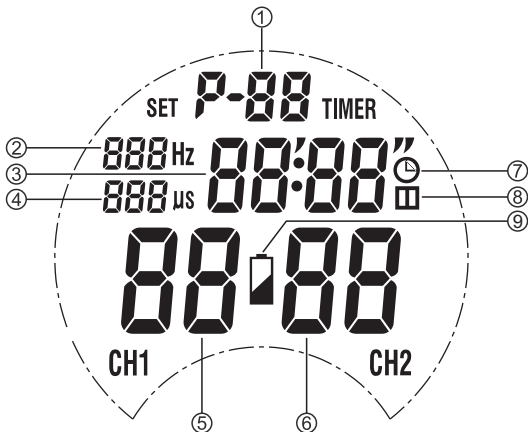


- 1) Therapeutic program
- 2) Frequency
- 3) Treatment time
- 4) Pulse width
- 5) Output intensity of channel 1
- 6) Output intensity of channel 2
- 7) Timer symbol
- 8) Pause treatment symbol
- 9) Low battery indicator

3. SPECIFICATION

3.1 Accessories

No	DESCRIPTION	Q'TY
1	TENS stimulator device	1 piece
2	Electrodes Leads	2 pieces
3	40mm x 40mm adhesive electrodes	4 pieces
4	1.5V AAA batteries	4 pieces
5	Instruction Manual	1 piece
6	Carrying case	1 piece

3.2 Technical Information


Channel	Dual, isolated between channels
Power supply	DC6.0V 4×AAA batteries
Operating conditions	5°C to 40°C (41°F to 104°F) with a relative humidity of 30%-75%,atmospheric pressure from 700 to 1060 hPa
Storage conditions	-10°C to 50°C (14°F to 122°F) with a relative humidity of 10%-90%,atmospheric pressure from 700 to 1060 hPa
Dimensions	5.6×2.4×0.7 inches(L*W*H)
Weight	0.23 lbs(Without battery)
Tolerance	There may be a ±5% tolerance of all setting and ±10% tolerance of output of intensity.
Electrode Detection Function	The channel's amplitude level will be reset to 0 when an open circuit is detected. If two channel's amplitude level was reset to 0, the unit will enter into pause mode, and "  " indicator display on LCD.
Timer	0:01-23:59

Technical specifications


Waveform	Mono-phase square pulse wave
Output intensity	0-100V (at 500ohm load)
Pulse Width	Adjustable From 30 to 300 μ s
Pulse Rate	Adjustable From 2 to 200 Hz

3.3 The waveforms of the stimulation programs


Continuous




Burst(B)



Pulse Rate Modulation



Modulation(Pulse width and Pulse rate)




4. INSTRUCTION FOR USE

4.1 Battery

4.1.1 Check/Replace the battery

Over time, in order to ensure the functional safety of device, changing the battery is necessary.

- 1) Slide the battery compartment cover and open.
- 2) Insert the four AAA batteries into the battery compartment.
- 3) Make sure you are installing the batteries properly. Be sure to match the positive and negative ends of the battery to the marking in the battery compartment of the device.
- 4) Press and pull down following the direction of the arrow indicated on the photo.
- 5) Replace the battery compartment cover and press to close
- 6) If replace the batteries, you should slide the battery compartment cover and open. Pull up the batteries following the direction of the arrow indicated on the photo. And insert the batteries according to the above step 2) to 5).

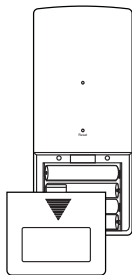

4.1.2 Disposal of battery

Spent batteries do not belong in the household waste. Dispose of the battery according to the current federal, state and local regulations. As a consumer, you are obligated by law to return spent battery.




CAUTION:

- 1) **Battery may be fatal if swallowed. Therefore, keep the battery and the product out of the range of children, if a battery was swallowed, consult a physician immediately.**


- 2) If a battery has leaked, avoid contact with skin, eyes and mucus membranes, Rinse the affected spots with lots of clear water immediately and contact a physician right away.
- 3) Battery may not be charged, dismantled, thrown into fire or short-circuited.
- 4) Protect battery from excess heat; take the battery out of the product if they are spent or in case you no longer use the article. This prevents damage caused by leaking battery.
- 5) Always replace the same type battery.

4.2 Connect electrodes to lead wires

Insert the lead wire connector into electrodes connector (standard 0.08 inch female connection). Make sure no bare metal of the pins is exposed.

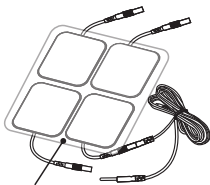

Connection Cables

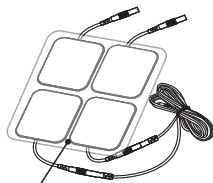


Transparent Film

CAUTION:

Always use the electrodes with CE mark, or which are legally marketed in the US under 510(K) procedure.

4.3 Connect lead wires to device

- 1) Before proceeding to this step, be sure the device is completely turned off.
- 2) The wires provided with the system insert into the jack sockets located on top of the device.
- 3) Holding the insulated portion of the connector, push the plug end of the wire into one of the jacks (see drawing); one or two sets of wires may be used.
- 4) This device has two output receptacles controlled by Channel 1 and Channel 2 at the top of the unit. You may choose to use one channel with one pair of lead wires or both channels with two pairs of lead wires. Using both channels gives the user the advantage of stimulating two different areas at the same time.

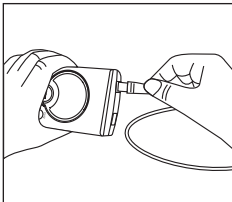

4.4 Electrode

4.4.1 Electrode options

The electrodes are disposable and should be routinely replaced when they start to lose their adhesive nature. If you are unsure of your electrode adhesive properties, order new replacement electrodes. Replacement electrodes should be re-ordered through or on the advice of your physician to ensure proper quality. Follow application procedures outlined in electrode packing, to maintain optimal stimulation and to prevent skin irritation.

4.4.2 Place electrodes on skin

Apply electrodes to the exact site indicated by your physician or therapist, before applying electrodes, be sure the skin surface over which electrodes are placed is thoroughly cleaned and dried. Make

sure the electrodes are placed firmly to the skin and make good contact between the skin and the electrodes. Place the electrodes over the skin; attach them properly, firmly, and evenly.

CAUTION:

- 1) Before applying the self-adhesive electrodes, it is recommended to wash and degrease the skin, and then dry it.**
- 2) Do not turn on the device when the self-adhesive electrodes are not positioned on the body.**
- 3) Never remove the self-adhesive electrodes from the skin while the device is still turned on.**
- 4) It is recommended that, at minimum, 40mm x 40mm self-adhering based, square electrodes are used at the treatment area.**

4.4.3 Electrode placement

The placement of electrodes can be one of the most important parameters in achieving success with therapy. Of utmost importance is the willingness of the physician to try the various styles of electrode placement to find which method best fits the needs of the individual patient.

Every patient responds to electrical stimulation differently and their needs may vary from the conventional settings suggested here. If the initial results are not positive, speak to your physician about alternative stimulation settings and/or electrode placements. Once an acceptable placement has been achieved, mark down the electrodes sites and the settings, so the patient can easily continue treatment at home.

4.5 Quick use for pre-set program

4.5.1 Turn on

Press and hold [ON/OFF] button until the operation page appears on the screen.

4.5.2 Select the pre-set program

LG VIBE Stimulator with 12 pre-set programs P01 ~ P12 and 2 user programs PC1-PC2. the details please refer to Page 21 < Programs > , please press the [PRG] button to select the pre-set program from P01 to P12.

4.5.3 Adjust channel intensity

Press the intensity control button [+] and [-] to control the intensity output. Slowly press the intensity button until you reach the setting recommended by your physician or therapist. Repeat for the other channel, if both channels are to be use.

Caution:

- 1) If the stimulation levels are uncomfortable or become uncomfortable, reduce the stimulation intensity to a comfortable level and contact your medical practitioner if problems persist.
- 2) If the electrodes no placed firmly on skin or the device has not connected on the electrodes, the intensity will enulls automatically.
- 3) Press [ON/OFF] button to pause treatment, the output intensity will return to "0", but the treatment time still display the rest of treatment time.

4.6 Setup for user programs

4.6.1 Turn on

Press and hold [ON/OFF] button until the operation page appears on the screen.

4.6.2 Select the user program

LG VIBE Stimulator with 12 pre-set programs P01 ~ P12 and 2 user programs PC1-PC2. please press [PRG] button to select the user program PC1 or PC2.

4.6.3 Set the frequency

Press [PRG] button over 3 seconds to enter program setting then content of pulse frequency is flashed. You can press [+] or [-] button to adjust the frequency from 2 to 200Hz.

4.6.4 Set the pulse width

Press [PRG] button again, the content of pulse width is flashed. You can press [+] or [-] button to adjust pulse width from 30 to 300 μ s.

4.6.5 Set the treatment time

Press [PRG] button again, the content of treatment time flashes. You can press [+] or [-] button to adjust treatment time from 1minute to 23 hours and 59 minutes.

4.6.6 Exit setting mode

Press [ON/OFF] button to exit from program setting mode.

4.6.7 Adjust channel intensity

Please refer to section 4.5.3 in this manual.

4.7 Safety Lock Feature

This device has the ability to lock the button to avoid unexpected operation.

- 1) Press and hold [ON/OFF] button to turn on the device.
- 2) Press and hold [LOCK] key in the back battery cover over 2 seconds to switch between Lock and Unlock mode. In lock mode, the [PRG] button will lose effectiveness.

4.8 Treatment record

- 1) Press and hold [ON/OFF] button to turn on the device.
- 2) Press [SUM] key inside the battery cover to display the cumulative time of use.

3) Press and hold [SUM] key over 3 seconds to reset the cumulative time to zero. Press [ON/OFF] button to return normal mode.

4.9 Turn OFF

Press and hold [ON/OFF] button for 3 seconds to turn off the device

CAUTION:

1) If there is no operation in the panel for 3 minutes in the waiting state, the device will be turns off automatically.

4.10 Low battery indicator

A battery symbol is shown on the display when the battery is almost empty. As long as the stimulator is working normally you can continue the treatment. When stimulation feels weaker than usual or the stimulator turns off, it is time to replace the new battery.

5. PROGRAMS

Program	Frequency (Hz)	Pulse width(μ s)	Treatment time (min)	waveform
P01	70-110	200-100	30	Modulation
P02	150	30(9 pulses)	30	Burst
P03	110	175	30	Continuous
P04	2-10	50-30	30	Modulation
P05	100	175	30	Continuous
P06	10-100	250	30	Pulse rate modulation
P06	10-100	250	30	Pulse rate modulation
P07	2	30	30	Continuous
P08	80	200	30	Continuous
P09	35	200	30	Continuous
P10	150	200(9 pulses)	30	Burst
P11	35	30(9 pulses)	30	Burst
P12	80	30(9 pulses)	30	Burst
PC1	Frequency: 2-200 Hz Pulse width:30-300 μ s			Continuous
PC2	Treatment time: 0:01-23:59			Continuous

6. CLEANING AND CARE

6.1 Tips for skin care

To avoid skin irritation, especially if you have sensitive skin, follow these suggestions:


- 1) Wash the area of skin where you will be placing the electrodes, using mild soap and water before applying electrodes, and after taking them off. Be sure to rinse soap off thoroughly and dry skin well.
- 2) Excess hair may be clipped with scissors; do not shave stimulation area.
- 3) Wipe the area with the skin preparation your clinician has recommended. Let this dry. Apply electrodes as directed.
- 4) Many skin problems arise from the “pulling stress” from adhesive patches that are excessively stretched across the skin during application. To prevent this, apply electrodes from centre outward; avoid stretching over the skin.
- 5) To minimize “pulling stress”, tape extra lengths of lead wires to the skin in a loop to prevent tugging on electrodes.
- 6) When removing electrodes, always remove by pulling in the direction of hair growth.
- 7) It may be helpful to rub skin lotion on electrode placement area when not wearing electrodes.
- 8) Never apply electrodes over irritated or broken skin.

6.2 Cleaning the device

- 1) Remove the battery from the device every time when you clean.
- 2) Clean the device after use with a soft, slight moistened cloth. In case of more extreme soiling you can also moisten the cloth with mild soapy water.
- 3) Do not use any chemical cleaners or abrasive agents for cleaning.

6.3 Electrodes

- 1) Use the device only with the leads and electrodes provided by the manufacturer. Use only the electrode placements and stimulation settings prescribed by your physician or therapist.
- 2) It is recommended that, at minimum, 40mm*40mm self-adhering based, square electrodes are used at the treatment area.
- 3) Inspect your electrodes before every use. Replace electrodes as needed. Reusable electrodes may cause slight skin irritation, lose adhesion and deliver less stimulation if overused.

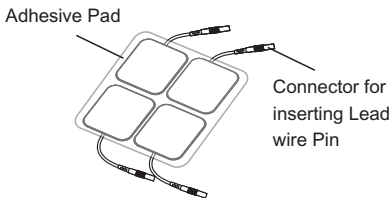

Reusable, Self-adhering electrodes

To use these electrodes:

- 1) Attach the electrode to the lead wire.
- 2) Remove the protective backing from the electrode surface. Do not throw away the protective backing because it is reused after the treatment session has been completed.
- 3) Place the tacky surface to the prescribed skin area by pressing the electrode firmly against the skin.

To remove your electrodes:

- 1) Lift the corner of the electrode and gently remove it from the skin.

- 2) Apply the protective backing to the tacky side of the electrode. Place the electrode on the side of the protective backing that is labeled with the word on.
- 3) It may be helpful to improve repeated application by spreading a few drops of cold water over the adhesive and turn the surface up to air dry. Over Saturation with water will reduce the adhesive properties.
- 4) Between uses, store the electrodes in the resealable bag in a cool dry place.

CAUTION:

- **Do not pull on the electrode wire. Doing so may damage the wire and electrode.**
- **Do not apply to broken skin.**
The electrodes should be discarded when they are no longer adhering.
- **The electrodes are intended for single patient use only. If irritation occurs, discontinue use and consult your clinician.**
- **Read the instructions for use of self-adhesive electrodes before application.**
- **Always use the electrodes with CE mark, or are legally marketed in the US under 510(K) procedure.**

6.4 Cleaning the Electrodes cords

Clean the electrode cords by wiping them with damp cloth. Coating them lightly with talcum powder will reduce tangles and prolong the life.

6.5 Maintenance

- 1) Maintenance and all repairs should only be carried out by an authorized agency. The manufacturer will not be held

responsible for the results of maintenance or repairs by unauthorized persons.

- 2) The user must not attempt any repairs to the device or any of its accessories. Please contact the retailer for repair.
- 3) Opening of the equipment by unauthorized agencies is not allowed and will terminate any claim to warranty.
- 4) Check the unit before each use for signs of wear and/or damage. Replace wear items as required.

7. TROUBLESHOOTING

If your device does not seem to be operating correctly, refer to the chart below to determine what may be wrong. Should none of these measures correct the problem, the device should be serviced.

Problem	Possible Cause	Solution
Displays fail to light up	Battery contact failure	1. Try fresh batteries.
		2. Ensure batteries are inserted correctly. Check the following contacts: <ul style="list-style-type: none"> • All contacts are in place. • All contacts are not broken.
Stimulation weak or cannot feel any stimulation	Electrodes 1. Dried out or contaminated 2. Placement	Replace and re-connect
	Lead wires Old/worn/damaged	Replace
Stimulation is uncomfortable	Intensity is too high	Decrease intensity.
	Electrodes are too close together	Reposition the electrodes.
	Damaged or worn electrodes or lead wires	Replace.
	Electrode active area size is too small.	Replace electrodes with ones that have an active area no less than 16.0cm ² (4cm*4cm).
	Mayn't operate the device according to the manual.	Please check the manual before use.
Intermittent output	Lead wires	1. Verify connection is secure. Insure firmly.
		2. Turn down the intensity. Rotate lead wires in socket 90°. If still intermittent, replace lead wire.

		3. If still intermittent after replacing lead wire, a component may have failed. Call the repair department.
	Program option in use	Option Controls in the Operation section for a description of the program option.
Stimulation is ineffective.	Improper electrode and applicator placement	Reposition electrode and applicator
	Unknown	Contact clinician.
The skin becomes red and/or you feel a stabbing pain	Use the electrodes on the same site every time.	Re-position the electrodes. If at any time you feel pain or discomfort stop use immediately.
	The electrodes aren't stuck onto the skin properly.	Ensure the electrode is stuck securely on the skin.
	The electrodes are dirty.	Clean the electrode pads with a damp, lint free cloth or replace new electrode pads.
	The surface of the electrode was scratched.	Replace new electrode.
Output current stops during therapy	The electrode pads come off the skin.	Turn off the device and stick the electrode pad firmly to the skin.
	The cable is disconnected	Turn off the device and connect the cable
	The power of the batteries has been exhausted.	Please replace them with new batteries.

8. STORAGE

- 1) For a prolonged pause in treatment, store the device in a dry room and protect it against heat, sunshine and moisture.
- 2) Store the device in a cool, well-ventilated place
- 3) Never place any heavy objects on the device.

9. DISPOSAL

Used fully discharged batteries must be disposed of in a specially labeled collection container, at toxic waste collection points or through an electrical retailer. You are under legal obligation to dispose of batteries correctly.



Please dispose of the device in accordance with the legal obligation.

10. ELECTROMAGNETIC COMPATIBILITY (EMC) TABLES

<i>Guidance and manufacturer's declaration - electromagnetic emissions</i>		
<i>The device is intended for use in the electromagnetic environment specified below. The customer or the user assures that it is used in such an environment.</i>		
Emissions test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The device uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.

RF emissions CISPR11	Class B	The device is suitable for use in all establishments other than domestic and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Not applicable	
Voltage fluctuations /flicker emissions IEC 61000-3-3	Not applicable	

**Guidance and manufacturer's declaration —
electromagnetic immunity**

The device is intended for use in the electromagnetic environment specified below. The customer or the user should assure that it is used in such an environment.


Immunity test	IEC 60601 test level	Compliance level	Electromagnetic environment - guidance
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30 %.

Electrical fast transient/burst IEC 61000-4-4	±2kV for power supply lines ±1kV for input/output lines	Not applicable	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1kV differential mode ±2kV common mode	Not applicable	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions and voltage variations on power supply input lines IEC 61000-4-11	<5% UT (>95% dip in UT) for 0.5 cycle 40% UT (60% dip in UT) for 5 Cycles 70% UT (30% dip in UT) for 25 Cycles <5% UT (>95% dip in UT) for 5 sec	Not applicable	Mains power quality should be that of a typical commercial or hospital environment.
Power frequency (50/60Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
NOTE UT is the a.c mains voltage prior to application of the test level.			

**Guidance and- manufacturer's declaration.
Electromagnetic immunity**

The device is intended for use in. the electromagnetic environment specified below. The customer or the user should assure that it is used in such an environment.

Immunity test	IEC 60501 test level	Compliance level	Electromagnetic environment - guidance
			Portable and mobile RF Communications equipment should be used no closer to any part of the device, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter. Recommended separation distance
Conducted RF IEC 61000-4-6	3 Vrms 150 kHz to 80 MHz	3 Vrms	$d = \left[\frac{3.5}{\sqrt{f}} \right] \sqrt{P}$
Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2.5 GHz	3 V/m	$d = \left[\frac{3.5}{E} \right] \sqrt{P}$, 80MHz to 800MHz $d = \left[\frac{7}{E} \right] \sqrt{P}$, 800MHz to 2,5MHz

			<p>Where P is the maximum output power rating of the transmitter in watts (W) according to the Transmitter manufacturer and d is the recommended separation distance in meters (m).</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey, should be less than the compliance level in each frequency range.^b</p> 
<p>NOTE 1 At 80 MHz ends 800 MHz. the higher frequency range applies.</p> <p>NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.</p>			
<p>a Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the device is used exceeds the applicable RF compliance level above, should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the device.</p> <p>b Over the frequency range 150 kHz to 80 MHz, field strengths should be less than $[V_i] \text{ V/m}$</p>			

Recommended separation distances between portable and mobile RF communications equipment and the device

The device is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the device can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the as recommended below, according to the maximum output power of the communications equipment.

Rated maximum output power of transmitter W	Separation distance according to frequency of transmitter m		
	150 kHz to 80 MHz $d = \left[\frac{3.5}{\sqrt{1}} \right] \sqrt{P}$	80 MHz to 800 MHz $d = \left[\frac{3.5}{\sqrt{1}} \right] \sqrt{P}$	800 MHz to 2,5 GHz $d = \left[\frac{7}{\sqrt{1}} \right] \sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23







For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) accordable to the transmitter manufacturer.

NOTE 1 At 80 MHz and 800 MHz. the separation distance for the higher frequency range applies.

NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23
<p>For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) accordable to the transmitter manufacturer.</p> <p>NOTE 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.</p> <p>NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.</p>			

11. GLOSSARY OF SYMBOLS

	Batch code
	Serial number
	Electrical devices are recyclable material and should not be disposed of with household waste after their useful life! Help us to protect the environment and save resources and take this device to the appropriate collection points. Please contact the organization which is responsible for waste disposal in your area if you have any questions.
	Equipment capable of delivering output values in excess of 10mA r.m.s. or 10V r.m.s. averaged over any period of 5s.
	Type BF Applied Part
	refer to Instruction Manual.

12. WARRANTY

Please contact your dealer in case of a claim under the warranty. If you have to send in the unit, enclose a copy of your receipt and state what the defect is.

The following warranty terms apply:

- 1) The warranty period for device is one year from date of purchase. In case of a warranty claim, the date of purchase has to be proven by means of the sales receipt or invoice.
- 2) Repairs under warranty do not extend the warranty period either for the device or for the replacement parts.
- 3) The following is excluded under the warranty:
 - All damage which has arisen due to improper treatment, e.g. nonobservance of the user instruction.
 - All damage which is due to repairs or tampering by the customer or unauthorized third parties.
 - Damage which has arisen during transport from the manufacturer to the consumer or during transport to the service centre.
 - Accessories which are subject to normal wear and tear.
- 4) Liability for direct or indirect consequential losses caused by the unit is excluded even if the damage to the unit is accepted as a warranty claim.



CURRENT SOLUTIONS™

Manufactured for:
Current Solutions™ LLC
3814 Woodbury Drive
Austin, TX 78704
Ph:(800)871-7858
www.currentsolutionsnow.com