



FILL CONTROL | HIGH-LOW SENSING

Electronic optical "liquid level control system" includes two liquid sensors for high and low fill control of water with a standard water control solenoid valve. Simply install the valve and wire the kit according to the instructions below. The system automatically fills the tank by opening and closing the valve; no other control system is required.

How It Works

The low-level sensor turns on a valve until the high-level sensor is reached.



Installation


- 1. Mark the tank wall at the desired high and low points.
- 2. Thick-Wall: Drill 7/16" holes and tap with a 1/4 NPT tap. Thread sensors into holes. Thin-Wall: (3/16" & under): Drill a 17/32" hole, place o-ring on sensor & nut inside tank.
- 3. Tighten sensor and check for leaks. Use teflon tape with tapped holes.
- 4. Make electrical connections according to the diagrams below.

WARNING: DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury. Failure to comply with these instructions could result in death or serious injury.

Wiring Diagram

NOTES:

- 1. Check sensor type marking through hex head.
- 2. Use o-ring & nut in thin, flat-wall tanks. Locate o-ring between sensor hex head and outside tank wall.
- 3. Customer must provide two-conductor wire cable (minimum 22AWG) to connect valve to sensors.

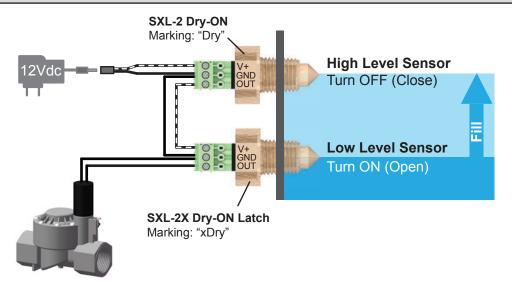

Sensor/LED Status

| Status | Full | Mid-Level | Low | Filling |
|-------------|-----------------------------|-----------------------------|-------------------|----------------------------------|
| High Sensor | Sensor OFF, LED Flash/10sec | Sensor ON, LED ON | Sensor ON, LED ON | Sensor ON, LED ON |
| Low Sensor | Sensor OFF, LED OFF | Sensor OFF, LED Flash/10sec | Sensor ON, LED ON | Sensor ON, LED ON FlashOFF/10sec |

Specifications Kits **Individual Sensors** Voltage Input: 5-24Vdc SXL-2 SXLF **Output Current:** Max 1A (sourcing) **Current Consumption:** 20mA per sensor High & Low FILL Sensor Kit 2: High Fill Sensor Mounting Thread: 1/4" NPT 2X: Low Fill Sensor Hex Size: 3/4" (19mm) VX1-K Body Material: Polysulphone -20 to 80°C (non-freezing) Temperature Range: Kit with 12 Vdc Power Supply Wire Gauge: 26 - 16 AWG 1: 1" NPT valve 2: 2" NPT valve See SXL and RX1 manuals or contact Agrowtek Inc. for warranty terms and conditions. Electric Water Valve