

Fyrite[®] User Software Installation Guide

Instruction Manual 0024-9465

1. Introduction

This instruction manual describes how to install Fyrite[®] User Software onto computers that run under the Windows XP, Windows Vista, and Windows 7 operating systems. (Note that the Fyrite User Software is not compatible with Windows operating systems prior to Windows XP.) Select the appropriate installation section based on your operating system.


2. Installation: Windows XP

After the CD is loaded, the Setup window will be displayed. Click on OK. If applicable, wait for the Net 3.5 Framework set up to complete. Then follow the instructions listed below.


1. Click on OK.



2. Wait for Net 3.5 Framework set up completion (optional)

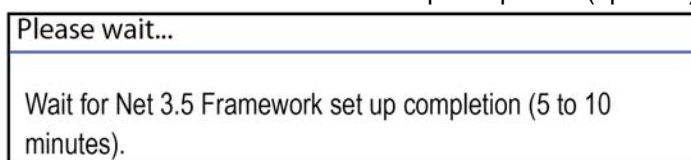

3. Click on Next.

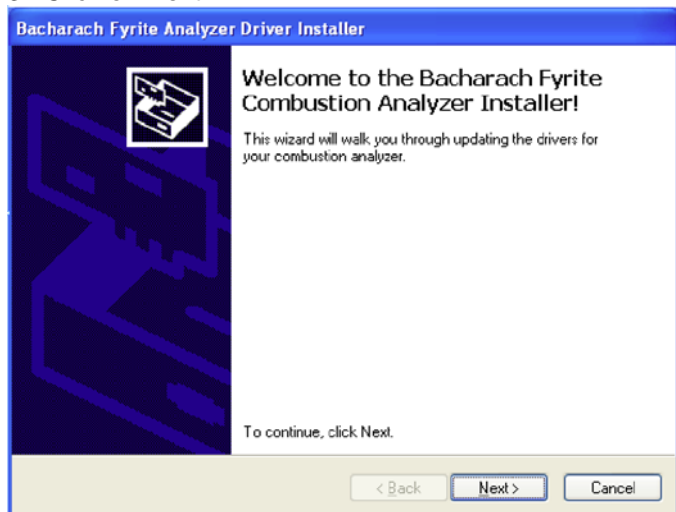


5. Click on Next.


4. Click on Finish.




6. Click on Next.

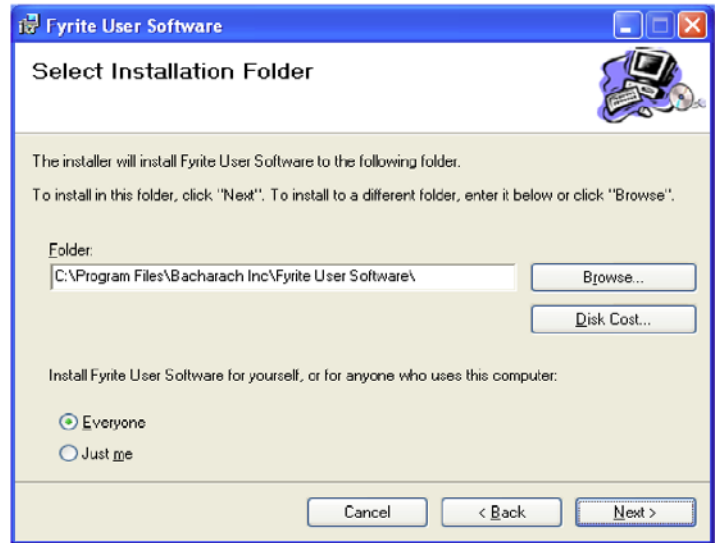


7. Click on Next.

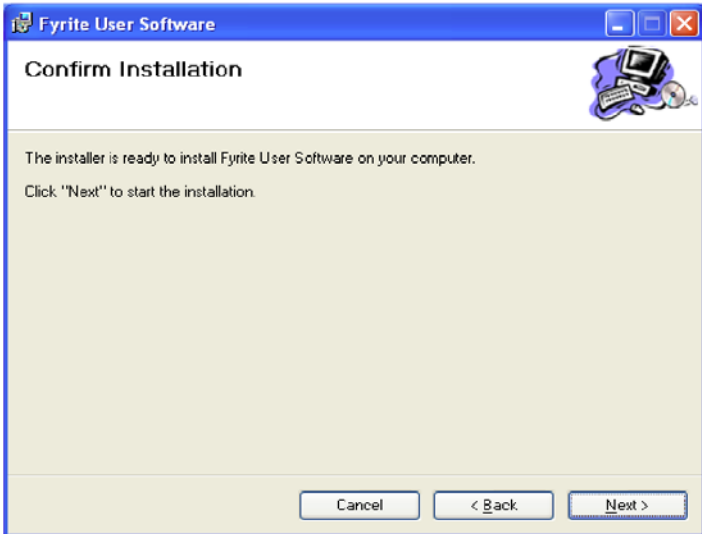

8. Click on Close.

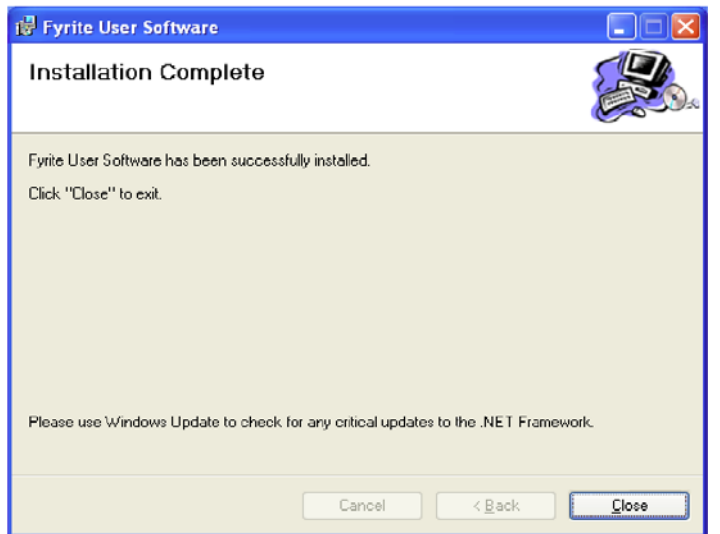

9. Click on OK.

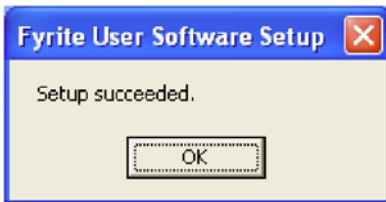

10. After installation:

- Open Fyrite® User Software via the desktop icon.
- Connect the instrument to the PC with a USB cable.
- Power up the unit.
- When first connected, a "Found New Hardware Wizard" screen will be displayed.


11. Select “No, not this time”. Click on Next.



12. Click on “Continue Anyway”.



13. Click on Finish.

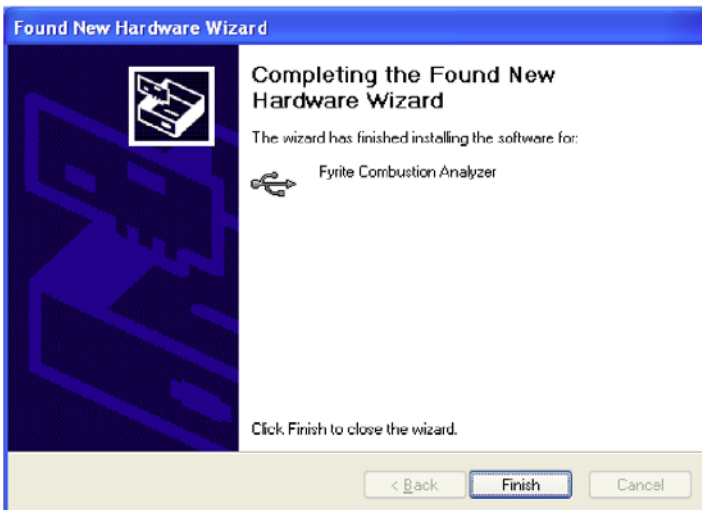


14. For further information about the use of this product, refer to the Fyrite user manual.


3. Installation: Windows Vista

After loading the CD, the Security window will be displayed. Click on OK. If applicable, wait for the Net 3.5 Framework set up to complete. Then follow the instructions listed below.


1. Click on OK.

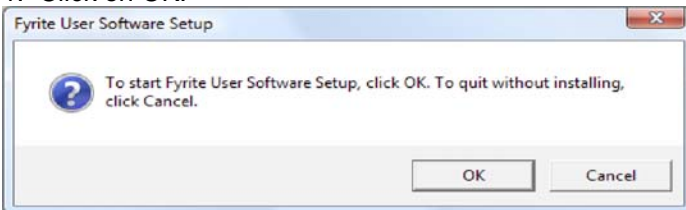


2. Wait for Net 3.5 Framework set up completion (optional)

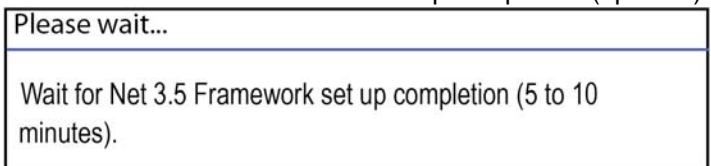


3. Click on Continue.

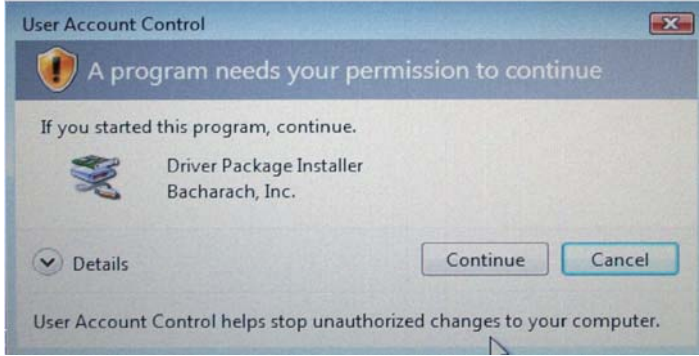


4. Click on Next.

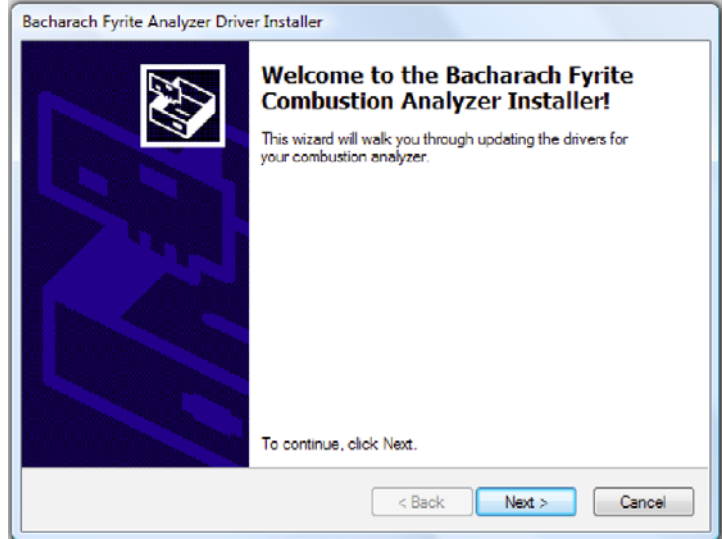


5. Click on Install.

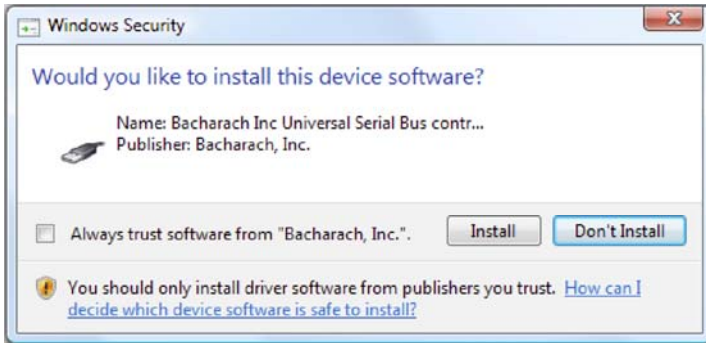

6. Click on "Install this driver software anyway".

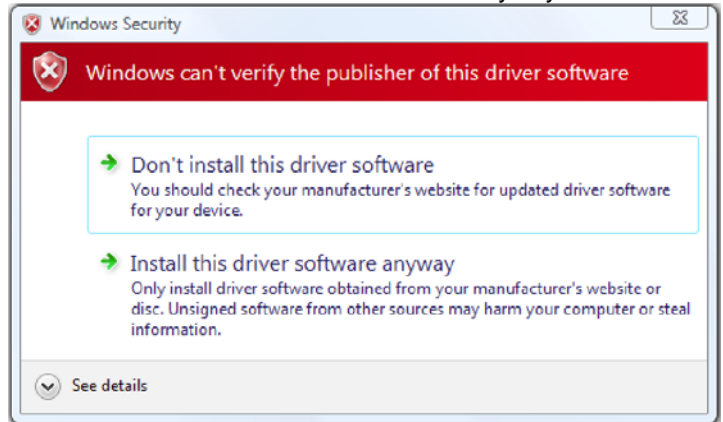


7. Click on Finish.

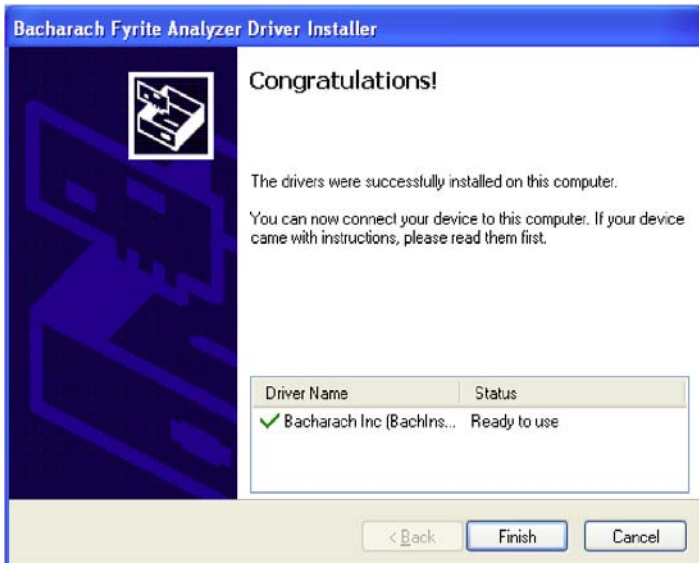


8. Click on Next.




9. Click on Next.

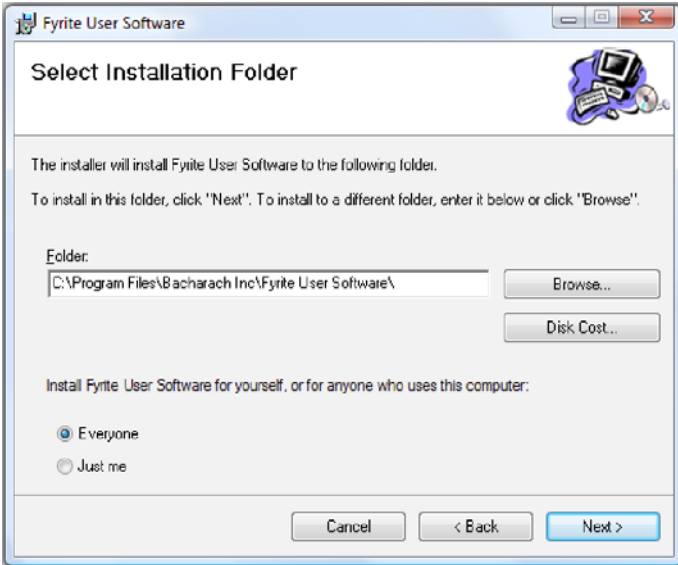


10. Click on Next.

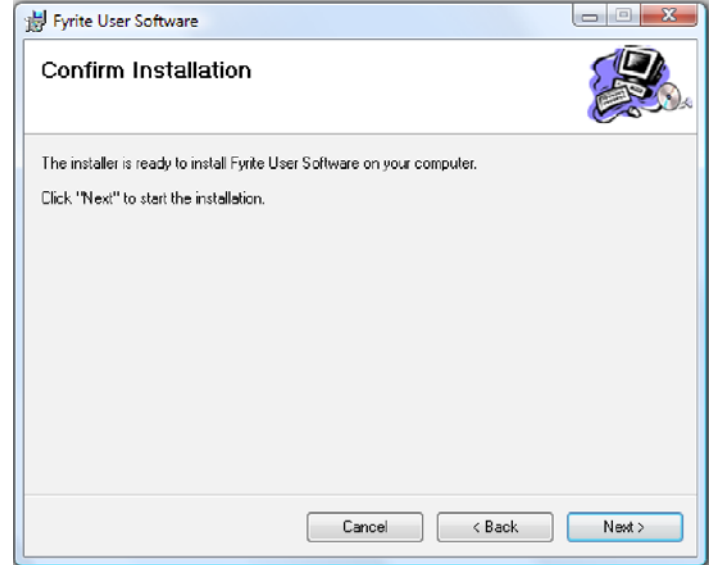


11. The installation will progress. Click Continue.

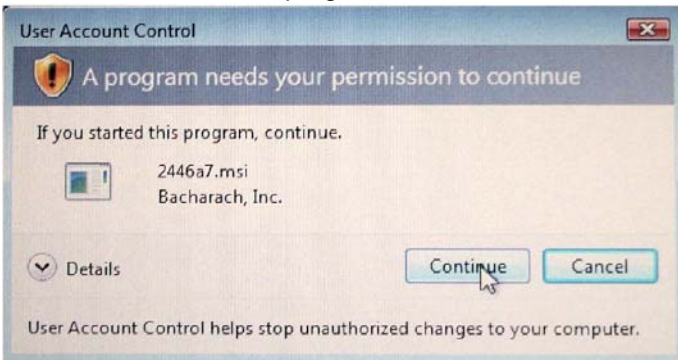

12. The installation will progress. Click on Close.

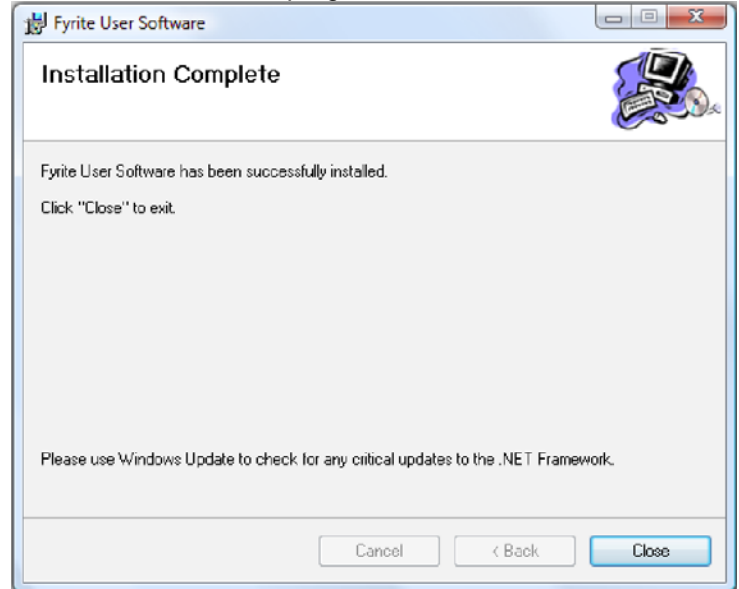

13. Click on OK.

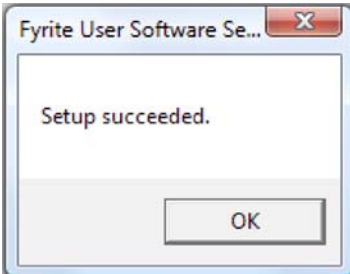


14. After installation

- Open Fyrite® User Software via the desktop icon.
- Connect the instrument to the PC with a USB cable.
- Power up the unit.
- When first connected, a “Found New Hardware Wizard” screen will be displayed.

15. Select “No, not this time”. Click on Next.



16. Select “Install software automatically”. Click on Next.

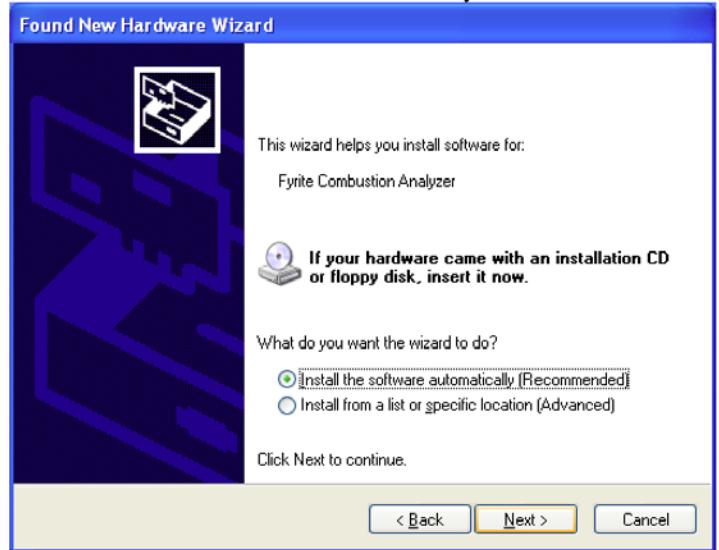

17. Click on “Continue Anyway”.



18. Click on Finish.




19. For further information about the use of this product, refer to the Fyrite® user manual.


4. Installation: Windows 7

After loading the CD, the AutoPlay window will be displayed. Click on Run Setup.EXE. If applicable, wait for the Net 3.5 Framework set up to complete. Then follow the instructions listed below.


1. Click on Run Setup.exe.

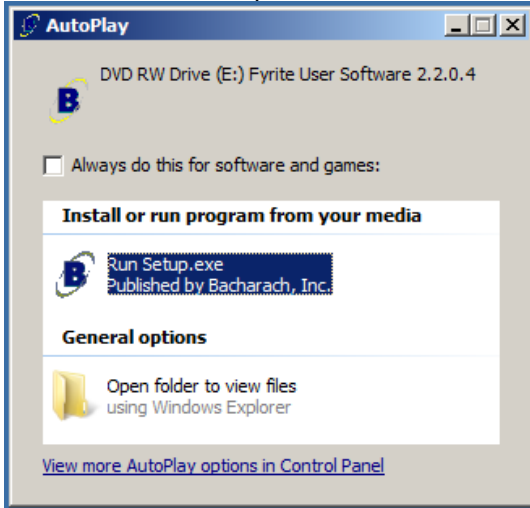


2. Wait for Net 3.5 Framework set up completion (optional).

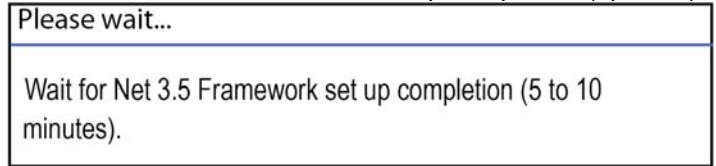


3. Click on OK.

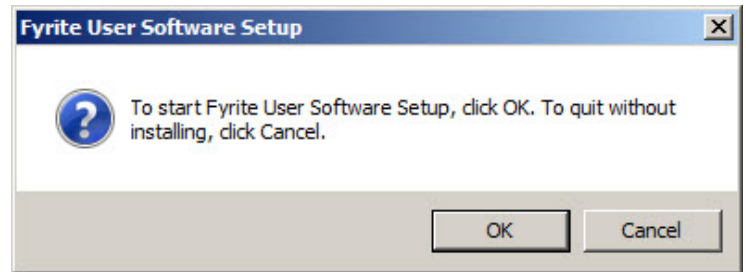

4. Click on Next.

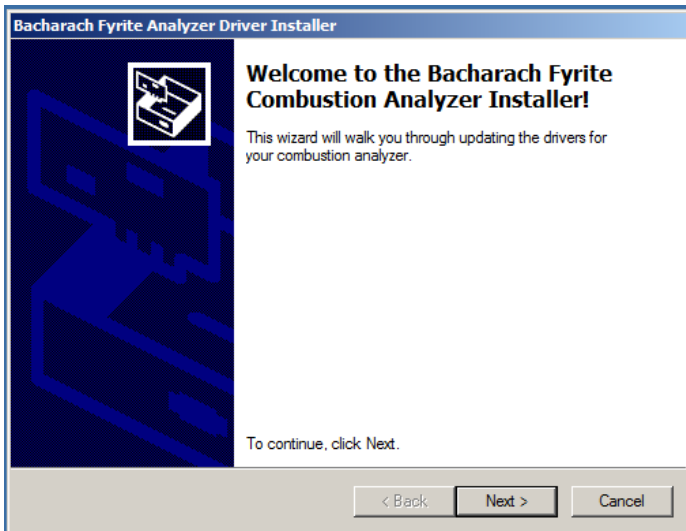


5. Click on Finish.

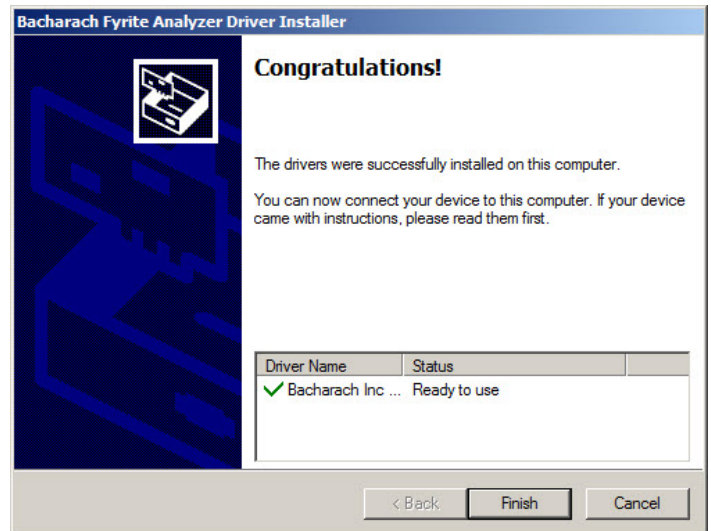


6. Click on Next.




7. Click on Next.

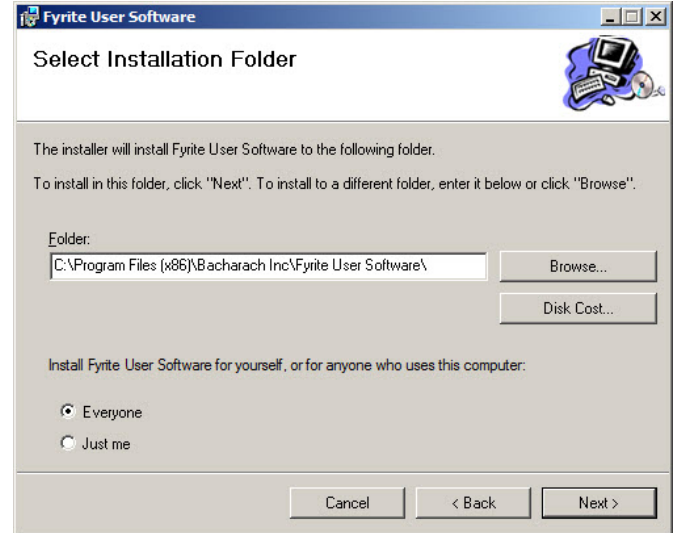


8. Click on Next.

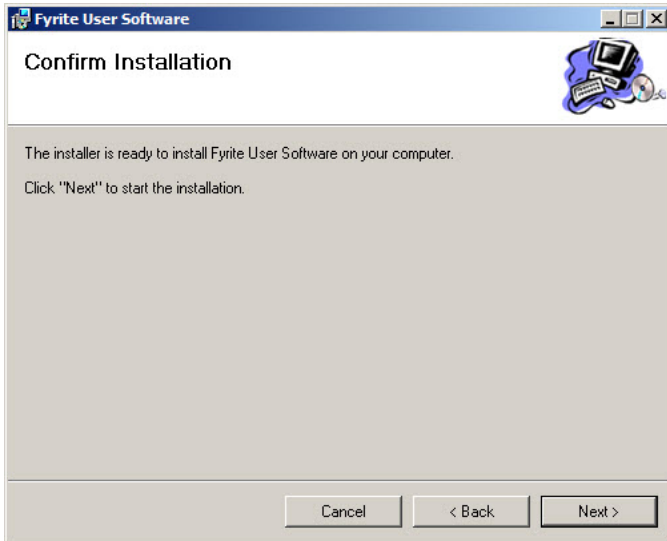


9. Wait for software to be installed.

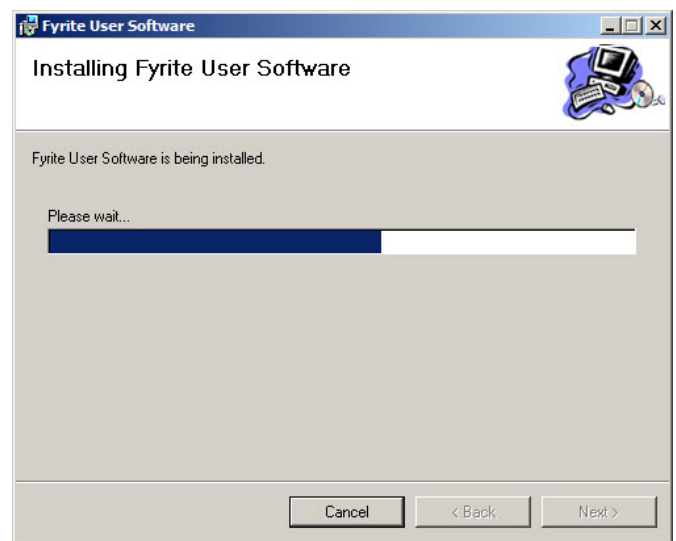

10. Click on Close.

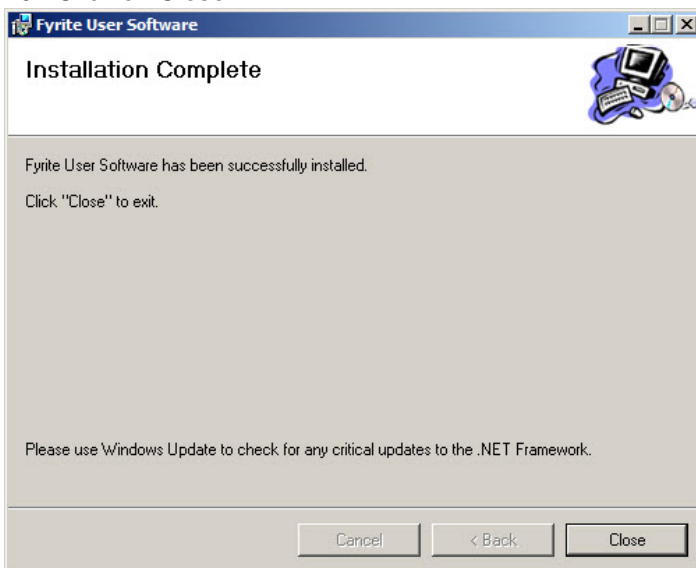

11. Click OK.

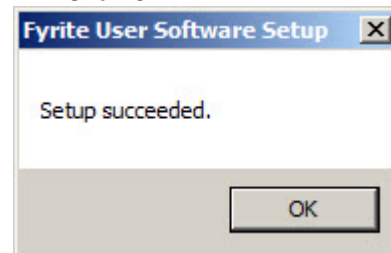


12. After installation
 - Open Fyrite® User Software via the Start menu.
 - Connect the instrument to the PC with a USB cable.
 - Power up the unit.
 - When first connected, a “Found New Hardware Wizard” screen will be displayed.

13. For further information about the use of this product, refer to the Fyrite® user manual.


5. Fyrite® User Software Overview

This section shows sample menu screens of the Fyrite® User Software. Note that your screens may vary depending on the instrument that is connected.

Main Screen

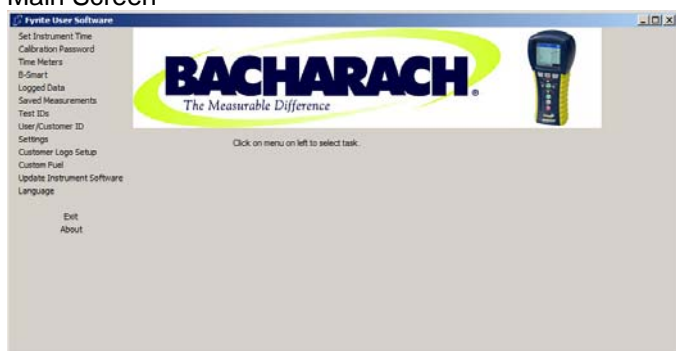

Set Instrument Time

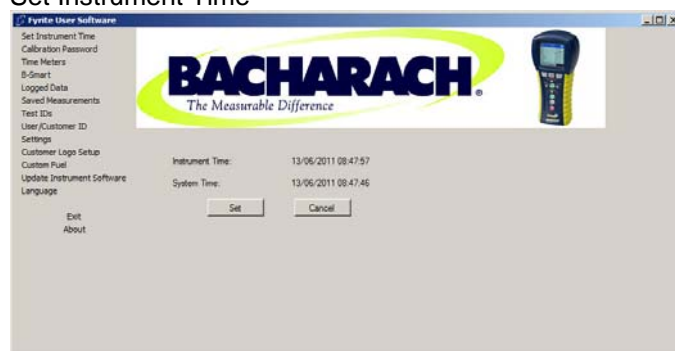

Calibration Password



Time Meters




B-Smart



Logged Data



Saved Measurements

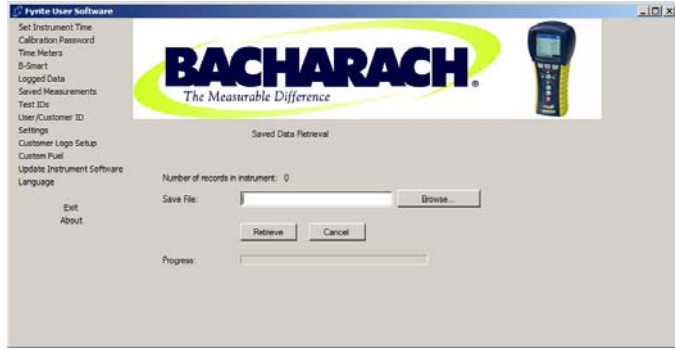

Test IDs



User/Customer ID



Settings



Customer Logo Setup



Custom Fuel



Update Instrument Software



Language



NOTES:



Headquarters:
621 Hunt Valley Circle, New Kensington, PA 15068-7074
Toll Free: 1-800-736-4666 • Tel: +1-724-334-5000 • Fax: +1-724-334-5001
Website: www.MyBacharach.com • E-mail: help@MyBacharach.com

