



Copyright

All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior permission of Testo AG.

We reserve the right to modify the technical data contained in the descriptions, data and graphics in this documentation.

Testo AG
Postfach 11 40
79849 Lenzkirch
Germany

Microsoft®, Windows®, Excel® and Internet Explorer® are registered trademarks of the Microsoft Corporation.

Introduction

Dear Customer

Thank you for purchasing a Testo product. We hope you will enjoy the benefits of this product for a long time to come and that it will help you with your work.

Please take the time to read the instruction manual carefully and make sure you become familiar with how the instrument operates before using it.


If there are any problems, which you cannot solve yourself, please contact our Customer Service Department or your nearest distributor. We will do our best to help you quickly and competently to reduce downtimes.

General information

Warnings and particularly important information, which has to be observed when working with this product, are highlighted in this instruction manual as follows

Warnings

Warnings are marked by a warning symbol. The appropriate **Warning title** indicates the danger level:

	Warning! means death or serious physical injury may occur if the specified safety measures are not carried out.
Warning title!	Caution! means minor physical injury or damage to property may occur if the specified safety measures are not carried out.
	▶ Read all the warnings carefully and carry out the specified safety measures to avoid danger.

Important information

! Particularly important information is highlighted in this instruction manual by an exclamation mark.

Standards

CE The conformity certificate confirms that this product fulfills the guidelines in accordance with 2004/108/EEC.

Contents

- Copyright2
- Introduction / General information3
- Contents4
- 1. Basic safety instructions6
- 2. Intended use7
- 3. Initial operation8
- 4. Display and control elements9
 - 4.1 Display9
 - 4.2 LED functions10
 - 4.3 Display sequence10
 - 4.4 Button functions11
- 5. Mounting12
 - 5.1 Mounting the wall holder12
 - 5.2 Securing the data logger with lock12
 - 5.3 Transportable unit12
- 6. Connecting probes13
- 7. Programming14
 - 7.1 Installing software14
 - 7.2 Connecting data logger to PC14
 - 7.3 Setting up connection15
 - 7.4 Opening the connection16
 - 7.5 Programming the data logger17
 - 7.6 Closing the connection23
- 8. Reading out data24
- 9. Changing the battery25
- 10. Error messages.....26

11. Technical data	27
11.1 testo 175-T1	27
11.2 testo 175-T2	28
11.3 testo 175-T3	29
11.4 testo 175-S1, testo 175-S2	30
11.5 testo 175-H1	31
11.6 testo 175-H2	32
11.7 Battery life	33
12. Accessories / Spare parts	34

1. Basic safety instructions

Please read through the following safety instructions carefully:

Avoiding electricity:

- ▶ Never use the instrument and external probes to measure on or near live parts if the instrument is not expressly approved for current and voltage measurement!

Product safety:

- ▶ Prior to each measurement, check if the connections are connected properly via the blind plug and if the right probe is correctly inserted. Otherwise the protection class specified in the Technical data cannot be guaranteed.
- ▶ The logger should only be operated within the parameters specified in the Technical data.
- ▶ Please handle the logger with care.
- ▶ The instrument should only be opened if expressly described in the instruction manual for maintenance purposes.
- ▶ Force should never be applied!
- ▶ **Only for testo 175-T3**
The probe sockets in testo 175-T3 are not isolated from one another. Please take note of this when using surface probes with a non-insulate thermocouple.

Disposal:

- ▶ Please dispose of spent batteries responsibly.
- ▶ You can return your logger directly to us at the end of its service life. We will dispose of it responsibly.

2. Intended use

The **testo 175** data loggers are used to save and read out separate readings and measurement sequences. The readings are measured, saved and transmitted to a PC, to the **testo 575** fast printer or to the **testo 580** data collector per infrared using **testo ComSoft** software.

Applications

testo 175 - T1

User-friendly and affordable temperature monitoring during transport, in refrigerated rooms, in display cabinets, in containers, when monitoring rooms

Fulfills guidelines in accordance with EN 12830 standards *

testo 175 - T2

Simultaneous product and air temperature monitoring during transport, in refrigerated rooms, in containers, during production

Fulfills guidelines in accordance with EN 12830 standards *

testo 175 - T3

Simultaneous product and air temperature monitoring in technical laboratories, during production, in the domestic building sector, during metal processing

testo 175 - S1 / S2

Easy checks on current and voltage circuits in industrial processes, in laboratories, in control systems, during development, in production, when logging transmitter signals



See **6. Connecting probes**, P. 13!

testo 175 - H1

Reliable monitoring of humidity and temperature values during industrial processes, in laboratories, in museums, in warehouses, for domestic building sector

testo 175 - H2

Reliable monitoring of humidity and temperature values during industrial processes, in laboratories, in museums, in warehouses, in domestic building sector

* In accordance with EN 12830, please ensure that a regular check and calibration in accordance with EN 13486 (recommendation: once a year) is carried out on this instrument. Please contact us for more detailed information.

Only for testo 175 - T1 and testo 175 - T2



The following components of the product are designed for continuous contact with foodstuffs in accordance with the regulation (EG) 1935/2004:

The measurement probe up to 1 cm before the probe handle or the plastic housing. If provided, the information about penetration depths in the instruction manual or the mark(s) on the measurement probes should be noted.

3. Initial operation

The data loggers have the defaults below:

Type	175-T1	175-T2	175-T3	175-S1	175-S2	175-H1	175-H2
Start criterion	Key start						
Measuring rate	5 min.	5 min.	10 s	1 s	1 s.	1 min.	1 min.
Stop criterion	Wraparound memory		Until memory is full			Wraparound memory	
Alarm values	Respective measuring range full-scale values (See Technical data)						
Display	On		-	On	-	On	
LEDs	Status led (green): Off / Alarm led (red): On						
Measurement channels	All channels switched on*						
Fast printer / data collector function	Stop: Switched on New programming: Switched on						
Protocol name	testo175- {Type} _ {Serial number}						

- * **testo 175-T3**: T/C -Type "K" programmed
- testo 175-S1**: "0 to 10V" programmed
- testo 175-S2**: "0 to 10V" programmed


The data logger with the above factory defaults can be used immediately.

If you wish to use other measurement criteria, you will have to program your data logger in accordance with your requirements using **testo ComSoft** software (See **7. Programming**, P. 14).

External probes can be attached to many of the data loggers (See **6. Connecting probes**, S. 13).

4. Display and control elements

4.1 Display

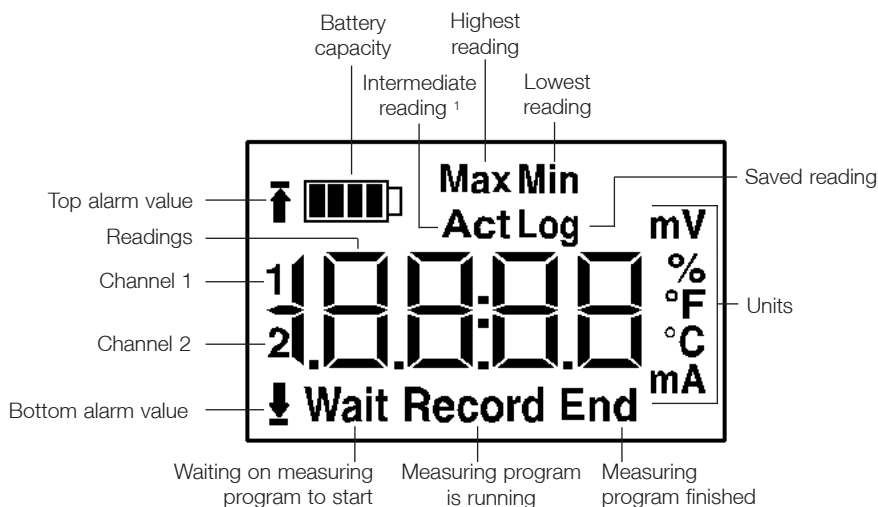

The following units are shown in the **175 - S2** data logger display: mV, %, °F, °C and mA.

No unit appears in the display if other units are selected in ComSoft. The selected unit is displayed in the readings if the saved data is imported to ComSoft.

! The display function can be activated/deactivated via the **testo ComSoft** software. The **testo 175-S1** and **testo 175-H1** data loggers do not have a display.

testo 175-T1, testo 175-T2, testo 175-T3, testo 175-H2 and testo 175-S2:

¹ Intermediate readings are shown in the display but are not saved.

! Due to technical reasons, the display speed of the liquid crystals slows down at temperatures below 0 °C (approx. 2 s at -10 °C, approx. 6 s at -20 °C). However, this does not have any influence on the accuracy of the measurement.

Battery capacity ²

Symbol ³	Capacity
	75-100%
	50-75%
	25-50%
	10-25%
	<10%
	Battery empty (measuring program was stopped)

► Reading out data and changing battery (See **9. Changing battery**, P. 25)

² Reference values (See **11.7 Battery life**, P. 33)

³ The battery symbol is updated when:

- the wraparound memory is full
- measurement program is started/ended
- In *Record* mode:
 - Once a day
- the *GO* button is pressed:
 - if last measurement was more than 24 hours ago

4. Display and control elements

4.2 LED functions



! The LED functions can be switched on/off via **testo ComSoft** software.

In all modes:

The Alarm led flashes three times every 15 seconds if the remaining battery capacity is less than 10% (even if Alarm led is deactivated).

Wait mode and Key start start criterion programmed:

The status led flashes five times if the *GO* button is kept pressed for approx. 3 s (even if the Status led is deactivated). It is confirmation that the measuring program was started and that the data logger is now in the *Record* mode.

Record mode:

The Alarm led flashes once every 15 s if alarm values have been exceeded (only if Alarm led is activated).

The Status led flashes once every 15 s (only if the Status led is activated). It is confirmation that the measuring program is running.

The Status led flashes five times if the *GO* button is kept pressed for approx. 3 s (even if Status led is deactivated). It is confirmation that a time mark has been set.

4.3 Display sequence

Depending on the mode, different information can be displayed in the data loggers with display. You will find a detailed description of the information which can be called up in the short version of the instruction manual enclosed with every data logger.

4. Display and control elements

4.4 Button functions



In all modes in data loggers with display:

- ▶ Press the *GO* button to switch between the displays.

Wait mode and Key start start criterion programmed:

- ▶ Press the *GO* button for approx. 3 s to start the measuring program.
 - The measuring program starts, *Record* appears in the display (if available) and the Status led flashes five times.

Record mode:

- ▶ Press the *GO* button for approx. 3 s to set a time mark.
 - The Status led flashes five times.

Time mark: This function enables you to monitor and read out/print out the memory content from a specified point in time (*time mark*) without having to reprogram the data logger. The readings from *Start (All readings)* are also saved.

The readings from *Start (All readings)* or *From time mark* can be read out on the **testo 575** fast printer or the **testo ComSoft** software.

The readings from *Start (All readings)* can be read out on the **testo 580** data collector.


- ! Only one time mark can be set. If the *GO* button is pressed for approx. 3 seconds in the *Record* mode, the existing time mark is deleted and a new time mark is set up.
 - The readings (max./min. values, exceeding of alarm values) are shown in the display (if available) from the set time mark.

5. Mounting

5.1 Mounting the wall holder

! Mounting materials (e.g. screws, dowels) are not included.

- 1 Position the wall holder at the required location.
- 2 Using a pencil or similar, mark where the fixing screw is to go.
- 3 Prepare the area for mounting (e.g. drill a hole, put in dowel).
- 4 Mount the wall holder using a screw which fits.

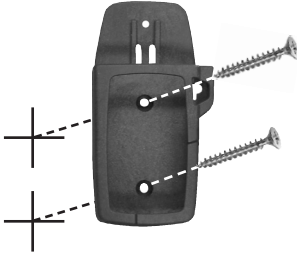

5.2 Securing the data logger with a lock

- 1 Insert the data logger into the wall holder.
- 2 Place the retainer key in the wall holder.
- 3 Attach the lock to the wall holder (Accessory: Part no. 0554 1755).



5.3 Transportable unit

A unit can be made out of the wall holder, logger and the interface to make transport or dispatch easier.

- 1 Push the data logger into the wall holder.
- 2 Push the interface onto the wall holder.
- 3 Secure the unit by connecting the wall holder and the interface using the screw supplied.



6. Connecting probes

Observe the following points when connecting the probes to the data logger and to the measurement points:

- ▶ Observe poles of plug.
- ▶ Insert the plugs firmly into the connections to guarantee that they are properly in place. Force should not be used.
- ▶ Ensure that the plugs are firmly attached to the data logger or that the connections are in place with a blind plug.
- ▶ Ensure that the probe is positioned properly to avoid disturbing influences on the measurement.



testo 175-T3:

- ▶ Ensure that each respective configured probe is connected to the socket (via **testo ComSoft** software). The numbers of the connections are printed on the housing!

testo 175-S1/S2:

The testo 175-S1/S2 data logger is designed for use in electric circuits in measurement technology, automatic control, information technology in process, laboratory and technical systems (0 to 20mA current loop; 0-1V, 0-10V voltage sockets).



Warning!

Strong currents and high voltage!

Electric shock!

- ▶ The **testo 175-S1** and **testo 175-S2** data logger should only be connected to electric circuits from the SELV (safety extra-low voltage) or PELV (protective extra-low voltage) category.
- ▶ The **testo 175-S1** and **testo 175-S2** data logger should only be connected to direct current circuits. Rated voltage should only be max. 60 V DC.
- ▶ The electric circuits in the data logger should only be set up, connected, operated and maintained by trained personnel.
- ▶ Disconnect the measurement leads from the logger before changing the battery.



- ▶ Connect the cables by following the printed connection plan.

7. Programming

7.1 Installing software

In order to program your data logger in accordance with your individual needs, you will need a PC on which the **testo ComSoft** software is installed.

You will find instructions on the installation and operation of the software in the **testo ComSoft** instruction manual.

- ▶ Continue with **7.2 Connecting data logger to PC**, P. 14 once the software is successfully installed.

7.2 Connecting data logger to PC

You will need a free serial interface (RS232) or a USB interface to connect the data logger interface to your PC.

1 Connect the serial connection cable or USB connection cable of the interface to your PC.

2 Connect the interface to the connection cable.

3 Insert the interface in the desk-top holder.

4 Place the logger in the desk-top holder.

! The interface can be placed directly in the wall holder. In this way, the data can be read out directly on location.

Ensure that the interface is completely plugged on and snapped into place. Otherwise the connection is not guaranteed.

5 Start the **testo ComSoft** software.



7.3 Setting up the connection

- 1 Start **testo ComSoft** software.

testo Comsoft 4:

- 2 Select *IStart > New device*.
- The *New device setup wizard* opens.

testo Comsoft 3:

- 2 Select *Instrument > Autodetect...*
- *Autodetect* opens.
 - The connection to the data logger found is set up automatically and the name of the connection appears in the *Data* window.


-or-

- 2 Select *Instrument > New device*

- The *New device setup wizard* opens.

- 3 Select *testo175-177* in Device selection and click on *Next*.

- 4 Select the interface in *Connection*, with which you have connected your data logger to your PC and click on *Next*.

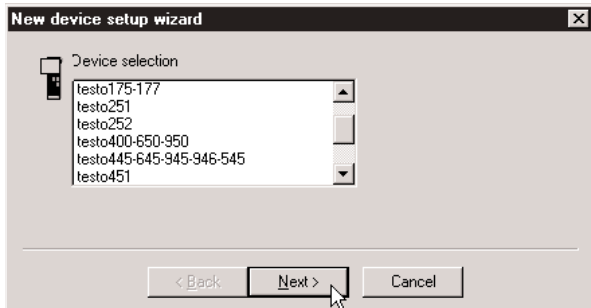


- 5 Enter a name for the connection and click on *Finish*.

7. Programming

Confirmation of battery change

- If the data logger is used for the first time or the data logger battery has been changed, the *New battery* window opens.

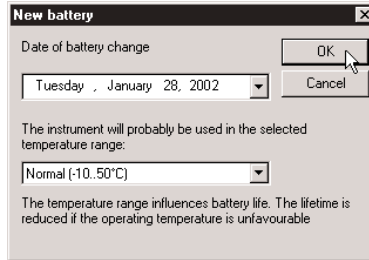

- ▶ Enter the date when the battery was changed.
- ▶ Enter the temperature range in which you will use the data logger and confirm with *OK*.
- The connection to the data logger is set up. The name of the connection appears in the *Data* window.

7.4 Opening the connection



- ▶ Click twice on the connection, which you want to open, in the *Data* window.
- If a protocol is saved in the data logger, the protocol symbol and the title appear under the opened connection.




- ! The readings saved in the data logger are not transmitted to the PC when the connection is opened. Carry out the following to transmit the readings:
 - ▶ Click twice on the title of the protocol (See **testo ComSoft** software instruction manual).

Use one connection for several data loggers

- ! You can connect different data loggers once a connection has been set up. The connection must be closed when changing the data logger and then opened again for the new data logger. Otherwise, it cannot be identified by the software (See **7.6 Closing the connection**, P.23).

7.5 Programming the data logger

- ! Any readings in the data logger are deleted if the data logger is programmed.
 - ▶ Read out any data from the data logger which may exist before programming (See **testo ComSoft** software instruction manual).
 - ▶ Select *Start* (Comsoft 4) or *Instrument* (Comsoft 3) > *Device control*.
- ! This function is only activated if the name of the connection is highlighted. If this is not the case:
 - ▶ First click on the name of the connection so that it is highlighted and then select *Start* (Comsoft 4) or *Instrument* (Comsoft 3) > *Device control*.
- The window for programming the data logger opens.

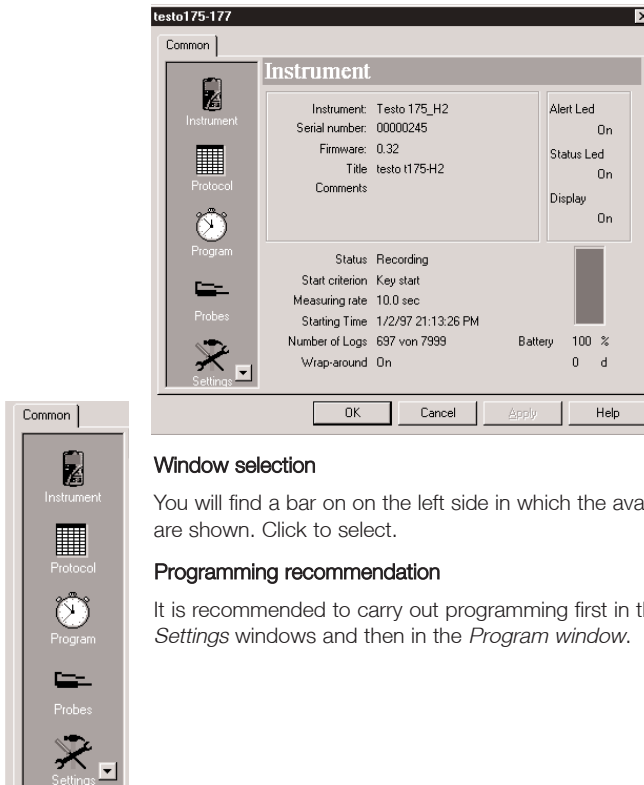

Window selection


You will find a bar on the left side in which the available windows are shown. Click to select.

Programming recommendation

It is recommended to carry out programming first in the *Probes* and *Settings* windows and then in the *Program* window.


7. Programming

Instrument

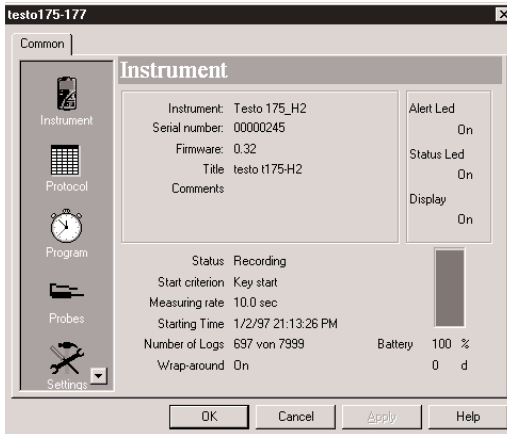

You can read general information on the data logger in the *Instrument* window.

! This window is a pure information window. Programming is not possible.


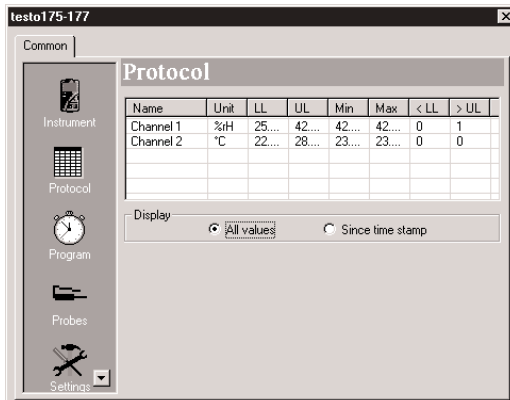


Protocol

You can read information from the protocol currently stored in the data logger in the *Protocol* window. You can choose to display *All values* and *Since time mark*.

! This window is an information window. Programming is not possible.

Probes

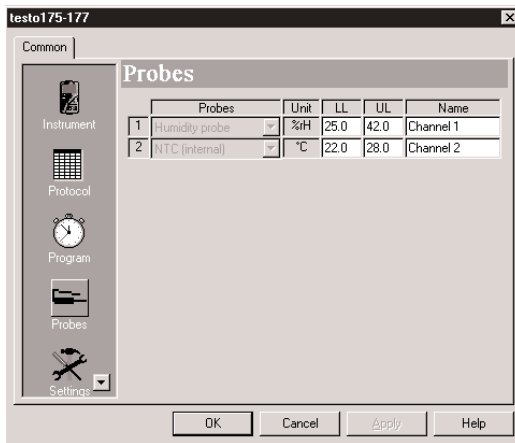

Probes:

- ▶ Activate the probes available or deactivate them.

Unit:

Displays the set unit for the respective channel.



- ! You cannot change the unit in this window, but in the *Settings*, window.



LL:

- ▶ The lower alarm limit for the channels is entered here.



UL:

- ▶ The upper alarm limit for the channels is entered here.









Name:

- ▶ Enter a name for the channel here.

7. Programming

Settings

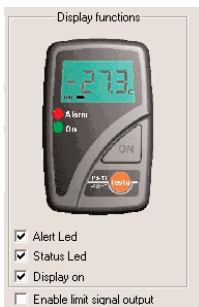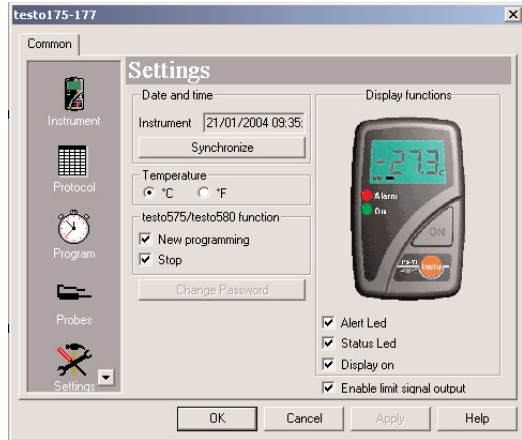

Date and time:

The set date and the time in the data logger are shown.

- ▶ Select *Synchronize* to synchronize the date and the time in the data logger with the clock in your PC.

! Date/Time can only be synchronized when the data logger is in the *Wait* or *End* mode.

Temperature:

- ▶ Select the required temperature unit for the temperature channels (°C or °F).

testo 575 / testo 580 - Function:

- ▶ Select whether the data logger is to be newly programmed (*New programming*) and stopped (*Stop*) via the **testo 575** fast printer and the **testo 580** data collector.

Display functions:


- ▶ Select whether the LEDs, the *Alert led*, *Status led* and *Display* on are to be activated in the data logger.

! Only the data display is deactivated when the display is switched off. Status information on mode and battery capacity are always shown.

Enable limit signal output

- ▶ From ComSoft Version 3.4 on, the external alarm signal output **testo 581** can be activated if connected to a data logger.

Program

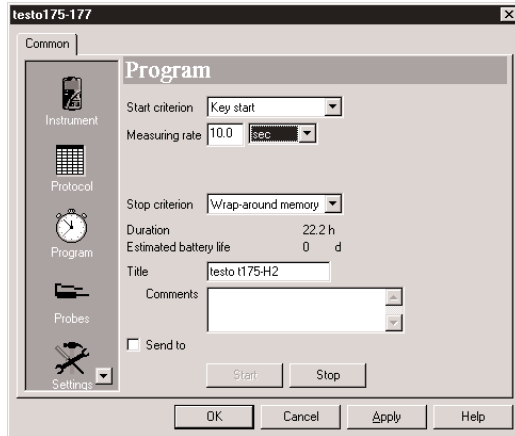


Start criterion:

- ▶ Select the required criterion for the start of the program.

You have the choice between *Date/Time*, *Key start* and *PC Start*.

If *Date/Time* is chosen, an additional field appears in which you can enter/select the required date/time.



Measuring rate:

- ▶ Select the time cycle in which the measurements are to be carried out.

You can choose between *sec* (seconds), *min* (minutes), *h* (hours) and *d* (days).


The smallest/largest measuring rate differs depending on the instrument type (Refer to **11. Technical data**, P. 27).

Stop criterion:

- ▶ Select the required criterion to stop the measuring program.

You can choose between *Until memory is full*, *No. of logs*, *Wraparound memory* and *Date / Time*.

! It is only possible to select *Date/Time* if *Date/Time* is also selected as *Start criterion*. If you choose *No. of logs* an additional field will appear in which the number of measurements required can be entered.



7. Programming

Duration 22.2 h

Duration:

Indicates running time of program calculated on the basis of the values for *Start criterion*, *Measuring rate* and *Stop criterion*.

If the *Wraparound* stop criterion is selected, the length of time until the memory is full is calculated.

Estimated battery life 500 d

Estimated battery life:

Indicates estimated battery life.

Title room 23

Title:

- ▶ Enter a Title for the measuring program.

Maximum 24 characters can be entered.

The title of the measuring program is accepted into the **testo ComSoft** software when the data logger is read out. The title will appear at the top of the printout when the protocol is printed on the **testo 575** printer.

Comments temperature control

Comments:

- ▶ Additional information on the measuring program can be entered here.

The entered text is printed on the **testo 575** printer printout. Up to 96 characters can be entered. The fast printer automatically enters return after every 24 characters.

Send to:

Send to example@testo.com

- ▶ Activate the function by clicking on the selection window and enter an e-mail address in the text box.

Once the measurement protocol has been opened in the **testo ComSoft** software, you can send it by e-mail via *testo-Logo* > *Senden* (Comsoft 4) or *File* > *Send ... by emai.* (Comsoft 3). The entered email address and the log are automatically saved in your e-mail.

- ! System requirement for this function:
 - Microsoft Windows 95 or newer and
 - Microsoft Internet Explorer 5.0 or newer.

Start

Start and Stop:

- ▶ Click on *Start* to start a measuring program..

- ! This function can only be selected if *PC start* has been selected as *Start criterion*.

Stop

- ▶ Click on *Stop* to end a measuring program.

- ! This function can only be selected if a measurement is running.

Programming ended



▶ Click on *Apply* to transmit the programming to the data logger.


! A measuring program can only apply in the data logger if it is in the *Wait* or *End* mode.

■ If a measurement is running (*Record* mode):

▶ Finish the measurement by clicking on *Stop*.



- The *Programming data* window opens to confirm the following programming.

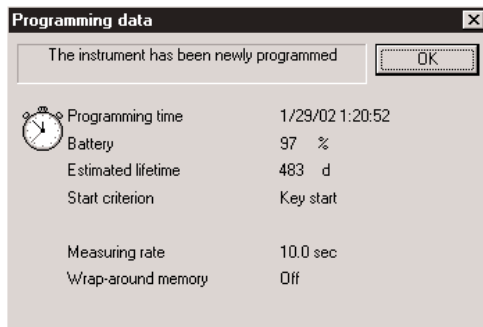

7.6 Closing the connection

1 Click on the connection you wish to close with your right mouse button in the *Data* window.

2 Select *Close*.

- The connection to the data logger is closed.

8. Reading out data

You have three options to read out data from the data logger:

1. Via **testo ComSoft** software. Data is transmitted directly to a PC.
Please read the Instruction manual on the **testo ComSoft** software.

testo ComSoft software is available in 2 versions with the following range of functions:

testo ComSoft 3 Basic

- Programming and reading out the **testo 174**, **testo 175** and **testo 177** data loggers
- Display and printout as table or diagram
- Data export (e.g. in Microsoft Excel)



testo ComSoft 3 Professional (0554.0830)

like **testo ComSoft 4 Basic**, but with the following additional features:


- Programming and reading out other Testo instruments such as **testo 400**, **testo 650**, etc.
- Display and printout as number box, histogram, form, analog instrument, parametric graph
- Data management function
- Analysis functions (compensation curve, mean function)
- Selection of different printing heads for table and graph printouts
- Adaptation of menus and range of functions
- Developer ToolBox with functions to incorporate the instrument driver in non-Testo software

2. Via the **testo 580** data collector.
Data can then be read out via **testo Comsoft** software.
For more information, refer to the **testo 580** Instruction manual.
3. Printout via **testo 575** fast printer
For more information, refer to the **testo 575** Instruction manual.

9. Changing the battery

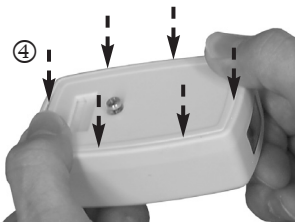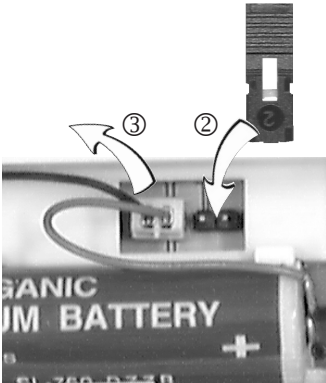

5

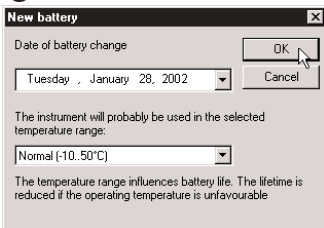

1 Please read out the saved data before changing the battery. See **testo ComSoft** software Instruction manual

! If it is not possible to read out the saved data due to low battery capacity, please carry out the following:

- ▶ First change the battery and then read out the saved data (no data will be lost).

2 Remove the screw at the back of the data logger using a small crosstip screwdriver.

3 Using a screwdriver, lift the back wall at the bottom of the data logger and then remove from data logger ①.

4 Attach the jumper (included with spare battery) to the plug connector beside the connection for the battery ②.

! The inserted jumper prevents the memory from being deleted or written over.

5 Take the battery out of the battery compartment and pull out the plug-in connection to the data logger ③.

6 Connect the new battery to the data logger's plug-in connection and place in battery compartment.

! Only original Testo spare batteries should be used (see **12. Accessories/Spare parts**, P. 34 for Part nos).

7 Remove the jumper from the plug connector.

8 Hold the back wall at a 45° angle to the top of the instrument and then flip down.

! Ensure that both O rings are positioned on the screw so as to guarantee that it is sealed completely.

9 Press the back wall onto the logger with your thumbs. Make sure that it is closed properly ④ and then secure using screw.

10 Place the data logger in the desk-top holder and attach to interface.

11 Start the **testo ComSoft** software and set up a connection to the data logger by clicking twice on the required connection with the left mouse button.



- The *New battery* window is opened ⑤.

- ▶ Enter the date of battery change.
- ▶ Enter the temperature range in which you will be using the data logger and confirm with OK.

- The data logger is now ready for use.

10. Error messages

If problems occur which are not described here, please contact Testo or your local distributor. For contact data, see back of this document or web page www.testo.com/service-contact

Error message	Possible causes	Remedy / Comments
<i>OFF</i> and <i>END</i> are lit,  flashes	Battery power too low	<ul style="list-style-type: none"> ▶ Read out data and change battery (See 9. Changing battery, P. 25) Communication with PC is possible. Communication with testo 575 fast printer/ testo 580 data collector is not possible.
<i>OFF</i> is lit	Battery empty	<ul style="list-style-type: none"> ▶ Change battery (See 9. Changing battery, P. 25) No communication with PC / testo 575 fast printer/ testo 580 data collector possible.
<i>OFF</i> , <i>END</i> and  are lit	Measuring program was cancelled by Reset	<ul style="list-style-type: none"> ▶ Reactivate data logger via testo ComSoft software
<i>PC</i> is lit	An attempt was made to start the data logger via <i>GO</i> : data logger indicates that <i>Start criterion PC Start</i> is programmed.	<ul style="list-style-type: none"> ▶ Start the data logger via PC or change the <i>Start criterion</i> to <i>Key start</i>.
<i>date</i> is lit	An attempt was made to start the data logger via <i>GO</i> : data logger indicates that <i>Start criterion Date/Time Start</i> is programmed.	<ul style="list-style-type: none"> ▶ Change <i>Start criterion</i> to <i>Key start</i>.
Red and green LEDs flash alternately five times	The <i>GO</i> button was pressed for more than 3 seconds in the <i>END</i> mode	No function is allocated.

11.1 testo 175-T1

Parameter	Temperature (°C/°F)
Sensor	NTC internal
Number of measuring channels	1 x internal
Measuring range	-35 to +70 °C
Accuracy	± 0.5 °C (-20 to +70 °C)
.....	± 1 °C (-35 to -20.1 °C)
.....	±1 digit
Resolution	0.1 °C (-20 to +70 °C)
.....	0.3 °C in remaining range
Measuring rate	10 s to 24 h (freely selectable)
Adaptation time t_{90} (internal)	Approx. 30 min. at wind speed 1m/s
Storage temperature	-40 to +85 °C
Operating temperature	-35 to +70 °C
Operating temperature/Display	-30 to +65 °C
Memory capacity	7,800 readings
Protection class	IP 68
Housing	ABS/TPE
Dimensions in mm (bxwxh)	82 x 52 x 30
Weight	90g
Battery	Lithium (1 AA)
Battery life	Typical: 2½ years*
.....(Measuring rate: 15 Min., Operating temperature: -10 to +50°C,	
.....Display: On, Status led (green LED): Off)	

* See Chapter 11.7 Battery life, P. 33

11. Technical data

11.2 testo 175-T2

Parameter	Temperature (°C/°F)
Sensor	NTC (intern+extern)
Number of measuring channels	2 (1x internal/1x external)
Measuring range	-35 to +70 °C internal -40 to +120 °C external
Accuracy, internal (System)	± 0.5 °C (-20 to +70 °C) ± 1 °C (-35 to -20.1 °C) ±1 digit
Accuracy, external (only Logger)	± 0.3 °C (-25 to +70 °C) ± 0.5 °C in the remaining range ±1 digit
Resolution	0.1 °C (-20 to +70 °C) 0.3 °C in remaining range
Measuring rate	10 s to 24 h (freely selectable)
Adaptation time t_{90} (internal)	Approx. 30 min at wind speed 1m/s
Storage temperature	-40 to +85 °C
Operating temperature	-35 to +70 °C
Operating temperature/Display	-30 to +65 °C
Memory capacity	16,000 readings
Protection class	IP 68
Housing	ABS/TPE
Dimensions in mm (bwxh)	82 x 52 x 30
Weight	84g
Battery	Lithium (1 AA)
Battery life	Typical: 2½ years*(Measuring rate: 15 min., Operating temperature: -10 to +50°C,Display: On, Status led (green LED): Off)

* See Chapter 11.7 Battery life, P. 33

11.3 testo 175-T3

Parameter	Temperature (°C/°F)
Sensor	T/C-Type K or T (external)
Number of measuring channels	2 (2x external)
Measuring range	-50 to +1000 °C (Type K) -50 to +400 °C (Type T)
Accuracy/Logger	±0.5 °C (-50 to +70 °C) ±0.7% of reading (+70.1 to +1000 °C) ±1 digit
Resolution	0.1 °C
Measuring rate	10 s to 24 h (freely selectable)
Storage temperature	-40 to +85 °C
Operating temperature	0 to +70 °C
Operating temperature/Display	0 to +65 °C
Memory capacity	16,000 readings
Protection class	IP 54
Housing	ABS/TPE
Dimensions in mm (bwxh)	82 x 52 x 30
Weight	90g
Battery	Lithium (1/2 AA)
Battery life	Typical: 2½ years* (Measuring rate: 15 Min., Operating temperature: 0 to +50°C, Display: On, Status led (green LED): Off)

* See Chapter 11.7 **Battery life**, P. 33

11. Technical data

11.4 testo 175-S1; testo 175-S2

Parameters	Current (mA) / Voltage (V)
Sensor	Built-in screwed contact socket
No. of measuring channels	1x external
Measuring ranges	0 to 1V / 0 to 10V0 to 20 mA / 4 to 20 mA
Accuracy/System	±2 mV (0 to 1 V) /± 20 mV (0 to 10 V) /±0.05 mA (0 to 20 mA)±1 digit
Resistances	
10V input	ca. 111 kΩ
1V input	ca. 11 kΩ
20mA input	Measurement resistance ca. 250 Ω
Resolution	1 mV (0 to 1 V) / 10 mV (0 to 10 V) /0.01 mA (0 to 20 mA)
Measuring rate	1 s to 24 h (freely selectable)
Storage temperature	-40 to +70 °C
Operating temperature	-10 to +50 °C
Memory capacity	16,000 readings
Housing	ABS/TPE
Dimensions in mm (l×w×h)	82 x 52 x 30
Weight	80g
Battery	Lithium (1/2 AA)
Battery life	Typical: 2½ years*(Measuring rate: 15 min., Operating temperature: -10 to +50°C,Display: On, Status led (green LED): Off)

* See Chapter 11.7 **Battery life**, P. 33

11.5 testo 175-H1

Parameters	Humidity (%RH) / Temperature (°C/°F)
Sensor	Humidity sensor / NTC
Number of measuring channels	2x internal
Measuring range	0 to 100 %RH (no condensation)-10 to +50 °C
Accuracy±0.5 °C±3 %RH at rated temperature +25°C±1 digit
Resolution0.1 °C0.1 %RH
Measuring rate	10 s to 24 h (freely selectable)
Storage temperature	-40 to +70 °C
Operating temperature	-10 to +50 °C
Memory capacity	3,700 readings
Housing	ABS/TPE
Dimensions in mm (bwxh)	82 x 52 x 30
Weight	80g
Battery	Lithium (1/2 AA)
Battery lifetime	Typical: 2½ years*(Measuring rate: 15 min., Operating temperature: -10 to +50°C,Display: On, Status led (green LED): Off)

* See Chapter 11.7 **Battery life**, P. 33

11. Technical data

11.6 testo 175-H2

Parameters	Humidity (%rF) / Temperature (°C/°F)
Sensor	Humidity sensor / NTC
Number of measuring channels	2x internal
Measuring range	0 to 100 %RH (no condensation)-20 to +70 °C
Accuracy	±0.5 °C±3 %RH at rated temperature +25°C±1 digit
Resolution	0.1 °C0.1 %RH
Measuring rate	10 s to 24 h (freely selectable)
Storage temperature	-40 to +85 °C
Operating temperature	-20 to +70 °C
Operating temperature/Display	-20 to +65 °C
Memory capacity	16,000 readings
Housing	ABS/TPE
Dimensions in mm (bwxh)	82 x 52 x 30
Weight	84g
Battery	Lithium (1/2 AA)
Battery life	Typical: 2½ years*(Measuring rate: 15 min., Operating temperature: -10 to +50°C,Display: On, Status led (green LED): Off)

* See Chapter 11.7 Battery life, P. 33

11.7 Battery life

Typical approximate values for the expected battery life are included in the programming windows of the software. These values are calculated on the basis of the following factors:

- Measuring rate
- Number of probes connected
- Status led (green LED) activated/deactivated

The calculated data is only an approximation since the battery life depends on many additional factors.

The following factors have a negative influence on the battery life:

- Alarm LED flashing for longer periods of time
- Frequent reading out (several times a day)
- Strong fluctuations in operating temperature

The following factors have a positive influence on the battery life:

- Deactivated Status led (green LED) particularly in the case of extended measuring rates

- ! The battery capacity displayed is based on calculated values.
- The data logger can be switched off if a critical power level has been reached. The following could occur:
 - The logger continues to take readings although the display indicates that the battery capacity is "empty".
 - The measuring program is stopped even though the battery capacity display indicated a short time previously that battery capacity was available.












- ! Saved readings are not lost if the battery is spent or changed. Requirement:
 - The battery is changed by following the directions in the instruction manual.

12. Accessories/Spare parts

Description	Part no.
testo 175-T1 (1 channel temp. internal, display, wall holder, calibration protocol)	0563 1754
testo 175-T2 (2 channel temp. internal/external, display, wall holder, calibration protocol)	0563 1755
testo 175-T3 (2 channel temp. external (for T/C), display, wall holder, calibration protocol)	0563 1756
testo 175-H1 (2 channel/temp. internal, wall holder, calibration protocol)	0563 1757
testo 175-H2 (2 channel humidity/temp. internal, display, wall holder, calibration protocol)	0563 1758
testo 175-S1 (1 channel current/voltage, built-in screwed contact socket, wall holder, calibration protocol)	0563 1759
testo 175-S2 (1 channel current/voltage, display, built-in screwed contact socket, wall holder, calibration protocol)	0563 1761
testo 580 data collector incl. desk-top holder for testo 175/177 data loggers	0554 1778
testo 575 fast printer, infrared controlled thermal line printer with graph function, incl. 1 roll of thermal paper and batteries	0554 1775
Thermal paper for printer (6 rolls)	0554 0569
Thermal paper for printer (6 rolls) for long-term legible data documentation up to 10 years	0554 0568
Self-adhesive label thermal paper for printer (6 rolls)	0554 0561
Limit signal output	0554 1769
testo ComSoft 4 Basic Software Set for testo 175 incl. interface, desk-top holder and PC connection cable RS232	0554 1759
testo ComSoft 4 Basic Software Set for testo 175 incl. interface, desk-top holder and PC connection cable USB	0554 1766
testo ComSoft 3 Professional Software (without interface)	0554 0830
RS232 interface for testo 175/177 incl. desk-top holder and PC connection cable	0554 1757
USB interface for testo 175/177 incl. desk-top holder and PC connection cable	0554 1708
Ethernet adapter	0554 1711
Lock to secure testo 175/177 data logger in the wall holder	0554 1755
Retainer key to prevent testo 175/177 data logger from falling out of wall holder	0192 0638
Spare desk-top holder for testo 175 data logger	0554 1756
Spare wall holder for testo 175 data logger	0554 1754
Spare battery 1/2 AA (3.6V/0.8Ah) for testo 175-T3/H1/H2/S1/S2	0515 0175
Spare battery 1 AA (3.6V/1.9Ah) for testo 175-T1/T2	0515 0177
Transport case for up to 5 testo 175 data loggers and accessories	0516 1750

12. Accessories/Spare parts









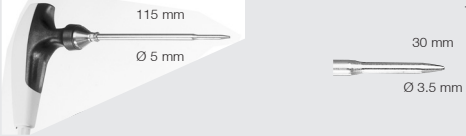


Accurate NTC probes for **testo 175-T2** data loggers

Description	Illustration	Meas. range	Part no.
Stub probe *		-20... +70 °C	0628 7510
Mounting probe with aluminium sleeve, IP65 Cable length: 2.40 m *		-20... +90 °C	0628 7503
Accurate immersion/penetration probe, cable length 6 m *		-35... +80 °C	0610 1725
Screw-in probe for measurements in difficult to access places, M6 thread, IP 54; cable length: 2 m *		-50... +80 °C	0628 7514
Probe for surface measurement; cable length: 2 m *		-50... +80 °C	0628 7516
Wall surface temperature probe, e.g. for proof of damage to building structure; cable length: 3 m		-50... +80 °C	0628 7507
Pipe probe with Velcro, for pipe diameter of max. 75 mm		-50... +70 °C	0613 4611
Food probe (IP65) made of stainless steel, PUR cable, can be used up to +80 °C, plug-in connection IP54 *		-50... +150 °C	0613 2211
Robust food penetration probe with special handle, IP 65, reinforced cable (PUR) and reinforced bending protection *		-50... +150 °C	0613 2411
Frozen food probe, no drilling required *		-50... +140 °C	0613 3211
Robust, affordable air probe, for checking storage temperature, for example *		-50... +150 °C	0613 1711

* Probe tested in accordance with EN 12830 for suitability in the areas of transport and storage.

12. Accessories/Spare parts

Accurate thermocouple probes for **testo 175-T3** data loggers:

Description	Illustration	Meas. range	Part no.
Mounting probe with stainless steel sleeve and mini T/C plug, IP 54 Cable length: 1.90 m		-100... +205 °C	0628 7533
Pipe wrap probe with Velcro, for temperature measurement on pipes with diameter up to 120 mm, Tmax +120 °C		-50... +120 °C	0628 0020
Pipe wrap probe for pipe diameter 5 to 65 mm, with exchangeable meas. head Measuring range short-term to +280 °C		-60... +130 °C	0602 4592
Temperature probe Type 21, fast action surface probe Cable length: 2 m		-50... +180 °C	0628 7521
Thermocouple, flexible, 1500 mm long, fibre optic		-100... +400 °C	0602 0645
Thermocouple, flexible, 1500 mm long, PTFE		-100... +250 °C	0602 0646
Immersion measurement tip, bendable		-100... +1000 °C	0602 5792
Magnet probe, adhesive force ap. 10 N, w. adhesive magnets, for higher temperature measurements on metal surfaces		-50... +400 °C	0602 4892
Water-tight immersion/penetration probe		-60... +400 °C	0602 1293
Accurate and fast-action immersion probe, water-tight		-60... +1000 °C	0602 0593
Robust, affordable air probe		-60... +400 °C	0602 1793

