

testo 330 · Flue gas analyzer

Instruction manual



1 Contents

1	Contents	3
2	Safety and the environment	6
2.1.	About this document	6
2.2.	Ensure safety	7
2.3.	Protecting the environment	8
3	Specifications	9
3.1.	Use	9
3.2.	Technical data	9
3.2.1.	Examinations and licenses	9
3.2.2.	Bluetooth® module (option)	10
3.2.3.	Declaration of Conformity	11
3.2.4.	Measuring ranges and resolution	12
3.2.5.	Accuracy and response time	13
3.2.6.	Other device data	14
4	Product description	16
4.1.	Measuring instrument	16
4.1.1.	Overview	16
4.1.2.	Keypad	17
4.1.3.	Display	18
4.1.4.	Device connections	19
4.1.5.	Interfaces	19
4.1.6.	Components	20
4.1.7.	Carrying strap (0440 0581)	21
4.2.	Modular flue gas probe	22
5	First steps	23
5.1.	Commissioning	23
5.2.	Getting to know the product	23
5.2.1.	Mains unit / rech. batt.	23
5.2.1.1.	Changing the rech. batt.	23
5.2.1.2.	Charging the rech. batt.	24
5.2.1.3.	Mains operation	24
5.2.2.	Connecting probes / sensors	25
5.2.3.	Switching on	26
5.2.4.	Calling up a function	26

5.2.5.	Entering data	26
5.2.6.	Printing / saving data	27
5.2.7.	Remembering data (clipboard)	28
5.2.8.	Confirming an error message	28
5.2.9.	Switching off	29
5.3.	Folders / measurement places	29
5.4.	Protocols	30
5.5.	Instrument diagnosis	31
6	Using the product	33
6.1.	Setting preferences	33
6.1.1.	Assigning the right function key	33
6.1.2.	Device settings	33
6.1.2.1.	Measurement view	33
6.1.2.2.	Alarm thresholds	35
6.1.2.3.	Units	35
6.1.2.4.	Date / time	36
6.1.2.5.	Energy management	36
6.1.2.6.	Display brightness	36
6.1.2.7.	Printer	36
6.1.2.8.	Bluetooth®	37
6.1.2.9.	Language	37
6.1.2.10.	Country version	38
6.1.2.11.	Password protection	38
6.1.3.	Sensor settings	39
6.1.3.1.	NO ₂ addition	39
6.1.3.2.	O ₂ reference	39
6.1.3.3.	Sensor protection	40
6.1.3.4.	Recalibration / adjustment	40
6.1.4.	Fuels	41
6.1.5.	Programs	42
6.2.	Measuring	43
6.2.1.	Preparing for measurement	43
6.2.1.1.	Zeroing phases	43
6.2.1.2.	Using the modular flue gas probe	44
6.2.1.3.	Configuring the measurement view	45
6.2.1.4.	Setting location and fuel	45
6.2.2.	Flue gas	45
6.2.3.	Draft-Measurement	47
6.2.4.	Micro pressure probe	48
6.2.5.	CO undiluted	48
6.2.6.	Smoke No. / HCT	49
6.2.7.	Differential pressure	50
6.2.8.	Differential temperature	51
6.2.9.	O ₂ air	51
6.2.10.	Flowrate	52
6.2.11.	Oil flow	52

6.2.12.	CO ambient.....	53
6.2.13.	CO2 ambient.....	54
6.2.14.	Automatic stokers	55
6.2.15.	Gas pipe tests.....	56
6.2.15.1.	Leakage rate test.....	56
6.2.15.2.	Main test.....	57
6.2.15.3.	Pretest.....	58
6.2.15.4.	Leak detection	59
6.3.	Transferring data	59
6.3.1.	Protocol printer	59
6.3.2.	PC / Pocket PC.....	60
7	Maintaining the product.....	61
7.1.	Cleaning the measuring instrument.....	61
7.2.	Replacing sensors	61
7.3.	Recalibrating / adjusting sensors.....	62
7.4.	Replacing additional filter.....	62
7.5.	Cleaning the modular flue gas probe.....	63
7.6.	Replacing the probe module.....	63
7.7.	Changing the thermocouple.....	64
7.8.	Condensate container	64
7.9.	Checking / replacing the particle filter	65
8	Tips and assistance.....	67
8.1.	Questions and answers	67
8.2.	Accessories and spare parts	68
8.3.	Updating the instrument software	72

2 Safety and the environment



2.1. About this document

This document describes the products testo 330-1 LL and testo 330-2 LL with the device setting **Country version | USA**.

Use

- > Please read this documentation through carefully and familiarize yourself with the product before putting it to use. Pay particular attention to the safety instructions and warning advice in order to prevent injuries and damage to the products.
- > Keep this document to hand so that you can refer to it when necessary.
- > Hand this documentation on to any subsequent users of the product.

Symbols and writing standards

Representation	Explanation
	Warning advice, risk level according to the signal word: Warning! Serious physical injury may occur. Caution! Minor physical injury or damage to the equipment may occur. > Apply the specified precautionary measures.
	Information: Basic or further information.
testo 330-1 LL	The description only applies for the specified instrument model testo 330-1 LL or testo 330-2 LL.
1. ...	Action: several steps, the sequence must be followed.
2. ...	
> ...	Action: one step or optional step.
- ...	Result of an action.
Menu	Elements of equipment, equipment display or program interface.

Representation	Explanation
[OK]	Control keys on equipment or control buttons in program interface.
... ...	Functions / paths within a menu.
“...”	Example entries

2.2. Ensure safety

- > Only operate the product properly, for its intended purpose and within the parameters specified in the technical data. Do not use any force.
- > Do not operate the instrument if there are signs of damage at the housing, power supply or feed lines.
- > Do not perform contact measurements on uninsulated, live components.
- > Do not store the product together with solvents. Do not use any desiccants.
- > Carry out only the maintenance and repair work on this instrument that is described in the documentation. Follow the prescribed steps exactly. Use only original spare parts from Testo.
- > Any further or additional work must only be carried out by authorized personnel. Testo will otherwise refuse to accept responsibility for the proper functioning of the measuring instrument after repair and for the validity of certifications.
- > Operate the instrument only in closed, dry rooms and protect it against rain and moisture.
- > Temperature data on probes/sensors only refer to the measuring range of the sensor technology. Do not expose handles and supply lines to temperatures in excess of 70 °C (158 °F), if these have not been specially approved for higher temperatures.
- > The objects to be measured or the measurement environment may also pose risks: Note the safety regulations valid in your area when performing the measurements.

For products with Bluetooth® (optional)

Changes or modifications that have been made without the explicit consent of the responsible approval authority, may cause the retraction of the type approval.

Data transfer may be disturbed by equipment that uses the same ISM-band, e.g. WLAN, microwave ovens, ZigBee.

The use of radio communication links is not permitted in airplanes and hospitals, among others. For this reason the following points must be ensured before entering:

- > Switch off the device:
- > Isolate the device from any external power sources (mains cable, external rechargeable batteries, ...).

2.3. Protecting the environment

- > Dispose of faulty rechargeable batteries/spent batteries in accordance with the valid legal specifications.
- > At the end of its useful life, send the product to the separate collection for electric and electronic devices (observe local regulations) or return the product to Testo for disposal.

3 Specifications

3.1. Use

The testo 330 is a handheld measuring instrument for the professional flue gas analysis of furnace systems:

- Small furnaces (burning oil, gas, wood, coal)
- Low-temperature and condensing boilers
- Gas water heaters

These systems can be adjusted using the testo 330 and checked for compliance with the applicable limit values.

The following tasks can also be carried out with the testo 330:

- Regulating the O₂-, CO- and CO₂-, NO-, NO_x- data in furnace systems for the purpose of ensuring optimal operation.
- Draft measurement.
- Measuring and regulating the gas flow pressure in gas water heaters.
- Measuring and optimizing the flow and return temperatures of heating systems.
- CO and CO₂ environment measurement.
- Detection of CH₄ (methane) and C₃H₈ (propane).

testo 330 must not be used:

- as a safety (alarm) instrument

The Bluetooth[®] option may only be operated in countries in which it is type approved.

3.2. Technical data

3.2.1. Examinations and licenses

As declared in the certificate of conformity, this product complies with Directive 2004/108/EC.

3.2.2. Bluetooth® module (option)

- Bluetooth® type: BlueGiga WT12
- Bluetooth® product note: WT12
- Bluetooth® identification: B011198
- Bluetooth® company: 10274



Certification

Belgium (BE), Bulgaria (BG), Denmark (DK), Germany (DE), Estonia (EE), Finland (FI), France (FR), Greece (GR), Ireland (IE), Italy (IT), Latvia (LV), Lithuania (LT), Luxembourg (LU), Malta (MT), Netherlands (NL), Austria (AT), Poland (PL), Portugal (PT), Romania (RO), Sweden (SE), Slovakia (SK), Slovenia (SI), Spain (ES), Czech Republic (CZ), Hungary (HU), United Kingdom (GB), Republic of Cyprus (CY).

Iceland, Liechtenstein, Norway and Switzerland.

Turkey, El Salvador, Ecuador

Information of the FCC (Federal Communications Commission)

This device fulfills part 15 of the FCC-guidelines. Commissioning is subject to the two following conditions: (1) This device must not generate any dangerous interferences and (2) this device must be able to receive interferences, even if these could have undesired effects on operation.

Changes

The FCC demands that the user is to be informed that with any changes and modifications to the device, which have not been explicitly approved by testo AG, the right of the user to use this device will become null and void.

3.2.3. Declaration of Conformity



EG-Konformitätserklärung

EC declaration of conformity

Für die nachfolgend bezeichneten Produkte:

We confirm that the following products:

Testo 330-1 LL / -2 LL V2010
(*bluetooth*)

Best. Nr.: / Order No.: 0632 3306; 0632 3307

wird bestätigt, daß sie den wesentlichen Schutzanforderungen entsprechen, die in der Richtlinie des Rates zur Angleichung der Rechtsvorschriften der Mitgliedstaaten über die **elektromagnetische Verträglichkeit** (2004/108/EG) festgelegt sind.

corresponds with the main protection requirements which are fixed in the EEC "Council Directive 2004/108/EC on the approximation of the laws of the member states relating to electromagnetic compatibility"
The declaration applies to all samples of the above mentioned product.

Zur Beurteilung der Erzeugnisse hinsichtlich elektromagnetischer Verträglichkeit im Kleingewerbereich wurden folgende Normen herangezogen:

For assessment of the product following standards have been called upon:

Störaussendung / Pertubing radiation:
Störfestigkeit: / Pertubing resistance:

DIN EN 50270:2000-01 Typ 1
DIN EN 50270:2000-01 Typ 1

R&TTE Richtlinie:

EN 300 328 V1.6.1 (2004)
EN 301 489-1 V1.8.1 (2008)
EN 301 489-17 V2.1.1 (2009)

Diese Erklärung wird für:

This declaration is given in responsibility for:

Testo AG
Postfach / P.O. Box 1140
79849 Lenzkirch / Germany
www.testo.com

abgegeben durch / by:

Herr Walleser
(Name)

Mr. Walleser
(name)

Vorstand

(Stellung im Betrieb des Herstellers)

Managing Director

(Position in the company of the manufacturer)

Lenzkirch, 27.07.2010

(Ort, Datum / place, date)


.....
(Rechtsgültige Unterschrift / Legally valid signature)



Der Hersteller betreibt ein zertifiziertes Qualitätssicherungssystem nach DIN ISO 9001

The manufacturer operates a certified quality assurance system according to DIN ISO 9001

3.2.4. Measuring ranges and resolution

Parameter	Measuring range	Resolution
O ₂	0...21 Vol.%	0.1 vol. %
CO	0...4000 ppm	1 ppm
CO, H ₂ -comp. ¹	0...8000 ppm	1 ppm
COlow	0...500 ppm	0.1 ppm
CO amb through flue gas probe	0...2000 ppm	1 ppm
CO amb with probe 0632 3331	0...500 ppm	1 ppm
NO	0...3000 ppm	1 ppm
Draft	-9.99...40 hPa	0.01 hPa)
ΔP	0...300 hPa	0.1 hPa)
Temperature	-40...1200 °C	0.1 °C (-40.0...999.9 °C) 1 °C (remainder)
Efficiency net	0...120 %	0.1 %
Flue gas loss	0...99.9 %	0.1 %
CO ₂ a with probe 0632 1240	0...1 vol. 0...10000 ppm	-
Gas leak testing with probe 0632 3330	0...10000 ppm CH ₅ / C ₃ H ₈	-

¹ above the sensor protection threshold: Resolution 500 ppm (up to max. 30000 ppm)

3.2.5. Accuracy and response time

Parameter	Accuracy	Response time
O ₂	±0.2 vol.%	< 20 s (t ₉₀)
CO	±20 ppm (0...400 ppm) ±5 % of mv (401...1000 ppm) ±10 % of mv (1001...4000 ppm)	< 60 s (t ₉₀)
CO, H ₂ -comp.	±10 ppm or ±10 % of mv ² (0...200 ppm) ±20 ppm or ±5 % of mv ² (201...2000 ppm) ±10 % of mv (2001...8000 ppm)	< 60 s (t ₉₀)
CO _{low}	±2 ppm (0...39.9 ppm) ±5 % of mv (remainder)	< 40 s (t ₉₀)
CO amb through flue gas probe	±10 ppm (0...100 ppm) ±10 % of mv (101...2000 ppm)	< 35 s (t ₉₀)
CO amb with 0632 3331	±5 ppm (0...100 ppm) ³ ±5 % of mv (>101 ppm)	approx. 35 s (t ₉₀)
NO	±5 ppm (0...100 ppm) ±5 % of mv (101...2000 ppm) ±10 % of mv (2001...3000 ppm)	< 30 s (t ₉₀)
Draft ⁴	±0.02 ppm or ±5 % of mv ² (-0.50...0.60 hPa) ± 0.03 hPa (0.61...3.00 hPa) ±1.5 % of mv (3.01...40.00 hPa)	-
ΔP	± 0.5 hPa (0.0...50.0 hPa) ±1 % of mv (50.1...100.0 hPa) ±1.5 % of mv (rest of range)	-

² higher data is valid

³ at 10...30 °C, outside this range additionally ±0.2 % of mv / °C

⁴ with fine draft measurement option: Measuring range 0...100,0 Pa, resolution 0.1 Pa

Parameter	Accuracy	Response time
Temperature	$\pm 0.5 \text{ }^\circ\text{C}$ (0.0...100.0 $^\circ\text{C}$) $\pm 0.5 \%$ of mv (rest of range)	probe dependent
Efficiency net	-	-
Flue gas loss	-	-
CO ₂ a, through 0632 1240	$\pm 50 \text{ ppm} + 2 \%$ of mv (0...5000 ppm) $\pm 100 \text{ ppm} + 3\%$ of mv (5001...10000 ppm)	approx. 35 s (t ₉₀)
Gas leak testing with 0632 3330	-	< 2 s (t ₉₀)

3.2.6. Other device data

Flue gas analyzer

Characteristic	Data
Storage / and transport temperature	-20...50 $^\circ\text{C}$
Operating temperature	-5...45 $^\circ\text{C}$
Power supply	Rech. batt: 3.7 V / 2.6 Ah Mains unit: 6 V/1.2 A
Protection class	IP40
Weight	600 g (without rech. batt.)
Dimensions	270 x 90 x 65 mm
Memory	500,000 meas. views
Display	Graphic color display, 240 x 320 pixels
Gas leak testing probe	visual indication (LED) audible indication by buzzer
Storage temperature rech. batt.	$\pm 0...35 \text{ }^\circ\text{C}$
Rech. batt. charge time	approx. 5-6 h

Characteristic	Data
Rech. batt. operation time	6 h (pump on, 20 °C ambient temperature)
Bluetooth® (option)	Range < 10 m
Warranty	Measuring instrument: 48 months LL-sensors O ₂ , CO: 48 months, Other sensors: 24 months Flue gas probe: 48 months Thermocouple: 12 months Rech. batt: 12 months
Terms of warranty	Terms of warranty: see website www.testo.com/warranty

4 Product description

4.1. Measuring instrument

4.1.1. Overview



- 1 Switch on/off
- 2 Interfaces: USB, PS2, infrared

⚠ CAUTION

Risk of injury from infrared beam!

- > Do not direct infrared beam at human eyes!

- 3 Condensate trap (on rear)
- 4 Fixing eyelets for carrying strap (left and right)
- 5 Display
- 6 Magnetic holders (on rear)









CAUTION

Damage to other equipment caused by strong magnets!


- > Keep a safe distance from products which could be damaged by magnets (e.g. monitors, computers, pacemakers, credit cards).

- 7 Keypad
- 8 Service cover (on rear)
- 9 Gas outlet
- 10 Unit connections: flue gas probe, sensor, pressure probe, mains unit

4.1.2. Keypad

Key	Functions
	Switch measuring instrument on / off
 Example	Function key (orange, 3x), relevant function is shown in the display
	Scroll up, increase data
	Scroll down, reduce data
	Back, cancel function
	Open main menu
	Open instrument diagnosis menu
	Transmit data to the Testo protocol printer.

4.1.3. Display

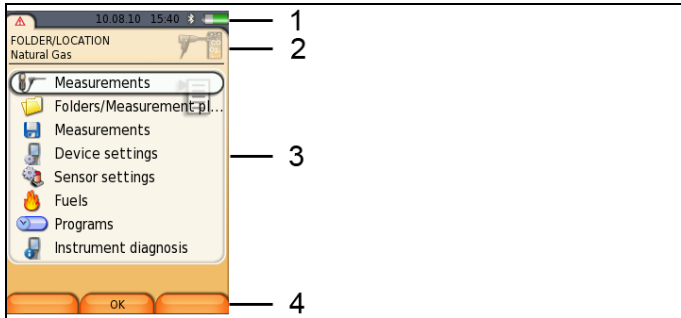


1 Status bar (dark gray background):

- Warning symbol (only if there is an Error Service, display of Error Services in instrument diagnosis menu), otherwise: Instrument designation.
- Symbol (only if data are stored in the temporary memory).
- Display of date and time.
- Indication of Bluetooth® status, power supply and remaining capacity of the rech.batt.:

Icon	Feature
	blue symbol = Bluetooth® on, gray symbol = Bluetooth® off
	Rech. batt. operation Indication of remaining capacity of the rech. batt. by color and filling degree of the battery symbol (green = 5-100 %, red = < 5 %)
	Mains operation Indication of remaining capacity of rech. batt: see above


- 2 Info field of register tabs: Indication of selected folders / measurement place, chosen fuel, chosen measurement type
- 3 Selection field for functions (chosen function appears against a white background, unavailable functions are identified by gray characters) or display of meas. views.
- 4 Function display for function keys.

4.1.4. Device connections

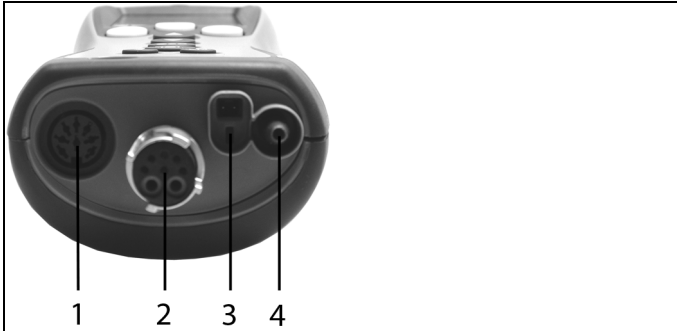


- 1 Probe socket
- 2 Flue gas socket
- 3 Mains unit socket
- 4 Pressure socket

4.1.5. Interfaces

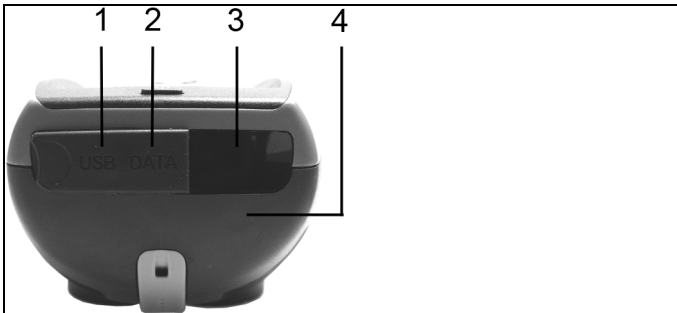

- 1 USB interface
- 2 PS2-interface
- 3 Infrared interface (IrDA)
- 4 Bluetooth interface (option)

4.1.6. Components

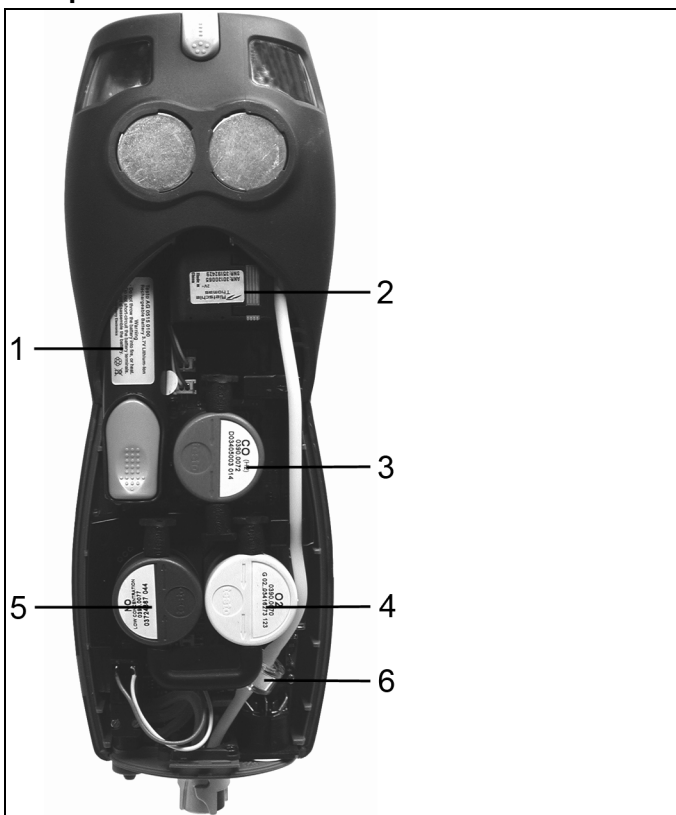

- 1 Rech. batt.
- 2 Measuring gas pump
- 3 Slot for CO-sensor or COlow-sensor
- 4 Slot O2-sensor
- 5 Slot NO-sensor
- 6 Additional filter


4.1.7. Carrying strap (0440 0581)

To secure the carrying strap:

- > Remove the sealing caps from the sides of the housing.

Fix the sealing caps on the inside of the service cover:

1. Place the measuring instrument on its front.
2. Pick the service cover up at the markings (arrows) using your index finger and thumb and press gently to release the lock.
3. Fold up the service cover and remove it.

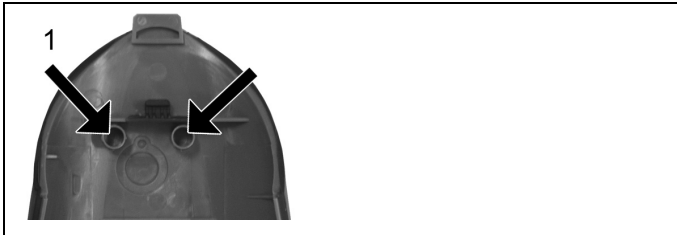


4. Secure the sealing caps in the two holders on the inside of the service cover (1).
5. Attach the service cover and engage it in place.



- > Engage the carrying strap clip in the fixing eyelets on the sides of the device. Note the guide groove, the strap must point "down" (2).

4.2. Modular flue gas probe

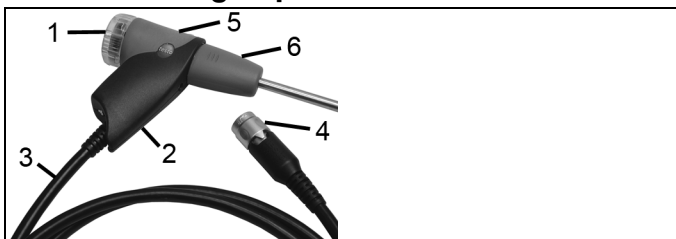

- 1 Removable filter chamber with window and particle filter
- 2 Probe handle
- 3 Connecting cable
- 4 Connector plug for measuring instrument
- 5 Probe module lock release
- 6 Probe module

5 First steps

5.1. Commissioning

The measuring instrument is supplied with a rech. batt. already fitted.

- > Charge the rech. batt. fully before using the measuring instrument, see Charging the rech. batt. page 24.

5.2. Getting to know the product


5.2.1. Mains unit / rech. batt.

If the mains unit is connected, the measuring instrument is automatically powered from the unit.

5.2.1.1. Changing the rech. batt.

- ✓ The measuring instrument must not be connected to a mains socket via the mains unit. The instrument must be switched off.

Change the rech. batt. within 5 minutes so that device settings (e.g. date / time) are not lost.

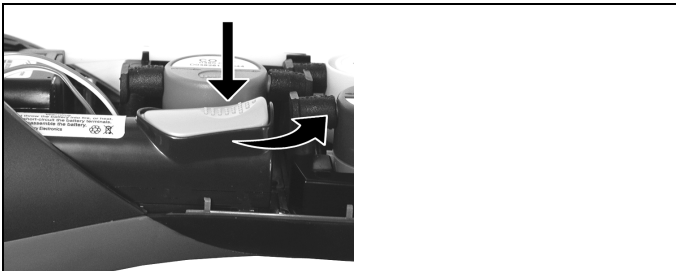

1. Place the measuring instrument on its front.
2. Remove the service cover: Take hold of it at the markings (arrows) using the index finger and thumb, press slightly, fold up and remove.
3. Open the battery lock: Press the gray key and push in direction of arrow.
4. Remove the battery and insert a new rech. batt. Only use the Testo rech. batt. 0515 0107!
5. Close the battery lock: Press the gray key and push against direction of arrow until the rech. batt. engages.

6. Attach the service cover and engage it in place.

5.2.1.2. Charging the rech. batt.

The rech. batt. can only be charged at an ambient temperature of $\pm 0...+35$ °C. If the rech. batt. has been discharged completely, the charging time at room temperature is approx. 5-6 hrs.

Charging in the measuring instrument

1. Connect the plug of the mains unit to the mains unit socket on the measuring instrument.
2. Connect the mains plug of the mains unit to a mains socket.
 - The charging process will start. The charge condition will be shown on the display. The charging process will stop automatically when the rech. batt. is fully charged.

Charging in the charging station (0554 1087)

- > Refer to the documentation enclosed with the charging station.

Rech. batt. care

- > Do not fully exhaust rech. batts.
- > Store rech. batts. only in charged condition and at low temperatures, but not below 0 °C (best storage conditions with a charge level of 50-80 %, at an ambient temperature of 10-20 °C, recharge completely before use).
- > For longer breaks you should discharge and recharge the rech. batts. every 3- months. Trickle charging should not exceed 2 days.

5.2.1.3. Mains operation

1. Connect the plug of the mains unit to the mains unit socket on the measuring instrument.
2. Connect the mains plug of the mains unit to a mains socket.
 - The measuring instrument is powered by the mains unit.
 - If the measuring instrument is switched off and a rech. batt. is inserted, the charging process will start automatically. Switching the measuring instrument on has the effect of stopping rech. batt. charging and the measuring instrument is then powered via the mains unit.

5.2.2. Connecting probes / sensors

Sensor detection at the sensor socket takes place during the activation process.

- ✓ Sensors that are required must always be connected before the measuring instrument is switched on, or the instrument must be switched off and then on again after the sensor has been changed, so that the correct data can be read into the measuring instrument.

Probe/sensor detection at the flue gas socket is carried out continuously. It is possible to change the probe/sensor even while the measuring instrument is switched on.

Connecting flue gas probes / gas pressure adapters / temperature adapters



- > Insert the connector plug into the flue gas socket and lock by slightly turning it clockwise (bayonet lock).




There must be no more than one extension lead (0554 1201) between measuring instrument and flue gas probe.

Connecting other sensors






- > Insert the connector plug of the probe into the probe socket.

5.2.3. Switching on

- > press  .
- The start screen is displayed (duration: about 5 s).
- If the voltage supply was interrupted for a longer period: The menu Date / Time is opened.
- The pressure sensors are set to zero.
- There is an Error Service: The **Error Diagnosis** is displayed.
- The menu **Measurements** is displayed.


5.2.4. Calling up a function









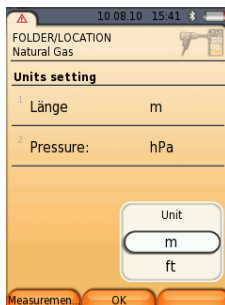

1. Select function: ,  .
 - The chosen function appears in a frame.
2. Confirm selection:  .
 - The chosen function is opened.

5.2.5. Entering data

Some functions require data (numbers, units, characters) to be entered. Depending on the function that is chosen, the data are entered via either a list field or an input editor.


List field



1. Select the value to be changed (numerical value, unit): , , ,  (depending on the selected function).
2. Press  .
3. Set value: , , ,  (depending on the selected function).
4. Confirm the entry:  .

5. Repeat steps 1 and 4 as required.
6. Save the entry: **[Finished]**.

Input editor

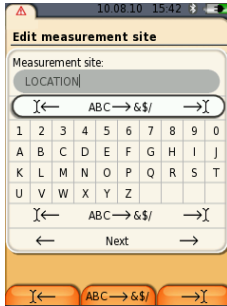

1. Select the value to be changed (character): **[▲], [▼], [◀], [▶]**.
2. Accept value: **[OK]**.

Options:

- > Toggle between upper / lower case characters:

Select **← ABC→&\$/ →|** : **[▲], [▼]** → **[ABC→&\$/]**.

- > Position the cursor in the text:


Select **← ABC→&\$/ →|** : **[▲], [▼]** → **[|←]** or **[→|]**.

- > Delete character before or after the cursor:

Select **← next →** : **[▲], [▼]** → **[←]** or **[→]**.

3. Repeat steps 1 and 2 as required.
4. Save the entry: Select **← next →** : **[▲], [▼]** → **[Next]**.

5.2.6. Printing / saving data

Data are printed out via the function key  or the menu **Options**. Data are saved via the menu **Options**. The menu **Options** is accessed via the left function key and is available in many different menus.

Assignment of the right function key with the function **Save** or **Print**, see Assigning the right function key page 33 .

Only meas. views, which have a display field in the measurement view assigned, will be saved / printed out.



The measurement data can be printed out parallel to the saving process, while a measurement program is running.

To be able to transmit data via infrared or Bluetooth interface to a protocol printer, the printer to be used must have been enabled, see Enabling the printer:, page 37.

5.2.7. Remembering data (clipboard)

With the help of the clipboard measuring results from various measurement types can be combined to a common protocol, which can then be printed out and saved (see above) Data are saved to the clipboard via the menu **Options** and the command **Clipboard**.

If there are data in the clipboard, the status bar shows the symbol




If there are data in the clipboard and the command **Print** or **Save** is triggered, all data in the clipboard will be printed out or saved.

Only one set of measuring data can be recorded per measurement type (e.g. **Flue Gas** or **Draft**). Repetitive saving of test data of one measurement type overwrites the previously saved data. When changing the measurement place or the fuel, the clipboard is deleted.

5.2.8. Confirming an error message

If a failure occurs, an error message is shown in the display.

> Confirming an error message: **[OK]**.


Failures which have occurred and have not yet been rectified are indicated by a warning symbol () in the header.

Not yet rectified error messages can be displayed in the menu **Error Diagnosis**, see **Instrument diagnosis**, page 31.

5.2.9. Switching off



Unsaved meas. views will be lost when the flue gas analyzer is switched off.

- > press  .
- Possibly: The pump starts and the sensors are rinsed until the switch-off thresholds (O₂ > 20 %, other measurement parameters < 50 ppm) are reached. The maximal rinsing period is 3 minutes.
- The measuring instrument switches off.

5.3. Folders / measurement places

All readings can be saved under the currently active site. Meas. views not yet saved are lost when the measuring instrument is switched off.

Folders and measurement places can be created, edited, copied and enabled. Folders and measurement places (incl. protocols) can be deleted.

Calling up the function:

- >  → **Folder/Measurement Places** → **[OK]** .

Adapting the display:

- > Toggle between overview (display of number of site per folder) and detailed view (display of all measurement places per folder): **[Overview]** or **[Details]**.

Enabling a site:

- > Select the site → **[OK]**.
- The site is enabled and the menu **Measurements** is opened.

Creating a new site:

A site is always created in a folder.

1. Select the folder in which the site is to be created.
2. **[Options]** → **New/Measurement Site** → **[OK]**.
3. Enter data or make preferences.
4. Finalize the entry: **[Finished]**.

Other site options:

- > **[Options]** → **Edit Measurement Site**: Make changes to an existing site.
- > **[Options]** → **Copy Measurement Site**: Make a copy of an existing site in the same folder.
- > **[Options]** → **Delete Measurement Site**: Delete an existing site.

Create a new folder:

1. **[Options]** → **New Folder** → **[OK]**.
2. Enter data or make preferences.
3. Finalize the entry: **[Finished]**.

Other folder options:

- **Edit Folder**: Make changes to an existing folder.
- **Copy Folder**: Make a copy of an existing folder.
- **Delete Folder**: Delete an existing folder, including the sites created therein.
- **Delete all Folders**: Delete all existing folders, including the sites created therein.

5.4. Protocols

Calling up the function:

- > **[📄]** → **Protocols** → **[OK]**.

Adapting the display:

- > Toggle between overview (display of number of measurement places per folder) and detailed view (display of all measurement places per folder): **[Overview]** or **[Details]**.

Display protocol:

1. Choose the desired protocol from the detailed view.
2. **[Data]**.

Options:

- > **[Options]** → **Show Graphic**: Display saved protocol data as graphic.
- > **[Options]** → **Print Data**: Transmit data of the chosen protocol to a record printer.
- > **[Options]** → **Delete Measurements**: Delete the chosen protocol.
- > **[Options]** → **Number of Lines**: Change the number of meas. views per display page.
- > **[Options]** → **Delete all Measurements**: Delete all saved protocols for a site.

5.5. Instrument diagnosis

Important operating data and instrument data are displayed. A gas path check (testo 330-2 LL) can be carried out. The status of the sensors and any Error Services not yet rectified can be displayed.

Calling up the function:

>  → **Instrument Diagnosis** → **[OK]**.

or

> **[i]**.

Carrying out a gas path check (testo 330-2 LL)

1. **Gas Path Check** → **[OK]**
2. Place the black sealing cap on the tip of the flue gas probe.
 - The pump flow is displayed. If the volumetric flow rate is less than 0.02 l/min, the gas paths are not leaking.
3. End of check: **[OK]**.

Viewing Error Services:

- > **Error Diagnosis** → **[OK]**.
 - Unrectified failures are displayed.
 - > View next / previous failure: **[▲]**, **[▼]**.

Viewing sensor diagnosis:

1. > **Sensor Diagnosis** → [OK].
2. Select sensor. [▲], [▼].
 - The status of the sensor is indicated by a lamp.



A sensor is able to recover. It is therefore possible that the sensor status indication changes from yellow to green or from red to yellow.

Viewing device information:

- > **Device Information** → [OK].
- Information is displayed.

6 Using the product

6.1. Setting preferences

6.1.1. Assigning the right function key

The right function key can have a function from the **Options** menu assigned to it. The menu **Options** is accessed via the left function key and is available in many different menus. This assignment is only valid for the currently opened menu / the opened function.

✓ A menu / function is opened in which the **Options** menu is displayed on the left function key.

1. Press **[Options]** .
2. Select option: **[▲]**, **[▼]**.

Depending on the menu / function from which the **Options** menu was opened, the following functions are available.

3. Assign the selected function to the right function key. **Press**

6.1.2. Device settings



It is assumed that the contents of the chapter **First steps** (see **First steps**, page 23) are known.

Calling up the function:

> → **Device Settings**.

6.1.2.1. Measurement view

The measurement parameters / units and the display representation (number of meas. views displayed per display page) can be set.

The preferences are only valid for the currently chosen measurement type, which is indicated by the symbol in the info field.

Total overview of selectable measurement parameters and units (available selection depends on the chosen measurement type):

Display	Measurement parameter
Tstack	Flue gas temperature
Tamb	Combustion air temperature

Display	Measurement parameter
Tsensor	Instrument temperature
Pump	Pumping capacity
O2	Oxygen
CO2	Carbon dioxide
η^+	Efficiency net under due consideration of the heat value range
CO	Carbon monoxide
uCO	Carbon monoxide undiluted
NO	Nitrogen monoxide
NOx	Nitrogen oxide
ExAir	Air ratio
COamb	Ambient carbon monoxide
CO2a	Ambient carbon dioxide
O2ref	Oxygen reference
E-drft	external draft (micro pressure probe)
E-ΔP	external differential pressure (micro pressure probe)
Dew/a	Flue gas dew point temperature

Calling up the function:

>  → **Device Settings** → **[OK]** → **Readings Display** → **[OK]**

Edit measurement parameter / unit in a line:

1. Select the line: **[▲], [▼]** → **[Edit]**
2. Select the measurement parameter: **[▲], [▼]** → **[OK]**
3. Select the unit: **[▲], [▼]** → **[OK]**
4. Save changes: **[OK]**

Options:

- > **[Options]** → **Number of Lines**: Change the number of measuring values per display page.
- > **[Options]** → **Insert Blank Lines**: Insert the blank line before the selected line.
- > **[Options]** → **Delete Line**: Delete the selected line.
- > **[Options]** → **Factory Setting**: Reset the measurement view to factory setting

6.1.2.2. Alarm thresholds

Alarm thresholds can be set for several display parameters. An audible alarm signal is triggered when the alarm limit is reached.

Calling up the function:

- >  → **Device Settings** → **[OK]** → **Alarm Thresholds** → **[OK]**

Switching alarm signals on / off, changing alarm thresholds:

1. Select function or data: **[▲]**, **[▼]** → **[Edit]**.
2. Set parameter: **[▲]**, **[▼]** and partly **[◀]**, **[▶]** → **[OK]**.
3. Save changes: **[Finished]**.

6.1.2.3. Units

The units used for parameters in configuration menus can be set.

Calling up the function:

- >  → **Device Settings** → **[OK]** → **Units** → **[OK]**

Adjustable units

Parameter	Unit
Length	m, ft
Pressure	mbar, hPa

1. Select the line: **[▲]**, **[▼]** → **[Edit]**.
2. Select the unit to be edited: **[▲]**, **[▼]** → **[OK]**.
3. Confirm the entry: **[Finished]**.








6.1.2.4. Date / time

Date, time mode and time can be set.

Calling up the function:

>  → **Device Settings** → [OK] → **Date/Time** → [OK]

Setting date/time:

1. Select parameter: [, , ] → [Edit].
2. Set parameter: [, ] and partly [, ] → [OK].
3. Save changes: [Save].







6.1.2.5. Energy management

Auto-Off and switching off of the display light in rech. batt. operation can be set.

Calling up the function:

>  → **Device Settings** → [OK] → **Energy Management** → [OK]

Setting preferences:

1. Select function or parameter: [, ] → [Edit].
2. Set parameter: [, ] and partly [, ] → [OK].
3. Save changes: [Finished].

6.1.2.6. Display brightness

The intensity of the display illumination can be set.

Calling up the function:

>  → **Device Settings** → [OK] → **Display Brightness** → [OK]

Setting preferences

> Set parameter: [, ] → [OK].


6.1.2.7. Printer

The headers (lines 1-3) and the footnotes for the printout can be set. The printer that is used can be enabled.

Calling up the function:

>  → **Device Settings** → [OK] → **Printer** → [OK]

Enabling the printer:

 The printer 0554 0543 can only be selected after the Bluetooth®-interface has been enabled, see Bluetooth®, page 37.

1. **Select Printer** → [OK].
2. Select the printer: [▲], [▼] → [OK].
- The printer is enabled and the menu **Printer** is opened.


Customizing the printout:

1. **Customize Printout** → [OK].
2. Select function: [▲], [▼] → [Edit].
3. Enter data → [Next].
4. Save the entry: [Finished].

6.1.2.8. Bluetooth®

This menu is only available if the instrument is equipped with Bluetooth option. The Bluetooth module can be switched on / off.

Calling up the function:

- >  → **Device Settings** → [OK] → **Bluetooth** → [Edit].

Setting preferences:

- > Set parameter → [OK].

6.1.2.9. Language

The menu language can be set. The number of available languages depends on the enabled country version, see Country version, page 38.

Calling up the function:

- >  → **Device Settings** → [OK] → **Language** → [OK]

Enabling the language:

- > Select the language → [OK].

6.1.2.10. Country version

The country version (available measurement parameters, fuels / parameters, calculation formulas) can be set. The selection of the country version influences the menu languages that can be enabled.

Calling up the function:

>  → **Device Settings** → **[OK]** → **Country Version** → **[OK]**



This action can be password protected. A password is specified in the menu **Password Protection**, see Password protection, page 38.



Possibly:

> Enter the password: **[Enter]** → Enter password → **[Next]** → **[OK]**.

Setting the country version:

1. Select the country version: **[▲]**, **[▼]** → **[OK]**.
 2. Confirm confirmation request: **Yes** → **[OK]**
- The system is restarted.

6.1.2.11. Password protection

The password protection is only valid for functions identified by the following symbol:  or .

Password protection can be enabled / disabled, the password can be changed.

To disable the password protection change the password to **0000** (factory setting).

Calling up the function:

>  → **Device Settings** → **[OK]** → **Password Protection** → **[OK]**

Possibly:

> Enter the currently valid password:
[Enter] → Enter password → **[Next]** → **[OK]**.

Changing the password:

1. **[Edit]**.
2. Enter the new password → **[Next]**.
3. **[Edit]**.
4. Enter the new password again to confirm → **[Next]**.
5. Save changes: **[Finished]**.

6.1.3. Sensor settings**6.1.3.1. NO₂ addition**

The NO₂ addition parameter can be set.

The preferences of the NO₂-addition can be password protected, see Password protection, page 38.

Calling up the function:

- >  → **Sensor Settings** → **NO₂ Addition** → **[Edit]**.

Possibly:

- > Enter the password: **[Enter]** → Enter password → **[Next]** → **[OK]**.

Setting the NO₂ addition:

- > Set parameter → **[OK]**.

6.1.3.2. O₂ reference

The O₂ reference value can be set.

The setting of the O₂ reference value can be password protected, see Password protection, page 38.

Calling up the function:

- >  → **Sensor Settings** → **O₂ Reference** → **[Edit]**.

Possibly:

- > Enter the password: **[Enter]** → Enter password → **[Next]** → **[OK]**.

Setting the O₂ reference:

- > Set parameter → **[OK]**.

6.1.3.3. Sensor protection

Protection limits can be set to protect the sensors against overload. The sensor protection switch-off is available for the following sensors: CO, NO.

The sensor protection is activated if the threshold is exceeded.

- testo 330-1 LL: Switch-off.
- testo 330-2 LL: Dilution, if exceeded again: Switch-off.

To disable sensor protection the thresholds must be set to 0 ppm.

Calling up the function:

- >  → **Sensor Settings** → **Sensor Protection** → **[OK]**.

Setting sensor protection thresholds:

1. Select parameter: **[Edit]**.
2. Set parameter → **[OK]**.
3. Save changes: **[Finished]**.

6.1.3.4. Recalibration / adjustment

CO and NO sensors can be recalibrated and adjusted. For recalibration / adjustment Testo recommends the use of the calibration adapter 0554 1205.

i If obviously unrealistic readings are displayed, the sensors should be checked (calibrated) and, if required, adjusted.

Have the recalibration / adjustment carried out by a qualified service center approved by Testo.

Adjustments made with low gas concentrations can lead to accuracy deviations in the upper measuring ranges.

Calling up the function:

- >  → **Sensor Settings** → **Recalibration** → **[OK]**.

Possibly:

- > Enter the password: **[Enter]** → Enter password → **[Next]** → **[OK]**.
- Gas zeroing (30 s).

Performing recalibration / adjustment:**⚠ WARNING**

Dangerous gases

Danger of poisoning!

- > Observe safety regulations / accident prevention regulations when handling test gas.
- > Use test gases in well ventilated rooms only.

1. Connect the calibration adapter to the flue gas socket.
2. Select the measurement parameter: **[▲]**, **[▼]** → **[OK]**.
3. **[Edit]** → Enter the test gas concentration (val. nom.).
4. Attach the connecting line of the test gas bottle to the calibration adapter.
5. Apply test gas to the sensor.
6. Start recalibration: **[Start]**.
7. Accept the val. nom. once the act. val. is stable (adjustment): **[OK]**.
-or-
Abort (no adjustment): **[esc]**.
8. Save changes: **[Finished]**.

6.1.4. Fuels

The fuel can be selected. The fuel-specific coefficients and set limits can be set.

Apart from the pre-configured fuels, 10 more customer specific fuels can be configured. Fuel parameter, see www.testo.com/download-center (registration required).



In order to maintain the measuring accuracy of the instrument one must choose or configure the correct fuel.



The set limits serve the purpose of configuring the ideal array of the flue gas matrix and do not have any influence on the accuracy of the measuring results.

Calling up the function:

- > **[📄]** → **Fuels** → **[OK]**.

Enabling fuels:

- > Select the fuel → **[OK]**.
- The fuel is enabled and the main menu is opened.

Setting coefficients:

1. Select the fuel → **[Coeff.]**.
2. Select the coefficients: **[Edit]**.

Possibly:

- > Enter the password: **[Enter]** → Enter password → **[Next]** → **[OK]**.
- 3. Set data → **[OK]**.
- 4. Save changes: **[Finished]**.

Setting set limits:

1. Select set limit → **[Edit]**.
2. Set data → **[OK]**.
3. Save changes: **[Finished]**.

6.1.5. Programs

Five measuring programs for different measurement types can be configured and enabled. The measuring programs serve the purpose of saving and representing measuring sequences. After the end of the measuring process the meas. views of a measuring program are automatically saved in a protocol.

Only one measuring program can be enabled in the instrument.

Calling up the function:

- >  → **Programs** → **[OK]**.

Enabling / disabling a program:

- > Select the program: **[▲]**, **[▼]** → **[Enable]** or **[Disable]**.
- When enabling a program: The program is enabled and the measurement type matching the program is opened.

Configuring the program:

i The measuring cycle takes 1s and cannot be changed.
An enabled program cannot be configured.

1. Select the program: [**▲**], [**▼**] → [**Edit**].
2. Select parameters program name, measurement type, gas phase: [**▲**], [**▼**] → [**Edit**].
3. Set parameters or enter data: [**▲**], [**▼**] and partly [**◀**], [**▶**] → [**OK**].
4. Save changes: [**Finished**].

6.2. Measuring

6.2.1. Preparing for measurement

i It is assumed that the contents of the chapter **First steps** (see First steps, page 23) are known.

6.2.1.1. Zeroing phases

Measuring the ambient air temperature (AT)

If no combustion air temperature probe is connected, the temperature measured by the thermocouple of the flue gas probe during the zeroing phase is used as the combustion air temperature. All dependent measurement parameters are calculated using this value. This method of measuring combustion air temperature is sufficient for systems dependent on ambient air. However, ensure that the flue gas probe is near the intake duct of the burner during the zeroing phase.

If a combustion air temperature probe is connected, the combustion air temperature is measured continuously via this probe.

Gas zeroing

When the instrument is switched on the measurement menu is opened and the gas sensors are zeroed.

i testo 330-1 LL: The flue gas probe must be in the open air during the zeroing phase!

testo 330-2 LL: The flue gas probe can be in the flue gas duct even during the zeroing phase, if a separate VT-sensor is plugged in.

Draft / pressure zeroing

The pressure sensors are zeroed when a pressure measuring function is called up.

i testo 330-1 LL: The flue gas probe must be in the open air during the zeroing phase / the instrument must not be pressurized during zeroing!

testo 330-2 LL: The flue gas probe can be in the flue gas duct even during the zeroing phase, if a separate VT-sensor is plugged in. The pressure socket of the instrument must be free (i.e. unpressurized, not closed).

6.2.1.2. Using the modular flue gas probe


Checking the thermocouple



The thermocouple of the flue gas probe must not lie against the probe cage.

> Check before use. Bend the thermocouple back if necessary.

Aligning the flue gas probe



The flue gas must be able to flow freely past the thermocouple.

> Align the probe by turning it as required.



The tip of the probe must be in the hot spot of the flue gas flow.

- > Align the flue gas probe in the flue gas duct so that the tip is in the hot spot (area of the highest flue gas temperature).

6.2.1.3. Configuring the measurement view

Only those parameters and units which are enabled in the measurement view appear in the measurement view, the saved measurement protocols and the protocol printouts.


- > Before performing measurements set up the measurement view in such a way, that the required parameters and units are enabled, see Measurement view, page 33.

6.2.1.4. Setting location and fuel


Before carrying out measurements, the measurement location and the fuel must be correctly selected, see Folders / measurement places, page 29 and Fuels, page 41.

6.2.2. Flue gas

Calling up the function:

1.  → **Measurements** → [OK] → **Flue Gas** → [OK].
2. Select the fuel → [OK].

Performing the measurement:


1. Start measurement: .





If a separate measurement of CO undiluted has not yet been carried out, this value is calculated using the meas. views of the flue gas probe and is updated continuously.

If CO undiluted has already been measured separately, the value obtained is adopted.

- The meas. views are displayed.

2. Quit measurement: .

Options

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a record.
- > **[Options]** → **Show Graphic**: The meas. views are displayed in form of a line graph.
- > **[Options]** → **Configure Graphic**: The measurement parameters to be represented (max. 4) can be displayed () or hidden (.

- > **[Options]** → **Flue Gas Matrix**: The meas. views are displayed as flue gas matrix, see below.
- > **[Options]** → **Number of Lines**: Change the number of meas. views per display page.
- > **[Options]** → **Reset to Zero**: The gas sensors are set to zero.
- > **[Options]** → **Meas. View Display**: (This function is not available during a measurement): The meas. view display menu is opened.

Show flue gas matrix

This function is only available if the measurement parameter **CO** has been enabled in the meas. view display.

Calling up the function:

- ✓ The flue gas function is opened.
- > **[Options]** → **Flue Gas Matrix**:

Options

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a record.
- > **[Options]** → **Show Graphic**: The meas. views are displayed in form of a line graph.
- > **[Options]** → **Show Numerical Values**: Data are displayed as numerical values.
- > **[Options]** → **System Type**: (This function is not available during a measurement) Set the system type to be able to configure the ideal array (green) of the flue gas matrix, using the limits pre-configured for each system type.
- > **[Options]** → **Reset Graphic**: The displayed graphical data are deleted.
- > **[Options]** → **Limits**: (This function is not available during a measurement) Enter limits to be able to configure the ideal array (green) of the flue gas matrix.
- > **[Options]** → **CO + O2** or **CO + CO2**: Choose which measurement parameter should be assigned to the x-axis of the display matrix (O2 or CO2).
- > **[Options]** → **Meas. View Display**: (This function is not available during a measurement) Open the measurement view menu.

6.2.3. Draft-Measurement

Calling up the function:

✓ A flue gas probe must be connected.



1.  → **Measurements** → **[OK]** → **Draft** → **[OK]**.

Performing the measurement:





The pressure socket of the instrument must be free (i.e. unpressurized, not closed).

Do not measure for longer than 5 min, as the drift of the pressure sensor means that the meas. views could be outside the tolerance limits.

1. Start measurement: .
 - Draft zeroing.
2. Position the flue gas probe in the hot spot (area of the highest flue gas temperature).
The display showing the maximum measured flue gas temperature (**FT max**) helps when positioning the probe.
 - The reading is displayed.
3. Quit measurement .

Options:

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a protocol.
- > **[Options]** → **Show Graphic**: The meas. views are displayed in form of a line graph.
- > **[Options]** → **Configure Graphic**: The measurement parameters to be represented (max. 4) can be displayed () or hidden (.
- > **[Options]** → **Measurement View**: (This function is not available during a measurement): The measurement view menu is opened.

6.2.4. Micro pressure probe

The following measurements can be performed using the micro pressure probe (0638 0330):

- **Ext-Draught**
- **Ext-Delta-P Single meas.**
- **Ext-Delta Program**

See instruction manual for micro pressure probe.



6.2.5. CO undiluted

Calling up the function:

✓ A multi-hole probe (0554 5762) must be connected.

>  → **Measurements** → **[OK]** → **CO undiluted** → **[OK]**.

Performing the measurement:

1. Start measurement: 
- The meas. view is displayed.
2. Quit measurement: 

Options:

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a protocol.
- > **[Options]** → **Show Graphic**: The meas. views are displayed in form of a line graph.

6.2.6. Smoke No. / HCT

Calling up the function:

> [] → **Measurements** → [OK] → **Smokenumber / HCT** → [OK].




The parameters **Smoke No.** and **Oil derivatives** are only available for oil fuels.

Determining smoke tester no. / smoke nos. / oil derivative with the smoke pump and entering manually:

1. Select parameter → [Edit].
2. Enter data or values → [Next] or [OK].

Determining smoke tester no. / smoke nos. / oil derivative with the smoke tester testo 308 and transferring wireless:

- The testo 308 must be data transfer mode ( lights up).
- > [Options] → **t308**.
- The data recorded by the smoke tester are transferred to the testo 330.

Entering the heat carrier temperature:

> **Heat carrier** → [Edit] → Enter value → [OK].

Options:

- > [Options] → **Clipboard**: Data are saved to the clipboard:
- > [Options] → **Save**: The meas. views are saved in a protocol.
- > [Options] → **Reset values**: The entered data are deleted.


6.2.7. Differential pressure


✓ The gas pressure set (0554 1203) must be connected.


Calling up the function:

>  → **Measurements** → **[OK]** → **Differential Pressure** → **[OK]**.

Performing the measurement:


 WARNING	
Dangerous mixture of gases	
Danger of explosion.	
>	Make sure there are no leaks between the sampling point and the measuring instrument.
>	Do not smoke or use naked flames during measurement.

 Do not measure for longer than 5 min, as the drift of the pressure sensor could have the effect that the meas. views are outside the tolerance limits.


1. Start measurement: .

- Pressure zeroing.

2. Pressurize the system.

 testo 330-2, Program active (see Programs page 42): The pressure socket of the instrument must be free (i.e. unpressurized, not closed) while a measurement program is running.

- The meas. view is displayed.

3. Quit measurement: .

Options:

> **[Options]** → **Clipboard**: Data are saved to the clipboard:

> **[Options]** → **Save**: The meas. views are saved in a protocol.

> **[Options]** → **Show Graphic**: The meas. views are displayed in form of a line graph.

> **[Options]** → **Readings Display**: (This function is not available during a measurement): The measurement view menu is opened.



6.2.8. Differential temperature

- ✓ The differential temperature set (0554 1204) must be connected.

Calling up the function:

- >  → **Measurements** → **[OK]** → **Differential Temperature** → **[OK]**.

Performing the measurement:

1. Start measurement: .
 - The meas. views and the calculated differential temperature (T1 T2) are displayed.
2. Quit measurement: .

Options:

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a protocol.
- > **[Options]** → **Show Graphic**: The meas. views are displayed in form of a line graph.
- > **[Options]** → **Readings Display**: (This function is not available during a measurement): The measurement view menu is opened.



6.2.9. O2 air

- ✓ An O2 dual wall clearance probe (0632 1260) must be connected.

Calling up the function:

- >  → **Measurements** → **[OK]** → **O2add** → **[OK]**.

Performing the measurement:

1. Start measurement: .
 - The meas. view is displayed.
2. Quit measurement: .


Options:

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a protocol.
- > **[Options]** → **Show Graphic**: The meas. views are displayed in form of a line graph.



6.2.10. Flowrate

The function is only available if the chosen fuel is a gas.

Calling up the function:

- > **[** → **Measurements** → **[OK]** → **Flowrate** → **[OK]**.

Performing the measurement:

1. Start measurement: **[**].
 - The measuring duration is displayed.
2. When the adjusted flowrate is reached: **[**].
 - The calculated flowrate and the gas burner capacity (in kW) are displayed.

Options:

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a protocol.
- > **[Options]** → **Edit Gas Flow**: Set the flowrate.
- > **[Options]** → **Edit Unit**: The unit for the flowrate can be changed (**m3 > l** or **l > m3**).

6.2.11. Oil flow

The function is only available if the chosen fuel is an oil.

Calling up the function:

- > **[** → **Measurements** → **[OK]** → **Oil Flow** → **[OK]**.

Performing the measurement:

1. Select the parameters **Oil Flow** (of the oil nozzle) and **Oil Pressure** (no effect on calculation): **[▲]**, **[▼]** → **[Edit]**.
2. Enter values. **[▲]**, **[▼]** and partly **[◀]**, **[▶]** → **[OK]**.
 - The calculated oil burner capacity (in kW) is displayed.

Options:

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a protocol.
- > **[Options]** → **Edit Unit**: The unit for the oil flow can be changed (**kg/h > gal/h** or **gal/h > kg/h**).

6.2.12. CO ambient

- ✓ An ambient CO probe (recommended) or a flue gas probe must be connected.



Cigarette smoke influences the measurement by more than 50 ppm. The breath of a smoker influences the measurement by about 5 ppm.


When using an ambient CO probe, note that:

The direction of flow of the gas has an effect on the accuracy of measurement. Frontal flow onto the probe leads to higher meas. views. The best measurement results are achieved when the probe is moved gently backwards and forwards.



When using the ambient CO probe and the flue gas probe, note that:

The probe must be in the open air (CO-free) during the zeroing phase!

Calling up the function:

- > **[** → **Measurements** → **[OK]** → **CO Ambient** → **[OK]**.

Performing the measurement:

1. Start measurement: **[**].
 - The measurement starts and the meas. view is displayed graphically (trend display).
 - An audible alarm signal is triggered when the alarm limit is reached.
2. Quit measurement: **[**].
3. Confirm the message: **[OK]**.

Options:

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a protocol.
- > **[Options]** → **A-Thresh.**: The alarm thresholds menu is opened.

6.2.13. CO2 ambient

✓ An ambient CO2 probe (0632 1240) must be connected.



In order to obtain correct meas. views, it is imperative to enter the prevailing abs. pressure. This can be entered directly (**Pressure Absolute**), or it is automatically calculated when entering **Altitude** and barometric pressure (**Pressure Barom.**).

Calling up the function:

> [☰] → **Measurements** → [OK] → **CO2amb** → [OK].

Performing the measurement:

1. Select parameter → [Edit].
 2. Enter data. [▲], [▼] and partly [◀], [▶] → [OK].
 3. Start measurement: [▶].
 4. Quit measurement: [■].
- The CO2amb is displayed.


Options:

- > [Options] → **Clipboard**: Data are saved to the clipboard:
- > [Options] → **Save**: The meas. views are saved in a protocol.
- > [Options] → **Show Graphic**: The meas. views are displayed in form of a line graph.
- > [Options] → **Alarm Limit**: The alarm threshold menu is opened.
- > [Options] → **Edit**. Data for adjustable parameters can be edited.
- > [Options] → **Measurement View**: (This function is not available during a measurement) The measurement view menu is opened.

6.2.14. Automatic stokers

With the help of the readout adapter for automatic stokers (0554 1206) status data and error messages can be read out of compatible automatic stokers, see also documentation on readout adapter. The range of data which can be read out depends on the type of the automatic stoker.

Calling up the function:















1. Connect the readout adapter to the instrument (PS2 interface) and to the automatic stoker (use adapter ring if necessary).
2.  → **Measurements** → **[OK]** → **Automatic Stoker** → **[OK]**.
 - The data are read from the automatic stoker. Depending on the automatic stoker, the data are updated at the latest every 30 s.



The values are saved in a measuring protocol or transferred to a pocket PC / PC, together with the meas. views of a flue gas measurement.

Reading out current status data:

The current data are displayed after a connection has been set up to the automatic stoker. The following data are displayed with the help of symbols:

Component	Status ON	Status OFF
Air controller		
Motor		
Valve 1		
Valve 2		
Flame		
Ignition		
Oil prewarmer		

Options

- > **[Options]** → **Clipboard**: Data are saved to the clipboard:
- > **[Options]** → **Save**: The meas. views are saved in a protocol.
- > **[Options]** → **Adapter Information**: Type and version of readout adapter are displayed.
- > **[Options]** → **Identification**: Information about manufacturer and type of automatic stoker
- > **[Options]** → **Statistics**: Display of failure statistics.



Automatic stokers are equipped with a circular buffer memory: Error messages are overwritten when the error log is full. The fault that has occurred last is at position 1 in the error list.

- > **[Options]** → **Fault**: Display of faults.

6.2.15. Gas pipe tests

Calling up the function:

- > **[Menu]** → **Measurements** → **[OK]** → **Gas Pipe Tests** → **[OK]**.

6.2.15.1. Leakage rate test



Leakproof test on gas pipes acc. to DVGW-TRGI 2008 worksheet G600

The leakproof test (using air or inert gas, e.g. CO₂ or N₂) is used for acceptance testing of newly routed or remedied pipes. The test is performed at the pipe, including the fittings, without gas installations and corresponding control and safety equipment. For this test the line must be pressurized with 150 mbar, whereby this pressure must remain constant for 10 minutes.

- > Insert the connector plug of the pressure test kit (0554 1213) onto the flue gas socket and lock by slightly turning it clockwise (bayonet lock).

Performing the measurement:

- ✓ The pressure socket of the instrument must be free (i.e. unpressurized, not closed).
- 1. **Leakage Rate Test** → **[OK]**.
- Pressure zeroing.
- 2. Select parameter: **[▲]**, **[▼]** → **[Edit]**.

3. Set parameters or enter data: [▲], [▼] and partly [◀], [▶] → [OK].
4. Pressurize the system.
5. Start measurement: [▶].
 - The stability time will run. After this the measurement phase starts automatically.
 - > End stability time and measurement early: [Next].
 - The readings are displayed when measurement has been completed.

6.2.15.2. Main test



- Follow DVGW-TRGI 2008, worksheet G624.
- **Pressure Absolute** (parameter of measurement place) must strictly be entered to obtain correct meas. views. If this is unknown it is recommended to use the value 966hPa (corresponds with 1013 hPa barometric, altitude 400m) To enter the values:
 - > [📄] → **Measurements** → [OK] → **Gas Pipe Tests** → [OK] → [Main Test] → [Fold./Meas.] > [Options] → **Edit Measurement Site:**

- > Insert the connector plug of the pressure test kit (0554 1213) onto the flue gas socket and lock by slightly turning it clockwise (bayonet lock).

Performing the measurement:

- ✓ The pressure socket of the instrument must be free (i.e. unpressurized, not closed).
- 1. **Main Test** → [OK].
- 2. Select parameter: [▲], [▼] → [Edit].
- 3. Set parameters or enter data: [▲], [▼] and partly [◀], [▶] → [OK].



Three circular diameters and three pipe lengths can be entered, which are then used to calculate three partial volumes. The pipe volume is calculated by adding these three partial volumes.

4. [measurement].
 - Pressure zeroing.
5. Pressurize the system.

6. Start measurement: [▶].
 - The stability time will run. After this the measuring phase starts automatically.
 - > End stability time and measurement early: [Next].
 - The readings and **Result Let By Test** are displayed when measurement has been completed.
7. [Edit] → Select test result: [▲], [▼] → [OK].

6.2.15.3. Pretest

- > Insert the connector plug of the pressure test kit (0554 1213) onto the flue gas socket and lock by slightly turning it clockwise (bayonet lock).

Performing the measurement:

- ✓ The pressure socket of the instrument must be free (i.e. unpressurized, not closed).
1. **Pretest** → [OK].
 - Pressure zeroing.
 2. Select parameter: [▲], [▼] → [Edit].
 3. Set parameters or enter data: [▲], [▼] and partly [◀], [▶] → [OK].
 4. Pressurize the system.
 5. Start measurement: [▶].
 - The stability time will run. After this the measuring phase starts automatically.
 - > End stability time and measurement early: [Next].
 - The readings and **Result Pretest** are displayed when measurement has been completed.
 6. [Edit] → Select test result: [▲], [▼] → [OK].

6.2.15.4. Leak detection

In gas leak detection no measurement is made, but a gas detection is performed.

✓ A gas leak probe (0632 3330) must be connected.



You must also refer to the documentation that comes with the gas leak probe.

Calling up the function:

> **Leak Detection** → **[OK]**.

Performing the detection:

> Set the gas type to be detected and perform gas leak testing by following the instructions described in the documentation of the gas leak probe.

1. Start detection: **[▶]**.

- The gas concentration is displayed, if it exceeds the alarm limit an alarm signal will sound.

Options:

> **[Options]** → **Show Graphic**: The meas. views are displayed in form of a line graph.

> **[Options]** → **Alarm Limit**: (This function is not available during a measurement) Adjust alarm thresholds.

> **[Options]** → **Alarm Signal**: (This function is not available during a measurement) Disable/enable alarm signal.

> **[Options]** → **Zeroing Probe**: Perform zeroing.

2. End detection: **[■]**.

6.3. Transferring data

6.3.1. Protocol printer

To be able to transmit data via infrared or Bluetooth interface to a Testo protocol printer, the printer to be used must have been enabled, see Printer, page 36.

Printing out data takes place via **[Print]** oder **[🖨️]**. The function is only available if a printout is possible.

6.3.2. PC / Pocket PC

Data transfer to a PC can take place via USB, IrDA or Bluetooth®.

Data transfer to a Pocket PC can take place via IrDA or Bluetooth®.

You must also refer to the documentation that comes with the software.

7 Maintaining the product


7.1. Cleaning the measuring instrument

- > If the housing of the measuring instrument is dirty, clean it with a damp cloth. Do not use any aggressive cleaning agents or solvents! Mild household cleaning agents and soap suds may be used.

7.2. Replacing sensors

i A slot bridge (0192 1552) must be inserted in slots which are not equipped with a sensor. Used sensors must be disposed of as hazardous waste!

- ✓ The instrument must be switched off.
- 1. Place the measuring instrument on its front.
- 2. Remove the service cover: Take hold of it at the markings (arrows) using the index finger and thumb, press slightly, fold up and remove.
- 3. Pull hose connections from the faulty sensor / bridge.
- 4. Remove the faulty sensor / bridge from the slot.
- > For NO-sensor: Remove the auxiliary circuit board.

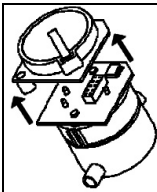

i Do not remove the auxiliary circuit board for the NO-sensor until immediately before installation. Do not leave the sensor without auxiliary circuit board for longer than 15 min.

- 5. Install new sensor / new bridge in the slot.
- 6. Plug the hose connections on sensor / bridge.
- 7. Attach the service cover and engage it in place.

i After replacing an O₂ sensor, wait for an equalization period of 60 min to elapse before using the instrument again.

When retrofitting a sensor the associated measurement parameter and unit must be enabled, see Measurement view, page 33.


7.3. Recalibrating / adjusting sensors

See Sensor settings, page 39.

7.4. Replacing additional filter

The additional filter provides added protection should problems occur with the particle filter in the flue gas probe. The additional filter is very rarely contaminated if the measuring instrument is used normally.

- > Check the additional filter (visually) periodically for contamination and replace it if necessary.

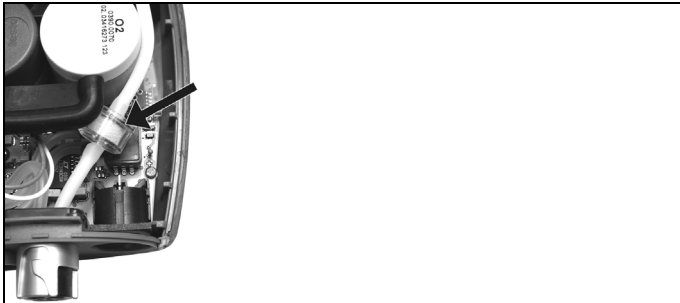

1. Place the measuring instrument on its front.
2. Remove the service cover: Take hold of it at the markings (arrows) using the index finger and thumb, press slightly, fold up and remove.
3. Loosen the additional filter from the hose connection.
4. Plug the new filter (0133 0010) into the hose connection.
5. Attach the service cover and engage it in place.

7.5. Cleaning the modular flue gas probe


- ✓ Disconnect the flue gas probe from the measuring instrument prior to cleaning.
- 1. Release the probe catch by pressing the key on the probe handle and remove the probe module.



- 2. Blow compressed air through the flue gas ducts in probe module and probe handle (see illustration). Do not use a brush!
- 3. Fit a new probe module on the handle and engage in place.

7.6. Replacing the probe module


- ✓ Disconnect the flue gas probe from the measuring instrument prior to cleaning.

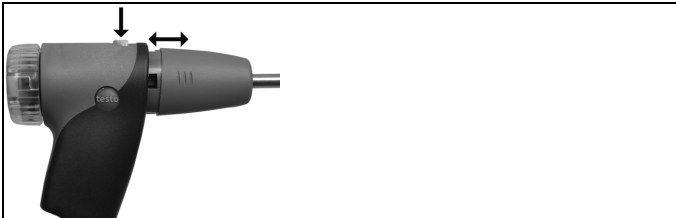

- 1. Press the key on the top of the probe handle and remove the probe module.
- 2. Plug in the new probe module and engage it in place.

7.7. Changing the thermocouple

1. Release the probe catch by pressing the key on the probe handle and remove the probe module.

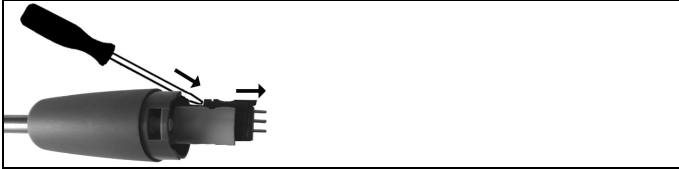

2. Remove the thermocouple plug-in head from the socket using a screwdriver and pull the thermocouple out of the probe shaft.
3. Keep inserting the new thermocouple into the probe shaft until the connection head clicks into place.
4. Fit a new probe module on the handle and engage in place.

7.8. Condensate container

The fill level of the condensate trap can be read from the markings on the condensate trap. A warning message (⚠, red flashing light) is displayed if the fill level in the condensate trap reaches 90 %. The fill level of the condensate trap can be read from the markings.

Draining the condensate trap



The condensate consists of a weak mix of acids. Avoid skin contact. Make sure that the condensate does not run over the housing.




CAUTION


Condensate entering the gas path.

Damage to sensors and flue gas pump!

- > Do not empty the condensate trap while the flue gas pump is in operation.

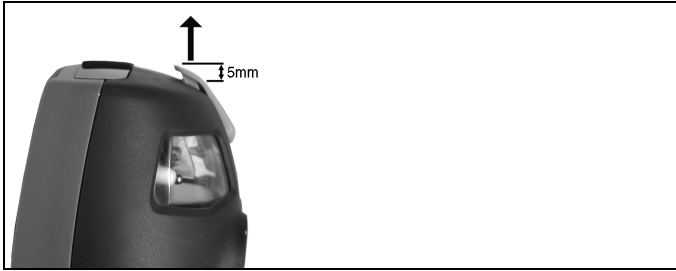

1. Unlock the condensate trap and pull it vertically off the meas. box.
2. Open the condensate outlet on the condensate trap: Pull out approx. 5 mm against the stop.

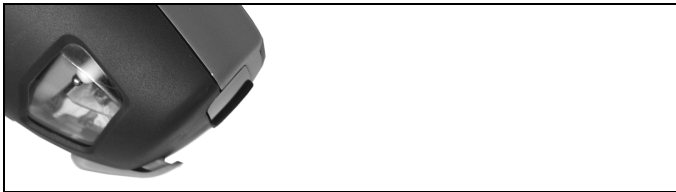

3. Let the condensate run out into a sink.
4. Wipe off any drops still on the condensate outlet with a cloth and close the condensate outlet.

i The condensate outlet must be completely closed (marking), otherwise measuring errors could be caused by infiltrated air.

7.9. Checking / replacing the particle filter

Checking the particle filter:

Check the particle filter of the modular flue gas probe periodically for contamination: check visually by looking through the window of the filter chamber.

Replace the filter if there are signs of contamination.

Replacing the particle filter:

i The filter chamber may contain condensate.



1. Open the filter chamber: Turn gently anti-clockwise.
2. Remove the filter plate and replace it with a new one (0554 3385).
3. Attach the filter chamber and lock it Turn gently clockwise.

8 Tips and assistance

8.1. Questions and answers

Question	Possible causes / solution
Rech. batt. low	> Switch to mains operation.
Measuring instrument switches automatically off or cannot be switch on	Batteries / rech. batts empty. > Charge rech. batts or switch to mains operation.
Displayed rech. batt capacity seems to be faulty	Rech. batt. was repeatedly not fully discharged/charged. > Discharge rech. batt. (until measuring instrument switches off automatically) and then charge fully.
Error message: Pump flow too high	Gas outlet blocked > Make sure that the gas outlet is clear.
Error message: Sensor protection active	The shutdown limit of the CO sensor was exceeded. > Remove the probe from the stack.
Error message: Printing not possible	<ul style="list-style-type: none"> • With printer 0554 0543: Bluetooth interface not enabled. • Wrong printer enabled. • Printer switched off. • Printer outside wireless transmission range. > Enable Bluetooth interface, see Bluetooth [®] , page 37. > Enable printer used, see Printer, page 36. <ul style="list-style-type: none"> • Switch on printer. > Move printer within wireless transmission range.

If we could not answer your question, please contact your dealer or Testo Customer Service. Contact data see back of this document or website www.testo.com/service-contact.

8.2. Accessories and spare parts

Printer

Description	Article no.
Infrared high-speed printer	0554 0549
Bluetooth® printer, incl. rech. batt. and charging adapter	0554 0553
Spare thermal paper for printer (6 rolls)	0554 0568

Modular flue gas probes

Description	Article no.
Modular flue gas probe 180 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 8 mm	0600 9760
Modular flue gas probe 300 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 8 mm	0600 9761
Modular flue gas probe 180 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 6 mm	0600 9762
Modular flue gas probe 300 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 6 mm	0600 9763
Flexible flue gas probe, length 330 mm, Tmax. 180 °C, short-term 200 °C, bending radius max. 90° for measurements at difficult to access locations	0600 9764

Probe modules / accessories for modular flue gas probes

Description	Article no.
Probe shaft module 180 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 8mm	0554 9760
Probe shaft module 300 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 8mm	0554 9761
Probe shaft module 180 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 6mm	0554 9762
Probe shaft module 300 mm, 500 °C, thermocouple 0.5 mm, probe shaft diameter: 6 mm	0554 9763
Probe shaft module 300 mm, 1000 °C, thermocouple 1.0 mm, probe shaft diameter: 6 mm	0554 8764

Description	Article no.
Probe shaft module 700 mm, 1,000 °C, thermocouple 1.0 mm, probe shaft diameter: 6 mm	0554 8765
Spare thermocouple for module 0554 9760, 0554 9762	0430 9760
Spare thermocouple for module 0554 9761, 0554 9763	0430 9761
Spare thermocouple for module 0554 8764	0430 8764
Spare thermocouple for module 0554 8765	0430 8765
Cone, 8mm, steel	0554 3330
Cone, 6mm, steel	0554 3329
Multi-hole probe shaft, length 300 mm, Ø 8 mm, for CO averaging	0554 5762
Multi-hole probe shaft, length 180 mm, Ø 8 mm, for CO averaging	0554 5763
Flexible probe shaft module	0554 9764
Hose extension 2.8 m, extension line probe - instrument	0554 1202
Particle filter, 10 pcs.	0554 3385

Temperature sensor

Description	Article no.
Ambient air temperature (AT) probe, 300 mm	0600 9791
Ambient air temperature (AT) probe, 190 mm	0600 9787
Ambient air temperature (AT) probe, 60 mm	0600 9797
Pipe wrap probes	0600 4593
Surface probe (angled)	0604 0994
Fast reaction surface sensor	0604 0194
Miniature ambient air sensor	0600 3692

Other probes / sensors

Description	Article no.
O2 annular gap probe	0632 1260
Gas leak probe	0632 3330

Description	Article no.
Ambient CO probe	0632 3331
CO2 ambient probe (without connecting cable)	0632 1240
Connecting cable for CO2 ambient probe, 1.5 m	0430 0143
Gas pressure set: Draft path adapter, silicone hose 4 mm / 6 mm, reducing cones	0554 1203
Differential temperature set, 2 pipe wrap probes, adapter	0554 1204
Smoke tester inc. oil, soot plates, for measuring soot in flue gas	0554 0307

Retrofit sensors

Description	Article no.
NO retrofit	0554 2151
COlow retrofit	0554 2103

Spare sensors

Description	Article no.
O2 sensor	0393 0002
O2 sensor	0393 0051
O2 sensor H2 compensated	0393 0101
COlow sensor	0393 0103
NO sensor	0393 0151

Cases

Basic system case with double floor for instrument, probes and other accessories	0516 3331
Basic system case for instrument, probes and accessories	0516 3330
System case with tool pouch without contents, click-fastened to basic system case	0516 0329
Universal system case without compartments, click-fastened to basic system case	0516 0331
Instrument case (leather) with compartments for instruments and accessories	0516 0303

Other accessories

Description	Article no.
Mains unit	0554 1096
Charger with spare rechargeable battery	0554 1103
Spare rechargeable battery	0515 0107
Readout adapter for automatic furnaces	0554 1206
Connecting cable instrument / PC	0449 0047
Easyheat (PC configuration software)	0554 3332
Full version of Easyheat and Easyheat mobile (PC configuration software and software for Windows handheld PCs)	0554 1210
Upgrade Easyheat mobile (software for Windows handheld PCs)	0554 1211
Additional filter	0133 0010
Draft set	0554 3150
Fine pressure probe	0638 0330
Set of capillary hoses	0554 1215
Adhesive kits (x50) for printing out, paper barcode labels etc.	0554 0116
Instrument cleaner (100 ml)	0554 1207
Pressure test set for gas line testing	0554 1213
Straight Pitot tube	0635 2050
ISO Calibration Certificate Flue Gas	0520 0003

For a complete list of all accessories and spare parts, please refer to the product catalogs and brochures or look up our website www.testo.com

8.3. Updating the instrument software

Under www.testo.com/download-center you can download the current instrument software (Firmware) for testo 330 (registration required).

- > Unplug the mains unit and switch off the testo 330.
- 1. Hold [▲] depressed.
- 2. Plug in the mains unit, keep [▲] depressed.
 - The display shows **Firmware update** along the bottom edge.
- 3. Release [▲].
- 4. Insert the connecting cable (0449 0047) into the USB-port on the instrument, then connect it to the PC.
 - Your PC recognizes the testo 330 as a removable medium.
- 5. Copy the new file (ap330rel.bin) to the detected removable medium.
 - In the display the status bar progresses from left to right. This process may take a few minutes.
- 6. Disconnect the connecting cable from the testo 330.
 - After updating of the instrument software (Firmware) has been completed the system will automatically reboot and is ready for use.

